

Soundbar

Model: HD-019I-K

User Manual

Matters Need Attention

1. Don't put this product under high temperature wet environment and it will be worse when it is in the rain or crash strongly.
2. To reduce the risk of electronic shock or fire, do not remove the cabinet cover simply contact a service professional.
3. In the rear occurrence of malfunction, do not attempt to repair the unit on your own. Contact a certified service professional for a proper diagnosis and repair.

4.If fragments or liquids fall into device box, please cut off the power right away. And it can be used only after professional staff checks it.

5.Don't install the unit in or near a place where it may come in contact with rain, moisture or other liquids.

Technical Specifications and Features

Power output: 150W

Speaker drivers: 4 x 2" + 2 x 3" units + 1 x 6.5" woofer

 
Bluetooth version: 5.0+EDR

Bluetooth range: Up to 10m

Connections: HDMI(ARC), OPTICAL, COAXIAL , USB , AUX (3.5mm),AC IN

Power supply: AC 100-240V,50/60Hz

Connections

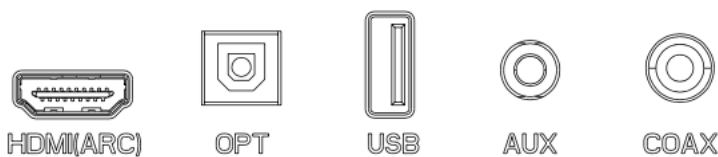

1.HDMI(ARC): Use to connect compatible devices using a HDMI cable (not provided).

2. OPTICAL IN: Use to connect compatible devices using an optical cable (not provided).

3. USB IN: Use to connect a flash drive for direct MP3/WAV playback (FAT32 format and 32GB max).

4. AUX IN: Use to connect compatible devices using the 3.5mm – 3.5mm stereo jack cable (provided).

5. COAXIAL IN: Use to connect compatible devices using a coaxial cable (not provided).

LED display

1. Red LED: Standby mode

2. bt: Bluetooth mode

3. USB: USB media mode

4. AUX: Auxiliary input mode

 
5. OPT:Optical mode

6. ARC:HDMI(ARC)mode

7. COA:Coaxial mode


Pair the soundbar to the subwoofer

In the first time of use, press and hold Paly/Pause button on the remote in BT pairing mode, the soundbar will connect to the wireless subwoofer automatically. After paired successfully, the indicator will change from red flashing to steady red lighting.

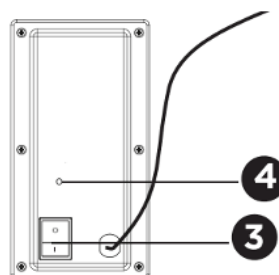


- 3** ON/OFF Switch for Subwoofer: turn on the switch of the subwoofer;
- 4** Pair LED indicator: shows "Red" led light when subwoofer and soundbar has successfully connected.

 
Remote Control

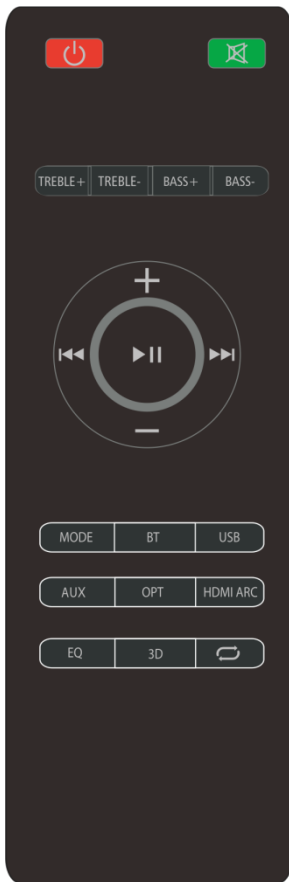


Button	Function	Button	Function
	Power on/off	MODE	Shifting between BT/USB/AUX /OPTICAL/COAXIAL/HDMI(ARC)
	Mute or recover the volume	BT	Shifting into BT Mode In BT mode, hold to enter pairing mode.
TREBLE+	Increase the Treble	USB	Shifting into USB Mode
TREBLE-	Decrease the Treble	AUX	Shifting into AUX Mode
VOL+	Volume turning up	HDMI ARC	Shifting into HDMI(ARC)Mode
VOL-	Volume turning down	OPT	Shifting into Optical in Mode
	Previous track	EQ	Shifting to different EQ
	Pause/Play		USB Repeat modes
	Next track	3D	3D Surround on/off
BASS +	Increase the Bass		
BASS-	Decrease the Bass		

 
Soundbar controls

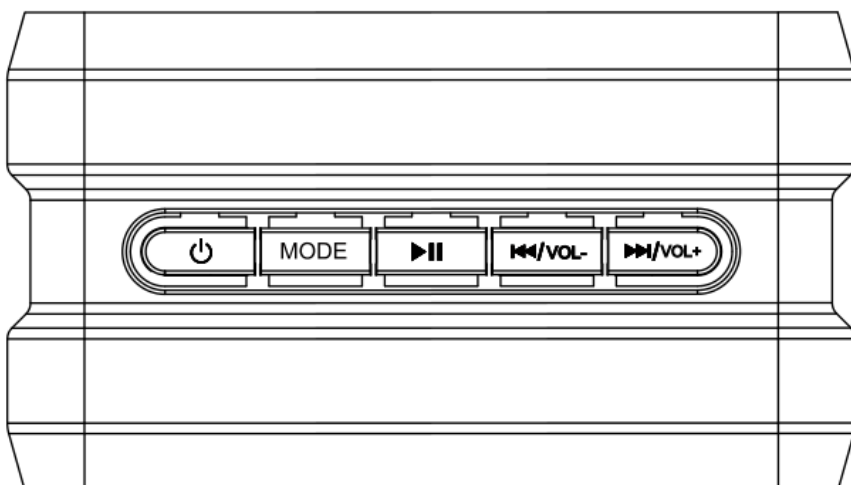


1>  :Short press to turn the unit on and off.

2> **MODE**: Short press to select your preferred input mode(BT/USB/AUX/OPTICAL/HDMI(ARC)/COAXIAL).

3>  : Short press to select the play or pause function.

4>  :Long press to decrease volume. Short press to skip to the previous track. (Bluetooth/USB mode only).

5>  :Long press to increase volume. Short press to skip to the next track.(Bluetooth/USB mode only).

Input Functions

- **Power on/off**: Press the Power on/off button on the remote control or soundbar control panel to turn the unit on and off.
- **HDMI(ARC)**: Connect an HDMI ARC compatible device to the HDMI(ARC) port on

the soundbar using a HDMI cable (not supplied). Select HDMI(ARC) mode either by pressing the HDMI(ARC) button on your remote control or repeatedly pressing the MODE button on the soundbar control panel until ARC is displayed on the LED display. Ensure HDMI ARC is selected as the TV's audio output, then adjust the volume of soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.

- **AUX in:** Connect a compatible device using the 3.5mm – 3.5mm stereo jack cable. Select AUX mode either by pressing the AUX button on your remote control or repeatedly pressing the MODE button on the soundbar control panel until AUX is displayed on the LED display. Ensure the connected device is producing an audio signal, then adjust the volume of soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.

- **Optical in:** Connect a compatible device to the OPTICAL input on the soundbar using a digital optical cable (not supplied). Select OPT mode either by pressing the OPT button on your remote control or repeatedly pressing the MODE button on the soundbar control panel until OPT is displayed on the LED display. Ensure Optical SPDIF is selected as the TV's audio output, then adjust the volume of the soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.

- **Bluetooth:** Press the BT button on the remote control or repeatedly pressing the MODE button on the soundbar control panel until bt is shown on the LED display. The LED display will flash to indicate that the soundbar is in Bluetooth pairing mode.

Ensure that the device you wish to connect is also in pairing mode and search for JBX-019 in its device list. When the two devices are paired, the LED display on the soundbar will stop flashing and remain constant. (The soundbar will now automatically re-pair with this device whenever it is within range and has Bluetooth turned on.)

• **Coaxial in:** Connect a compatible device to the COAXIAL port on the soundbar using a digital coaxial cable (not supplied). Select COAX mode either by pressing the MODE button on your remote control or soundbar control panel repeatedly until COA is displayed on the LED display. Ensure Coaxial is selected as the TV's audio output, then adjust the volume of the soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.

• **USB media mode:** The soundbar is compatible with USB flash drives of up to 32GB in size and can play MP3 and WAV audio files directly. Simply insert a compatible drive into the USB port on the back of the soundbar and the unit will automatically switch to USB mode and play the first compatible track. Switch to USB mode by pressing the USB button on the remote control or the MODE button on the soundbar (The unit can only be switched to USB mode when the USB driver is plugged in.

USB repeat mode (also accessed via the remote control) enables single track repeat (ONE), all track repeat (ALL)

The media player also has a memory function that will recall and continue from the last-played point when a USB flash drive that has previously been used with the soundbar is reinserted.

- **Equalizer modes:** The soundbar has 3 equalizer presets, tailored to complement various styles of music. Press the EQ button on the remote to choose between Music (EQ1), Movie (EQ2), News (EQ3).

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body:
Use only the supplied antenna.