
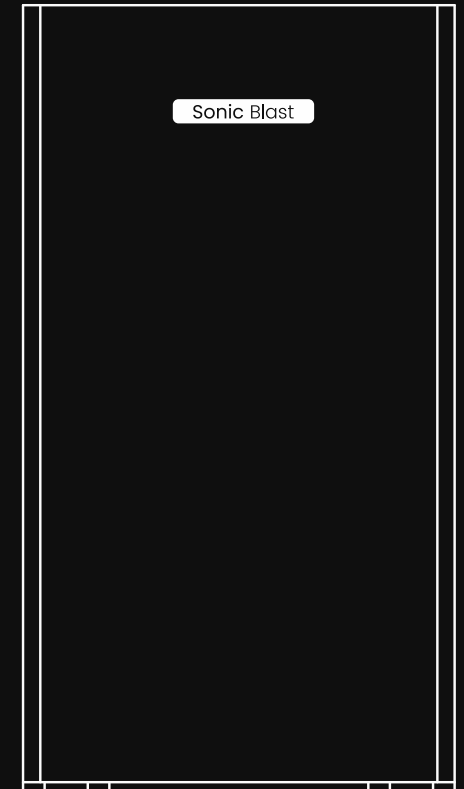


Hi!

Let's get started.

Sonic Blast

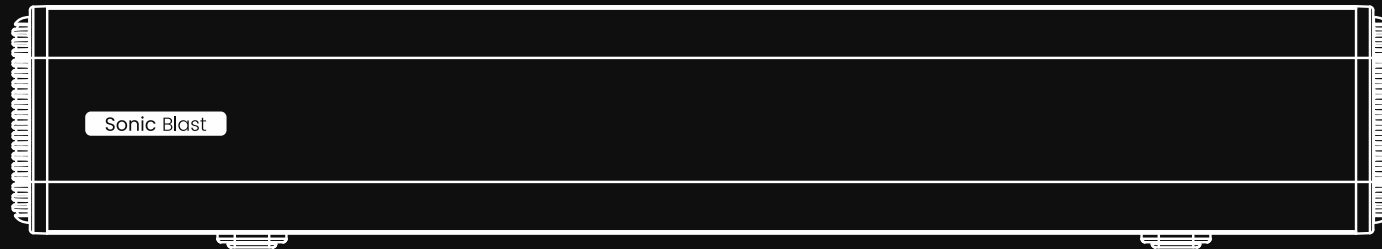

MODEL NO.:HD-099SAT2-P

- What's you get-----03**
- Product Structure-----04**
 - Sound Bar main unit-----4.1
 - Subwoofer-----4.2
 - Remote-----4.3
- Place your Sound Bar and Subwoofer-----05**
 - Place on the cabinet-----5.1
 - Mount the sound bar on the wall-----5.2
- How to use?-----06**
 - Connecting Electrical Power-----6.1
 - Soundbar connect to subwoofer-----6.2
- Connect to your TV-----07**
 - Optical-----7.1
 - Coaxial -----7.2
 - AUX-----7.3
- External speaker and PCM settings-----08**
- Pair with your BT device-----09**
- USB-----10**
- Specification-----11**
- FAQ-----12**

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body .

Additional Warnings

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

Battery shall not be exposed to excessive heat such as sunshine, fire or the light.

Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

Caution marking is located at the rear or bottom of the apparatus.

Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.

The marking information is located at the rear or bottom of apparatus.

 
Le marquage est situé sur le panneau arrière ou inférieur de l'unité.




This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

What's you get

Make sure you read all the safety information before you use this product.




Soundbar

 

Subwoofer




Remote control

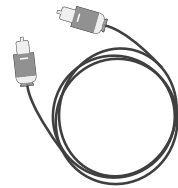


Digital Optical cable



 Stereo RCA to 3.5mm audio cable




Stereo 3.5mm to 3.5mm audio cable

 


Power Adapter



 Digital COAX cable



HDMI ARC cable

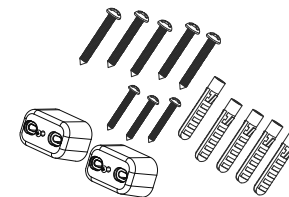



Mount screws




User's guide

04 Product Structure

4.1 Sound Bar main unit

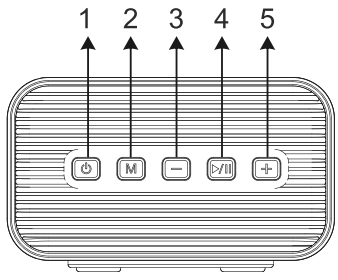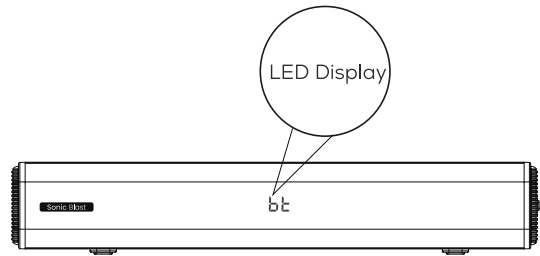


- ❶ : Power ON/OFF
- ❷ : INPUT MODE
- ❸ : Volume turning down / Previous track
- ❹ : Pause / Play
- ❺ : Volume turning up / Next track

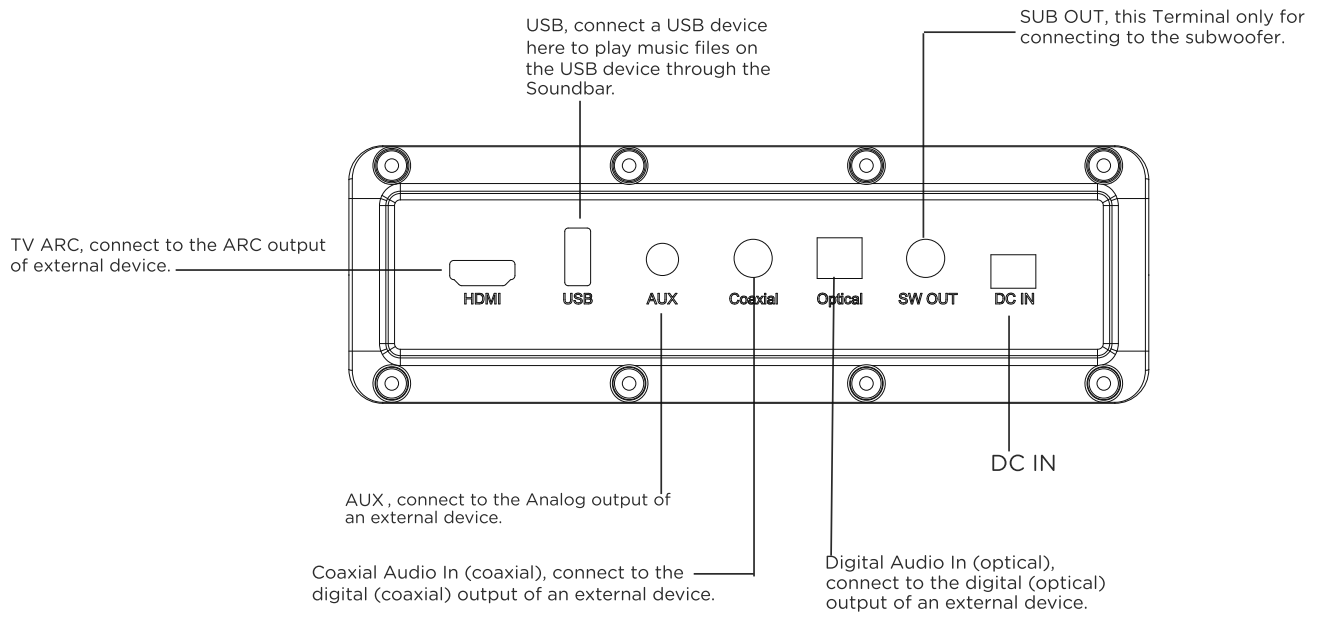


04 Product Structure

4.2 Subwoofer

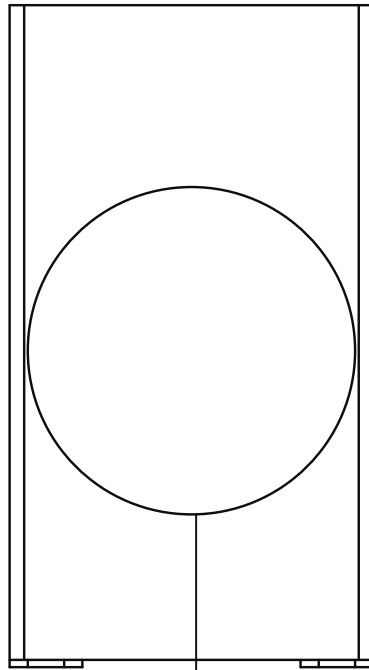

Speaker Driver

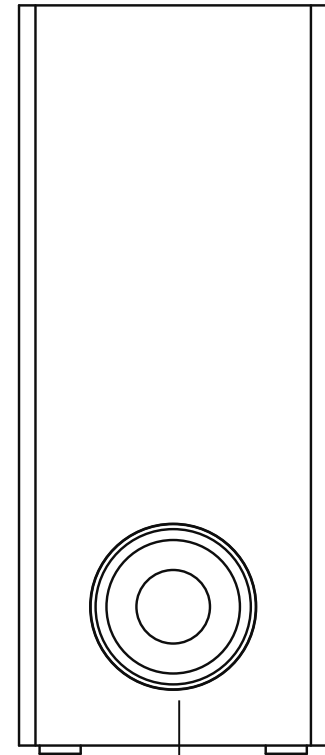


Air tube

04 Product Structure

4.3 Remote


Power the remote by inserting 2 pcs of AAA batteries (not supplied)

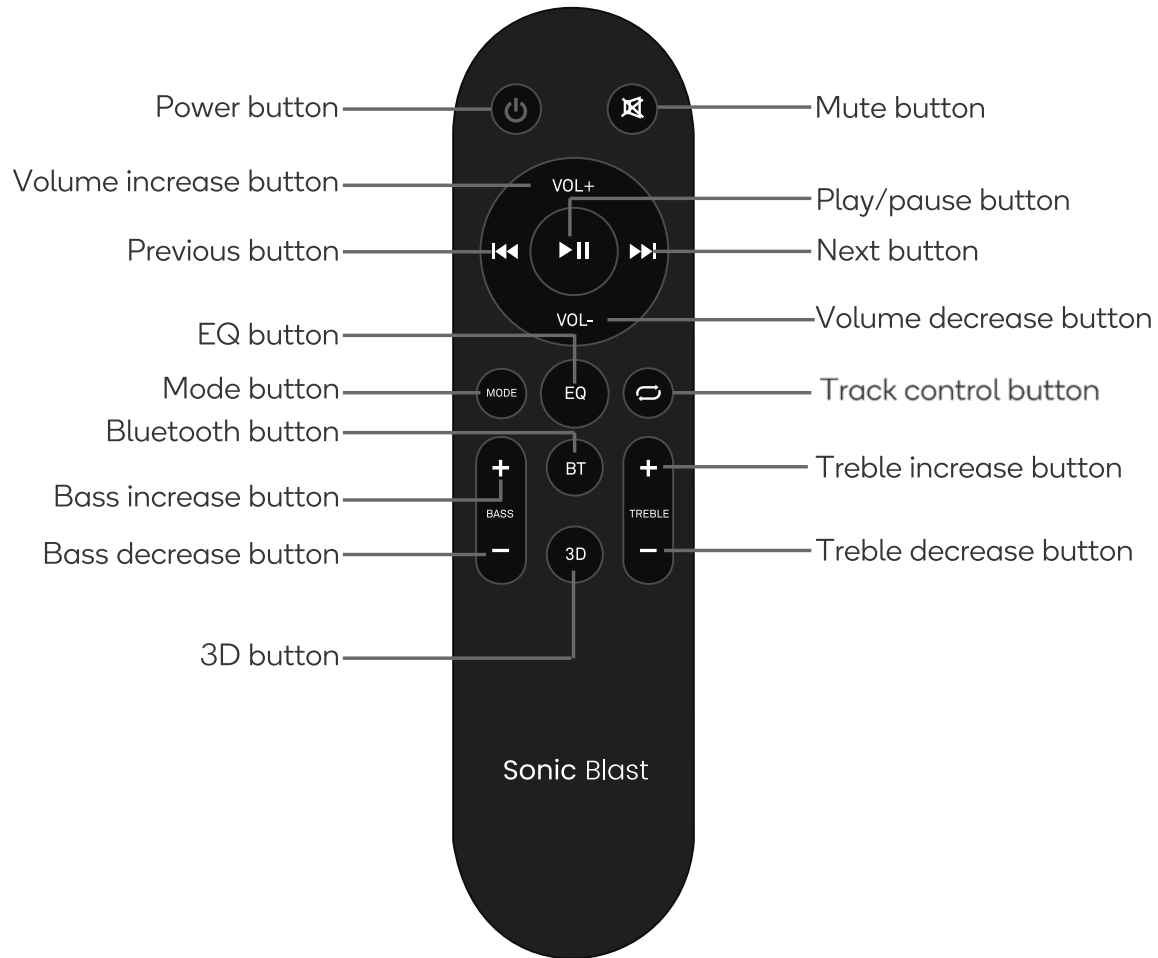

05 Place your Sound Bar and Subwoofer

5.1 Place on the cabinet


The ideal place to position the Sound Bar is centered underneath your TV.

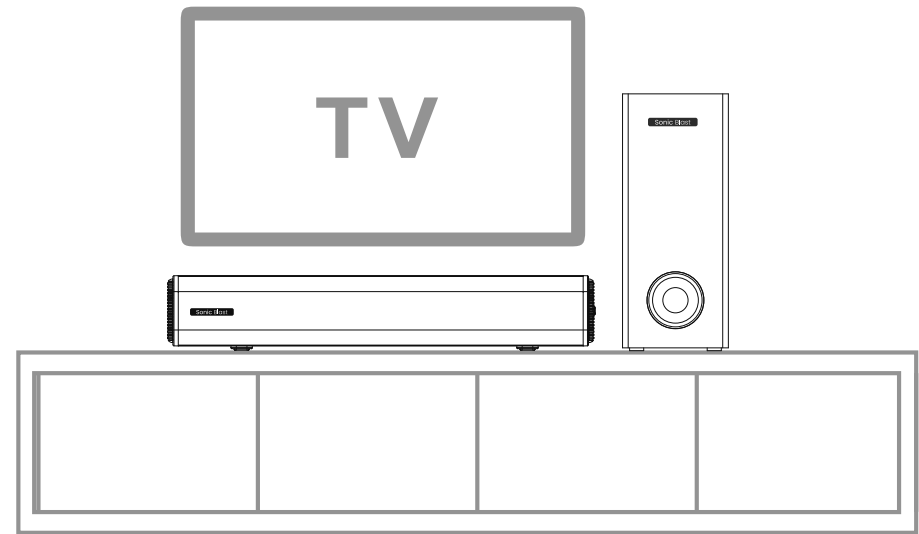

05 Place your Sound Bar and Subwoofer


5.2 Mount the sound bar on the wall

Tools & fixings required

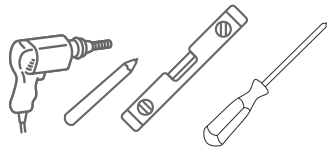


1/. Drill fitted with masonry drill bit 2/. Screwdriver 3/. Level Ruler
4/. Pencil

- Use the level ruler to mark two mounting holes with a pencil. Drill two screw holes at each marking on the wall. ❶
- Secure the supplied anchors and screws into the hole. Please make sure the screws are protruding 5mm in the wall.
*Anchors are only required when mounting onto a solid wall. ❷
- Hang the sound bar on the fastening screws. ❸
- Gently push the sound bar down to lock and secure it in place. ❹

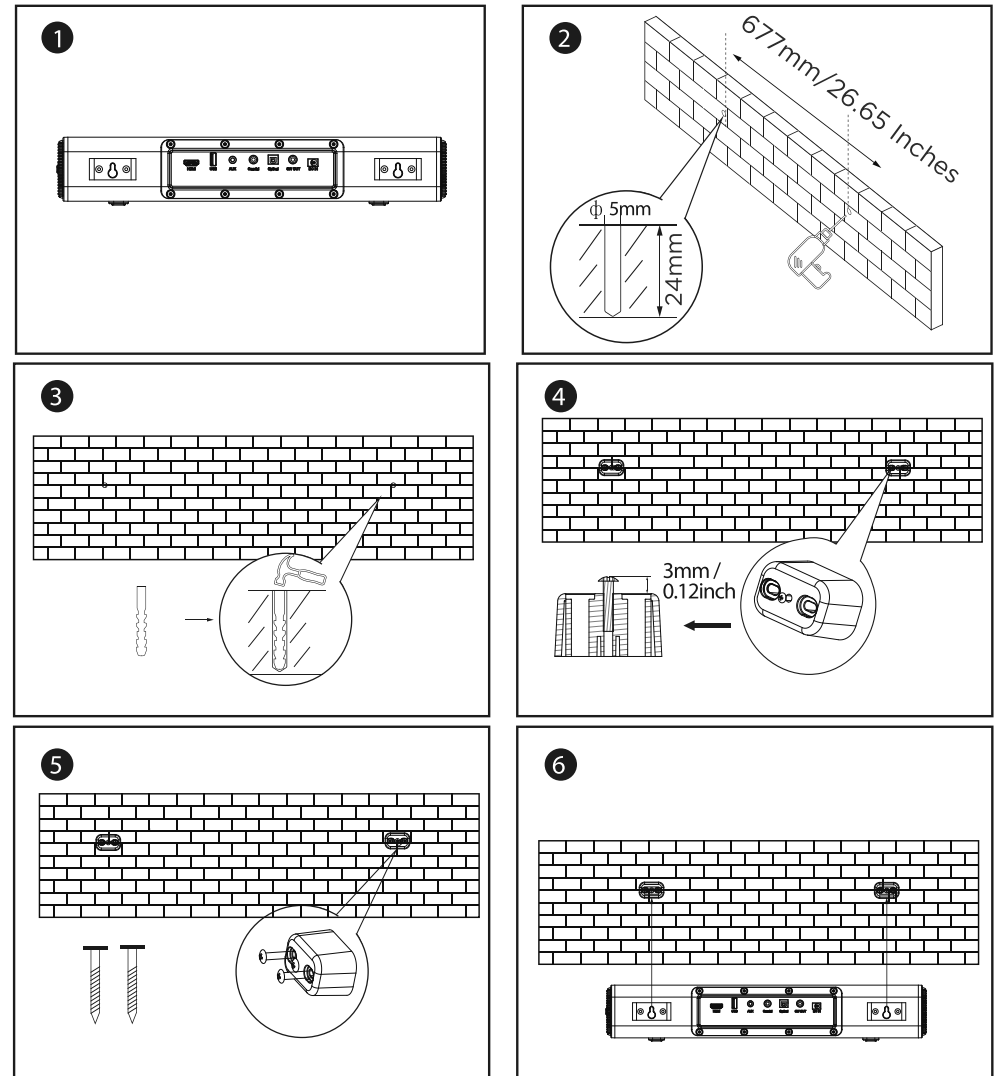


6.1 Connecting Electrical Power

1. Using the power adapter to connect the unit to electrical outlet in the figure
2. Press the power button to power on the Soundbar (LED screen will turn on)

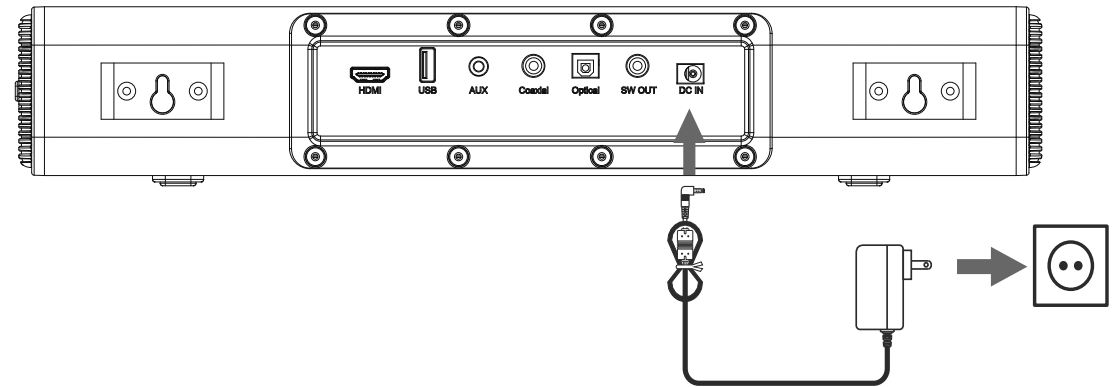

6.2 Soundbar connect to subwoofer

1. Insert the subwoofer plug into the SW port of the sound bar.

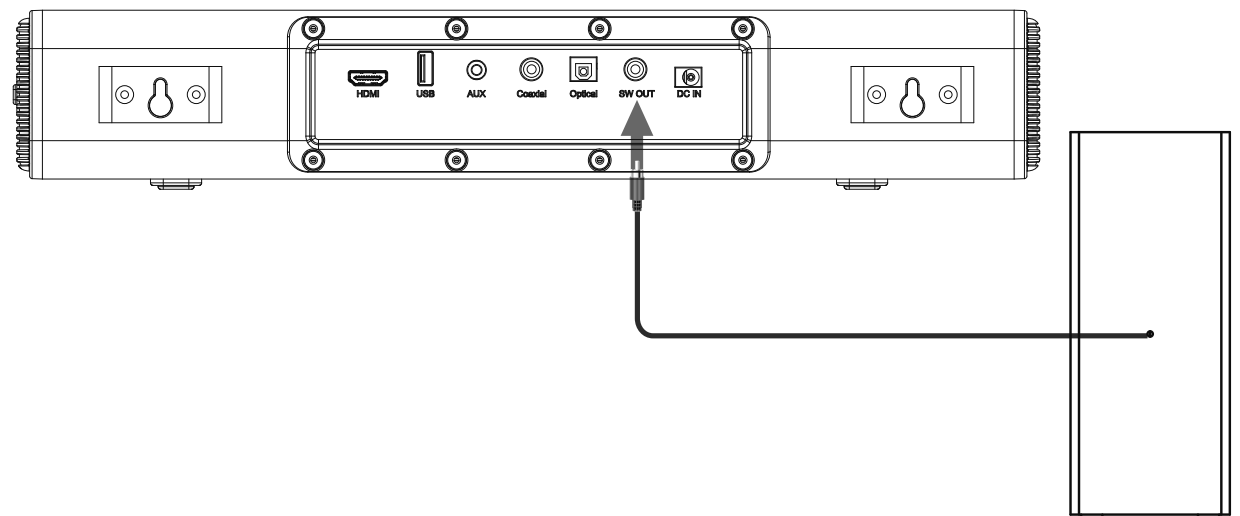

7.1 Optical



- Connect the Sound Bar with your TV through the supplied Optical cable.
- Select "OPT" on LED screen by pressing the "OPT" button on the remote.
- Play TV show to test the soundbar.

Note: If no sound or cracking noise, please change the TV audio output to external speaker and PCM. Saving the settings. (Refer to 08)

7.2 Coaxial

- Connect the Sound Bar with your TV through the Coaxial cable.
- Select "COA" on LED screen by pressing the "INPUT" button on the remote.
- Play TV show to test the soundbar.

Note: If no sound or cracking noise, please set your TV's audio output to external speaker and PCM. Saving the settings. (Refer to 08)

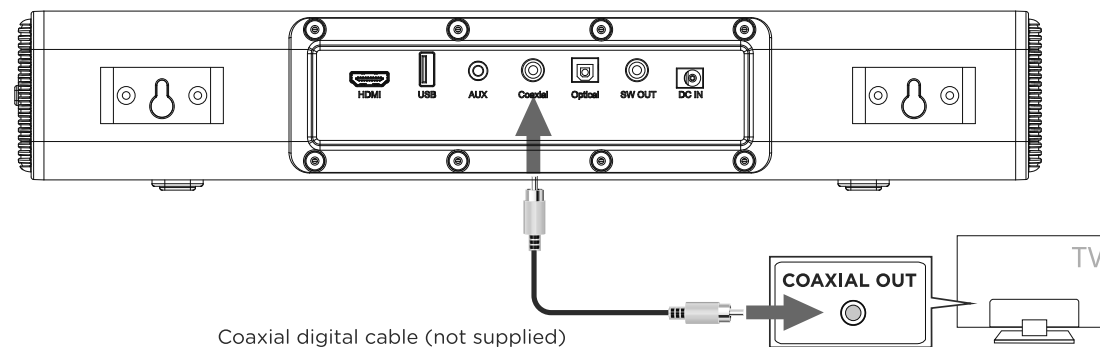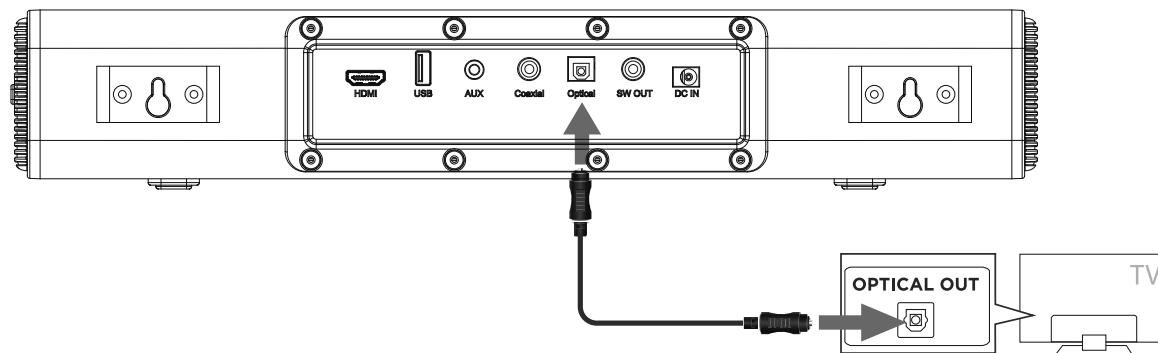

Connect to your TV

7.3 AUX



- Connect the Sound Bar with your TV through an AUX cable.
- Select "AUX" on LED screen by pressing the "INPUT" button on the remote.
- Play TV show to test the soundbar.

Note: 1.If no sound or cracking noise,please change the TV audio output to external speaker .Saving the settings.(Refer to 08)

2.You can use the 3.5mm to 3.5mm audio cable (not supplied) to connect or 3.5mm to RCA cable (supplied) to connect it.Choose only one connection from above it,it depends on your TV's audio output jack.

7.4 Connecting with a TV

- Connect the Sound Bar with your TV through an ARC cable.
- Select "ARC" on LED screen by pressing the "ARC" button on the remote.
- Play TV show to test the soundbar.

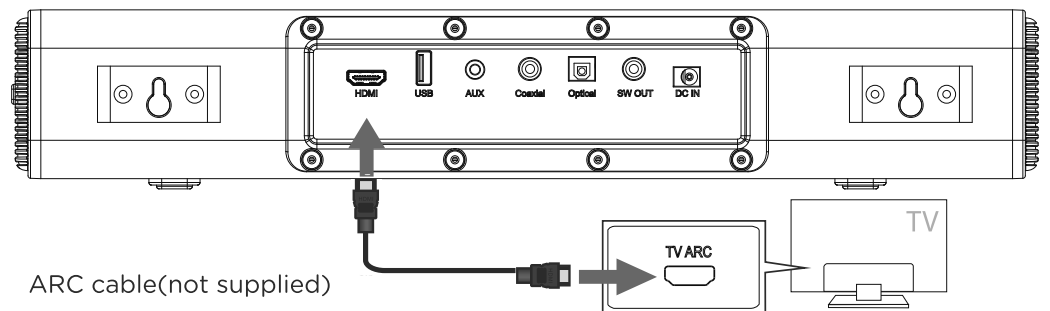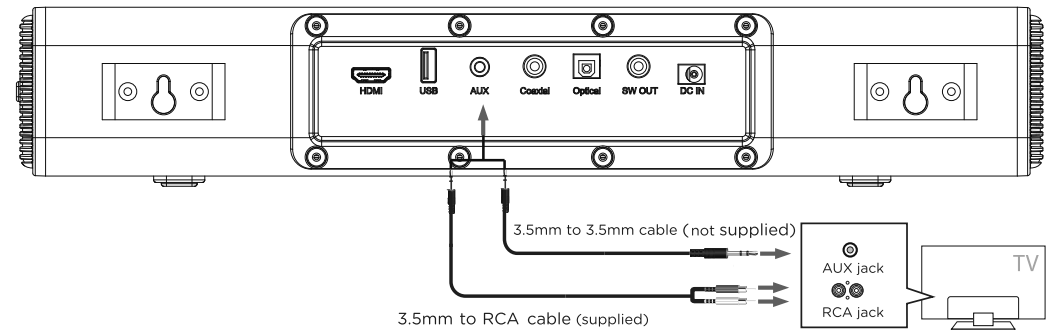

08 External speaker and PCM settings

Please note almost all the TV audio output is the analog signal and the internal speaker, but the optical cable and coaxial cable is the digital signal, so when you want to hook up the soundbar on your TV through optical or coaxial cable, you must change the TV audio output to digital output (PCM or SPDIF) and external speaker.

- 1: How to set PCM on your TV
 1. Enter your TV's settings menu.
 2. Select the Audio or sound settings option.
 3. Select the audio out or digital out setting.
 4. Change setting to PCM. (some TVs called SPDIF)
- 2: How to disable the TV internal speaker
 1. Enter your TV's settings menu.
 2. Select the Audio or sound settings option.
 3. Select the TV speaker.
 4. Select the External speaker. (or disable the TV speaker)
- 3: Please kindly make sure you have changed the TV audio output correctly, if TV still no sound, or output crack sound, or popping sound, please kindly share your TV brand, model number, and order ID with us through service mail: support@Sonic-Blast.com.cn, so we can guide you to fix the problem.
- 4: If you do not know how to set the TV audio to PCM, please kindly refer to your TV manual or call the TV manufacturer for help.


09

Pair with your BT device

You can stream music from your mobile device via Bluetooth.

- Select "BT" on LED screen by pressing the "BT" button on the remote.
- Turn on the BT device and select "SonicBlast-HD-099AT2" from the list, connect it.
- Play music to test it.

Note: Bluetooth wireless range reaches 30 feet in the open area.
If you want to pair with another device, please refer to the steps above.

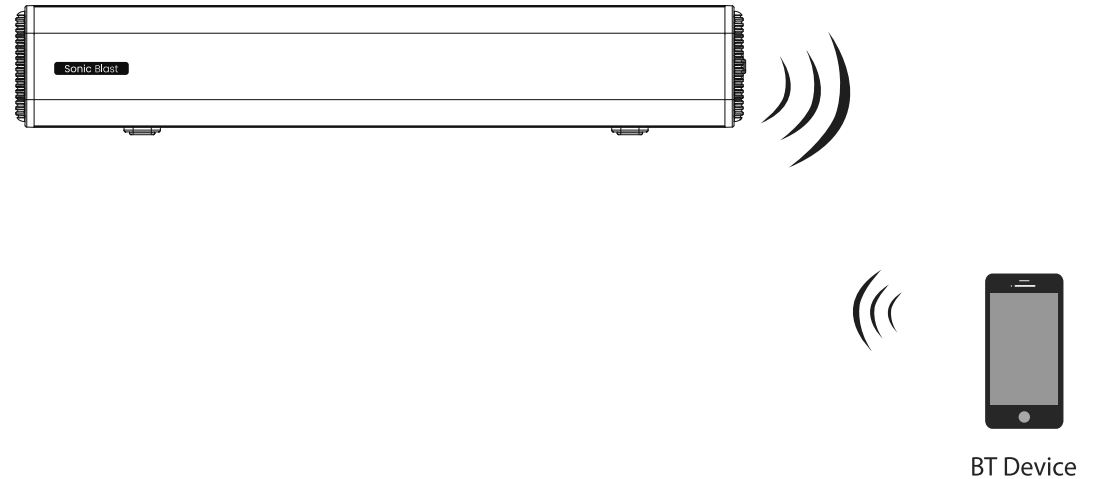


10

USB

1. Connect your USB device to the USB jack on the Soundbar.
2. Select “USB” on LED screen by pressing the “INPUT” button on the remote.
3. Play music files from the USB device through the Soundbar.

Note: Only for USB flash drive to play MP3 music and update firmware, can not compatible with other usb devices.

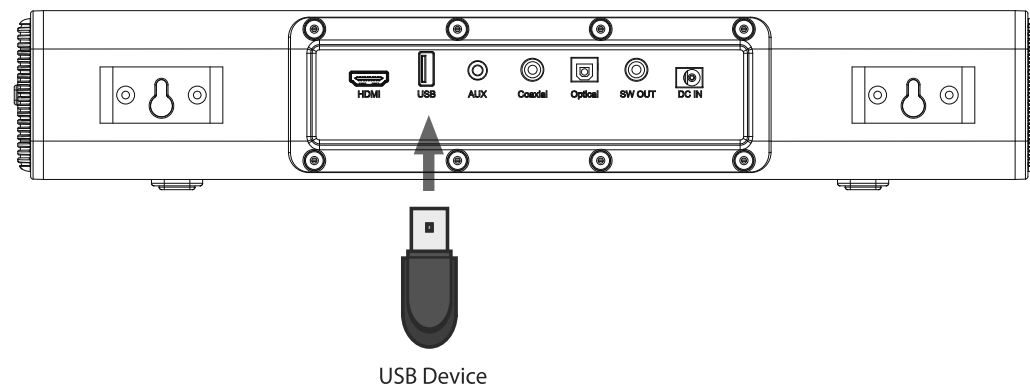

Modes:	Music, Movie, Game, and News.
DC IN:	21V/2A DC In
Input Volt:	100V-240V
LED Display:	Yes
Sound Bar:	TWO Full Rang Drivers +5.25" Subwoofer
Inputs:	One AUX Stereo Audio, One USB, BT (Wireless), One Optical, One Coaxial, One ARC
Sound Pressure Level (System):	110 dB
Frequency Response (System):	50 Hz to 20KHz
Compliances:	FCC
Place of Origin:	China
Soundbar Dimension:	15.7"x 4.6"x2.7"
Subwoofer Dimension:	5.9"x 7.9"x14.2"

