


## EL181/PS003 Party Speaker




### CONTROL PANEL

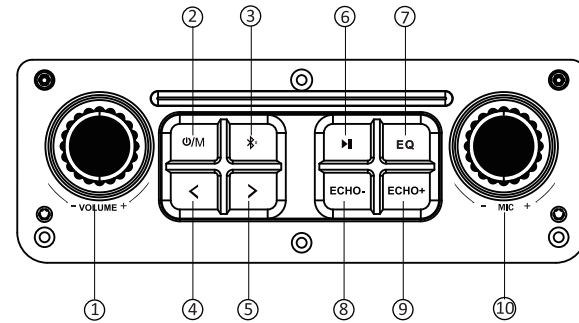

1. "Volume" dial (Volume level 0-30)
2. "P/M" button (Power On/Off / Mode)
3. "B" button (Disconnect Bluetooth)
4. "<" button (previous, hold to search for previous FM radio Station)
5. ">" button (next, hold to search for next FM radio Station)
6. "P" button (play / pause)
7. "EQ" button (play / pause)
8. "ECHO -" button
9. "ECHO +" button
10. "MIC" dial (Microphone volume)

### REAR INPUT PANEL

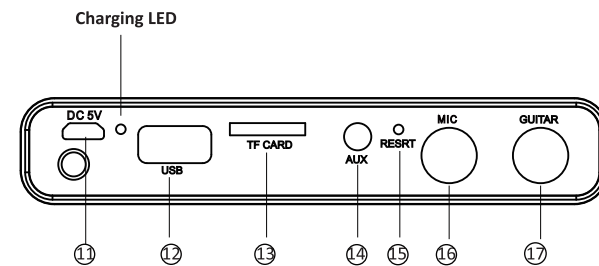

11. USB DC-IN
12. USB-IN playback
13. TF Card slot
14. AUX input
15. Reset
16. MIC-IN (Microphone in)
17. Guitar-IN

### GENERAL OPERATIONS

To	Do this	Display
Charge	Plug in USB cable @ USB DC-IN (11). Best to charge with 5V2A adapter (not included)	Red LED
On and Off	Press and hold "P/M" button (2) for 3 seconds	
Change function	Press "P/M" button (2) to change between: Bluetooth music playback; USB playback; Auxiliary; Use a 3.5mm cable (not included) FM radio;	"BLUE" "AUX" "FM radio frequency"
Play / Pause	"P" button (6)	
Change volume	Master volume: turn "VOLUME" dial (1) Microphone: turn "MIC" dial (10) Echo: press "ECHO -" (8) or "ECHO +" (9) buttons	
Light mode on/off	Press and hold down "EQ" button (7) for 3 seconds	
Equalizer	Press "EQ" button (7) to change between: EQ1 - Normal; EQ2 - Bass; EQ3-Rock	


### BLUETOOTH PLAYBACK

To	Do this	Display
Pair	Select Bluetooth mode by short pressing the "P/M" button (2) and select EL181. If this speaker doesn't automatically connect to a previously paired device, repeat the above steps.	"BLUE" flashes when searching; stop flashing when connected
Play music	Use music device's controls	
Change function	Press "P/M" button (2) to change between: Bluetooth music playback; USB playback; Auxiliary; FM radio;	"BLUE" "AUX" "FM radio frequency"

### FM RADIO

To	Do this
Scan and save preset station	Press and hold down "P" button (6). Stations are saved automatically
Change preset stations	Press "<" (4) or ">" (5) button
Tune	Press and hold "<" (4) or ">" (5) buttons to search for the next available station

**DO NOT PLUG THE RADIO INTO AN ELECTRICAL OUTLET IF YOU ARE UNSURE OF THE VOLTAGE.**

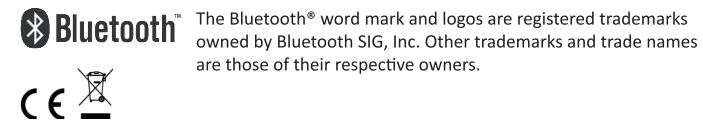

### FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.