 
 


Battery Replacement Instructions

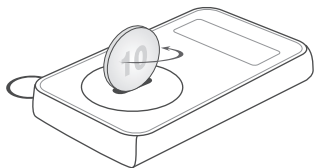

① Using a coin, turn the battery cover slightly counterclockwise.

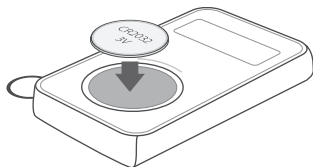

② Remove the used battery and replace with 1× CR2032 battery with the plus (+) symbol facing up.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The User Manual of Remote Controller

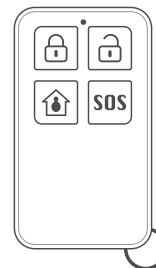

Features


The remote controller is an accessory of series smart alarm system. It helps you quickly arm/disarm/home arm/trigger SOS the system.

It's small and exquisite, convenient for carrying out on keychain or in pocket/bag.


Parameters

• Working Voltage	DC 3V
• Battery	1 × CR2032 button battery (3V)
• Working Current	≤40mA
• Standby Current	≤0.2μA
• Transmission Distance	Up to 150m without obstacle
• Transmission Frequency	433.92MHz
• Working Temperature	-10 C ~50 C
• Humidity	≤90%rh (non-condensing)
• Weight	16.4g (battery included)
• Dimension	58.0mm*33.1mm*11.0mm L*W*H(±0.1mm)

 Appearance

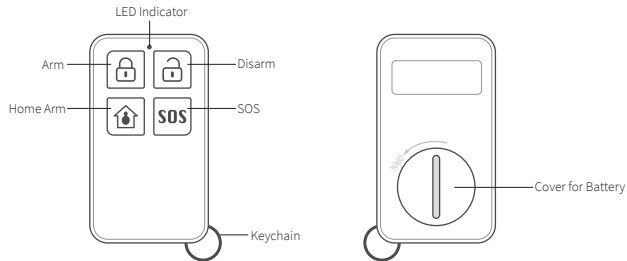

PCB Layout

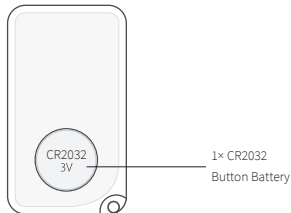 

Pairing with Main Panel

- ① Scanning the QR Code for Pairing.
- ② The pairing result would be confirmed on App.

Learn Mode


- ① Launch the App for turn on Learn Mode.
- ② Follow the guideline in App to trigger the accessory for the system to learn.
- ③ The pairing result would be confirmed in App.

Hint: How to trigger


- ① Press any button of the remote controller.

Operating Clarification


• Arm

Press , the LED indicator lights on, the system enters armed status.

• Home Arm

Press , the LED indicator lights on, the system enters home armed status.

• Disarm

Press , the LED indicator lights on, the system enters disarmed status.

• SOS

Press **SOS**, the LED indicator lights on, the system immediately enters emergent alarming status.