

Overview



- 1 Front Camera
- 2 Volume Keys
- 3 Power Key
- 4 Recent
- 5 Home
- 6 Back
- 7 Rear Camera
- 8 Flash
- 9 Fingerprint

SIM Card Installation

A SIM card contains your phone number and other necessary data. Your device has SIM1 slot that supports 4G(LTE).

To Install the SIM Card

1. Make sure the device is turned off and the front facing down. Hold the phone and use the notch at the bottom corner to open the cover. Use a metal object with a hard, thin edge such as your fingernail or a credit card to carefully pry along the notch to loosen, then lift the cover until it detaches completely.



2. Locate the SIM card slot and insert the proper SIM card into the proper slot for more information on SIM card installation check out the Included SIM Card & Micro SD Card Installation Guide.

3. To turn on/off a SIM card go to Settings > SIM management, then also go to card status to turn on/off SIM card. To check connection go to Settings > SIM management, click on the "SIM card connection" option and select a SIM card that has 4G capability.

Keys/Touch Points

Power Key: To power on/off it, press and hold power key for a few seconds. When it is ON, press the power key once to activate or deactivate the screen.

Home Key: Touch the key to return to the home screen in any screen. Touch and hold the key to view recently opening apps.

Options key: In home screen, touch the key to set wallpaper, manage apps, and to access system settings. Touch it to view menu options.

Back key: Touch to go back to the previous menu.


Charging battery

New batteries are shipped partially charged. Before using your device, install and charge the battery. Batteries perform best after several full charge/discharge cycles.

Charging Your battery

Please charge the battery using the following methods:

1. Charge the phone by connecting it to a computer via the USB cable.
2. Connect the USB cable to the phone and the AC adapter. Plug the AC adapter into an electrical outlet to start charging.

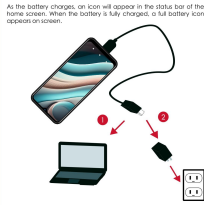

As the battery charges, an icon will appear in the status bar of the home screen, when the battery is fully charged, a full battery icon appears on screen.

Warning:

- Do not remove the battery while the device is charging.
- Use only the AC adapter & USB cable provided with your device.

Note: For safety, the battery will stop charging in danger of overheating.

Audio Profile/Sleep Mode

Intelligent keyboard

From the home screen, swipe up to open "APP Drawer" & select "Settings", Go to "Sound" and change the audio settings by changing the sound effect or change your ring tone.



Sleep Mode

Turn on sleep mode to save your battery power.

1. On the home screen, touch "App Menu" & select "Settings".
2. Select "Display".
3. Select "Sleep" and choose a time interval from the list.

Screen Lock

1. On the home screen, touch the "APP Menu" & select "Settings".
2. Select "Security and location" then select "Screen lock".
3. Select the desired type of lock & follow the prompts to set up.

Phone Features

Description Icons

Icons	Descriptions	Icons	Descriptions
	Shows the phone's network signal strength.		Shows the phone's battery capacity.
	Speaker has been connected.		You have unused SIM.
	Color and hold.		USB storage turned on.
	The ring tone is on vibration.		Flight mode.
	4G network in use.		4G network in use.
	You have missed calls.		Alarm clock is active.
	In call.		Bluetooth ON.

Main Menu & Its Functions

Select "X" to enter the main menu—

Allow you to view a list of features available in your phone.

1. Clock
2. Browser
3. Calculator
4. Calendar
5. Camera
6. Contacts
7. Email
8. File Manager
9. Home
10. Internet
11. Mail
12. Messages
13. Music
14. Photos
15. Settings
16. Tools
17. Web Browser
18. YouTube

Phone Features


1. Gallery: Gallery displays a light, fast and easy-to-use gallery app.
2. Google Play: Google Play is your entertainment storefront. Bringing together all of the entertainment you love and helps you explore it in new ways, in new places, on any device.
3. Home: Use the Home screen to connect to an Internet connection.
4. Messages: Allow you to view messages sent to received on a thread.
5. YouTube Music: The music streaming app. Made by YouTube. Discover all the music on YouTube that you can't find anywhere else, organized in one new app and web player.
6. Photos: Allow you to make phone calls.
7. Browser: You could browse, view, modify and install your files.
8. Calculator: This device is provided by the operator. It provides phone plan information.
9. Camera: Allow you to take photos.
10. Contacts: Allow you to view contacts.
11. Email: Allow you to view emails.
12. File Manager: Allow you to view files.
13. Home: Allow you to view home screen.
14. Internet: Allow you to view internet.
15. Mail: Allow you to view mail.
16. Tools: Allow you to view tools.
17. Web Browser: Allow you to view web browser.
18. YouTube: Allow you to view YouTube.

Phone calls/Texting

To Make Phone Calls

1. Touch the phone icon.
2. Click on a contact from your contact list to make a call.

Composing text messages

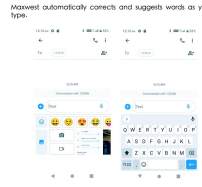


Cut, Copy and Paste

Touch and hold text content to bring up the magnifying glass, and then slide your finger to move the insertion points. Then choose to cut, copy, or paste. It's a way to copy text from web pages, email, or text messages.

WLAN

Turn on WLAN

Maxwest supports WLAN Direct which allows Android 13 or later devices with the appropriate hardware to connect directly to each other via WiFi without an intermediate access point. Using the API, you can discover and connect to other devices, if each device supports WiFi Direct, then communicate over a speedy connection across distances much longer than a Bluetooth connection. It is useful for applications that share data among users, such as a multiplayer game or the sharing.

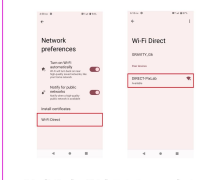

a. Enter "Settings" >> Click "NETWORKS & INTERNET" >> Select "WIFI" >> Select "WIFI Preferences" >> Select "Advanced" >> Then click "WiFi Direct" to access WiFi Direct feature.

b. After click "Search" at the bottom and it will display the available devices.


c. Click "DIRECT Push" (In this case specifically) and it will give you option to connect.

d. Click "Connect" to connect and it will pop up an interface to confirm like below.

Camera



e. Click "OK" and the devices will be connected

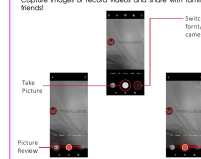

ColorTag

Capture images or record videos and share with family and friends!

Search to transfer camera


Connecting to E-mails

Log into your e-mail accounts.

You may login to your email accounts from the phone to access your e-mails.

From the home screen, touch "App Menu" & select "Settings". Select "Accounts" and touch "Add account". Select the type of email account you use (e.g., POP3, IMAP, Microsoft Exchange Account).

You will need to enter your user name, password, and server information depending on the type of email account you use to change the settings by tapping "Manual setup" at the top right corner screen. Tap "Next" and select "OK" to accept.

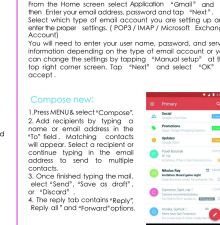

Compose new:

1. Press MENU, select "Compose".
2. Add recipient by typing a name or email address in the "TO" field. Matching contacts will appear. Select a recipient or continue typing in the email address to send to multiple contacts.
3. Once finished typing the mail, select "Send", "Save as draft", or "Discard".
4. The reply tab contains "Reply", "Reply all" and "Forward" options.

Delete messages:

1. Go to Inbox to display messages.
2. Touch & hold the message you want to delete.
3. Select "Delete".

File Transfer

Connecting Smartphone to PC

Connect the USB cable to your smartphone and computer. Once connected successfully, on your phone, slide the top menu down and click on "Android System", then, press "Transfer files".

A new storage, named "Internal", will appear on your PC file "My Computer". Click on it to view files in the smartphone and/or to transfer documents between devices. When finished, press "Disconnect" from PC.

Note: Photos taken with the camera will be saved under the "DCIM" folder. Screenshots captured will be saved under "Pictures" folder. PUA Music files in the "Music" folder for the files to be played properly.



Screen Capture



Press (Volume) and power button at the same time to capture "Screenshot". All captured screenshot will be saved under gallery.

Warning

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with part 15 of the FCC rules and is subject to the following two conditions:
 - [1] This device may not cause interference.
 - [2] This device must accept any interference, including interference that may cause undesired operation of the device.
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - a. Reorient or relocate the receiving antenna.
 - b. Increase the separation between the equipment and receiver.
 - c. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - d. Consult the dealer or an experienced radio/TV technician for help.
- SAR limits are conducted using standard operating positions accepted by the FCC/IEC with the device transmitting at its highest certified power level at tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. In general, the closer you are to a wireless device position antenna, the lower the power output.
- Before a new device is available for sale to the public, it must be tested and certified by the FCC/IEC. Tests for each device are performed in specific and test positions the handset is held 16 mm from the body.
- Full body worn operation. This device has been tested and meets the FCC/IEC RF exposure guidelines when used with an accessory designed for this purpose or when used with an accessory that complies with the test positions the handset is held 16 mm from the body.
- Full compliance with the above restrictions may result in violation of RF exposure guidelines.