




MX-D200 User Guide



Know Your Phone

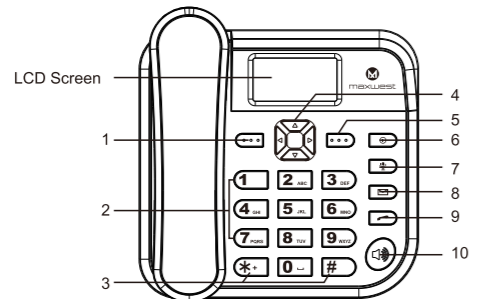

Key Instruction

Key	Description
1. MENU/OK	<ul style="list-style-type: none"> Enter main menu. Performs the function indicated at the left bottom of the screen.
2. Number	<ul style="list-style-type: none"> Use these keys to enter numbers and characters.
3. # , *	<ul style="list-style-type: none"> Perform different functions under different conditions.

Key	Description
4. SCROLLING	<ul style="list-style-type: none"> Press these keys to scroll cursor to the left, right, up or down when inputting characters or selecting items. Default functions in standby mode are set in Settings menu.
5. NAMES/BACK	<ul style="list-style-type: none"> To return to upper menu, or cancel Enter the Phonebook in Idle screen
6. EXIT	<ul style="list-style-type: none"> To turn ON/OFF the unite
7. MUTE	<ul style="list-style-type: none"> To mute the voice while communication
8. MESSAGE	<ul style="list-style-type: none"> This is the shortcut key to enter message menu in standby mode.
9. CALL/REDIAL	<ul style="list-style-type: none"> Make a call or answer an incoming call. In standby mode, press this key to enter Dialed calls list.
10. HANDS-FREE	<ul style="list-style-type: none"> If you are using the handset to call and want to transfer the call to the speakerphone, press this key and hang up the handset to put conversation on the speakerphone. Press this key to end a hands-free call.

Notes:
In this manual, "press" a key means to press the key once, "hold" a key means to press the key for 2 or 3 seconds.

Interface Icons

Icon	Description	Icon	Description
	Signal strength		New message
	Silent		Power indicator

Installation

- Handset**
Connect phone and handset via the phone cord.
- External power adapter**
Plug the external power adapter to the external AC socket.
- SIM card**
Always switch the phone off before removing or inserting SIM card. Open the bottom cover of the battery. Remove the battery, slide the SIM card into the SIM card slot. Make sure that the contact area of the card is facing down, and the beveled corner matches with the SIM card slot. Put in the battery and install the bottom cover.

How to Power on/of

To power on the phone, connect phone and external power outlet with the power adapter and then hold the EXIT key till the phone is powered on.

To power off the phone, at standby mode, hold the EXIT key till the phone is powered off.

Notes:
It is strongly recommended to connect the phone to external power outlet, and use internal battery to power your phone only when external power fails or is not available. The phone will charge the internal battery automatically when it is connected to external power outlet.

How to Make a Call

- There are two methods for making a call.
- The first method:
- Pick up the handset or press the HANDS-FREE key.
 - Enter the phone number, press CALL/REDIAL key to make the call. The second method:
Enter the number or select recipient's number from Contacts, or press CALL/REDIAL key to select a number from the Dialed calls list, then press CALL/REDIAL key to make the call.

Notes:
Add the international prefix, country code and area code (without the leading 0) before the number when making an international call.

Message

Select Messaging in Menu.

- Select **Write message** to write message, Press **Options** select **Send** or **Save**.
- Select **Inbox** to view messages received.
- Select **Outbox** to view the failure messages.
- Select **Drafts** to view the drafts messages.
- Select **Sentbox** to view the successfully sent messages.
- Select **Templates** to View the template message
- Select Broadcast message to hear message.
- Select Voice mail server to hear message.
- Select **SMS setting** to make some necessary short message settings.
- Select **Message capacity** under **SMS settings** to View the message of saved entries and maximum number of entries capacity in phone and SIM.

Security setting

Security setting could prevent your phone from unauthorized use. The default phone code is 1122. Change it to your own as soon as possible.

If you change the default phone code to a new one, remember it or place it at secure place.

PIN Code and PUK Code

•PIN code: PIN code could prevent your SIM card from illegal use. When PIN code is enabled, you should enter the PIN code when powering on the phone again. Change the default PIN code to your own as soon as possible.

•PUK code: The SIM card will be locked if you enter a wrong PIN code consecutively for three times. To unlock, you need PUK code.

Notes:
PIN code and PUK code may be offered together with the SIM card.

Text Input

Operation	Method
Input digits	"123", press the Number keys to input the digits you want directly. Press # key.
Input letters	"Abc", "abc", "ABC", press corresponding letter key till the letter appears. Press # key.
Input words	"=ABC", "=abc", press the Number keys to input the characters of the word. Then press MENU/SELECT key to confirm.
Input symbol	Press * key, and then select corresponding symbol by using Scrolling keys.
Input space	Apart from Numbers input mode, press "0" key to add space.

Operation	Method
Erase character	Press NAMES/BACK key. Hold NAMES/BACK key until the cursor before the character be erased.
Move the cursor	Press Scrolling keys.
Change input mode	Press # key to change text input mode.

Menu Function

Hereinafter are brief instructions for menu functions of the phone.

Function	Description	Selection
Create message	Create message and send to others.	Menu(Messaging(Write message
Read message	Read message in Inbox, Outbox, Drafts, Sentbox.	Menu(Messaging(Inbox /Outbox/Drafts/Sentbox

Function	Description	Selection
Message settings	Make some necessary short message settings.	Menu→Message →SMS settings
Call history	View or dial all recent calls.	Menu→Call logs→Missed calls /Dialed calls/Received calls /Delete call/Call times
Call duration	Check the Last call, Received calls, Dialed calls or Call history duration.	Menu→Call logs→Missed calls /Dialed calls/Received calls →Options→Scrolling to view)
Phonebook	View contacts	Menu→Contacts
Add new contact	Save phone number.	Menu→Contacts →Options→Select
Speed dial list	Set and view speed dial list.	Menu→Contacts→Options →Others→Speed dial
Call divert	Specify the conditions under which the call types should be diverted to another number.	Menu→Settings →Call settings→Call divert

Function	Description	Selection
Call waiting	Put the current call on hold to answer the other incoming call.	Menu→Settings→Call settings →Call waiting
Call barring	Restrict the dialing or receiving of certain calls.	Menu→Settings →Call settings→Call barring
Post-dialing delay	Enter the call number and delay expiration.	Menu→Settings→Phone settings →Post-dialing delay
Time and date	Check the date and the time, and set the date and the time format	Menu→Settings →Phone settings →date&time
Language	Set the display language	Menu→Settings→Phone settings →Language settings
Ring settings	Caller ringtone /Message ringtone	Menu→Profiles →Ring settings →Caller ringtone /Message ringtone

Function	Description	Selection
Backlight	Set the backlight time, when using the phone.	Menu→Settings→Display →LCD backlight
Change PIN	Set or change the PIN code	Menu→Settings →Security →PIN →Change PIN
Change password	Set or change the phone lock code.	Menu→Settings →Security →Power-on password
Restore settings	Switch to the factory default settings. The phone will clew input password, the password default 0000.	Menu→Settings→Phone setting →Restore factory settings
Adjust volume	Set Caller/Message /Alarm/Call/Power ringtone of your phone.	Menu→Profiles →Adjust volume
Ring type	Set Ringer Tone	Menu→Profiles→Ring type Call/Message alert / Alarm remind
Calculator	Execute basic math calculation.	Menu→Tools→Calculator (press ▲▼ ◀▶ to select +/-)
Alarm clock	Set alarm clock.	Menu→Tools→Alarm

Warning and Maintenance		
<ul style="list-style-type: none"> Some electronic devices are susceptible to electromagnetic interference sent by the phone if inadequately shielded. Keep using the phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference. Operating the phone may interfere with medical devices like hearing aids and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using the phone. Be aware of the usage limitation when using the phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required. Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin. Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality. Keep the phone out of the reach of small children. The phone may cause injury if used as a toy. Do not put other things on the terminal to avoid overlaying radiator. Use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your phone's performance, and violate related national regulations about telecom terminals, or even endanger your body. As your phone can produce electromagnetic field, do not place it near magnetic items such as computer disks. 		

- Do not expose your phone to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
 - Prevent liquid from leaking into your phone.
 - Disconnect external power supply and do not use your phone during thunderstorm.
 - Unplug the external power adapter or remove battery when your phone is not in use, esp. for a long period of time.
 - It is highly recommended to charge the battery before initial use. The battery might have been discharged during storage and delivery.
 - Do not unplug the connector of the data cable from the phone, and not install or remove battery, when the power is on.
 - Do not attempt to disassemble the phone by yourself. Non-expert handling of the devices may damage them.
 - The phone is non-waterproof, keep it dry and store in shady and cool place.
 - If you want to clean your phone, please use clean fabric that is a bit wet or anti-static.
- Do not use harsh chemical cleaning solvents or strong detergents to clean your phone, such as alcohol, dilution agent and benzene. Power off your phone before you clean it.

Troubleshooting

If your phone appears following phenomenon in the process of application, read following relative information at first. If the problems still cannot be solved, please contact with the distributor or service provider.

Problem	Check Point
When switching on the phone, it prompts enter "PIN".	Input your PIN code which offered with SIM card together. If you have changed PIN code, input the new PIN code.
When switching on the phone, it prompts "Emergency".	Check whether valid SIM card is inserted or not.
When switching on the phone, it prompts enter "password".	Enter lock code you set already to unlock the phone.
No ring tone prompt for a incoming call.	Check volume setting of ring tone. And check whether "mute" is set in Profiles.
No display on screen when disconnect external power supply.	Check whether the battery has electricity, or it is damaged or power on the phone again.
Press CALL/REDIAL key, but no number is sent.	Check whether you have set call barring.

Problem	Check Point
Certain call cannot be received.	Check whether the number is restricted.
Cannot send short messages.	Check the network condition, or message center setting.
Other abnormal phenomenon.	First refer to the user manual, and then check whether the power is connected correctly or not. If there is no problem, restart the phone.

Calentamiento	
<ul style="list-style-type: none"> Cualquier cambio o modificación no aprobados expresamente por la parte responsable del cumplimiento podrían anular la autoridad del usuario para utilizar los equipamiento. Este dispositivo cumple con la parte 15 de las normas de la FCC. La operación está sujeta a las siguientes dos condiciones: (1) Este dispositivo no puede causar interferencias perjudiciales y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluyendo interferencias que puedan causar un funcionamiento no deseado. 	
<p>Nota: Este equipo ha sido probado y cumple con los límites para un dispositivo digital de Clase B, de acuerdo con la parte 15 de las normas FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias perjudiciales en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias perjudiciales a la radio de comunicaciones. Sin embargo, no hay garantía de que no se produzcan interferencias en una instalación particular. Si este equipo causa interferencias perjudiciales en la radio o la recepción de televisión, que puede ser determinada girando el equipo apagado y, se recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas:</p> <ul style="list-style-type: none"> -Reorientar O reubicar la antena receptora. -Aumentar La separación entre el equipo y el receptor. -Conecte El equipo a una toma de un circuito distinto de aquel al que está conectado el receptor. -Consulte A su distribuidor o a un técnico de radio / televisión para obtener ayuda. 	

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.