

PRIMOS[®] HUNTING SPEAK THE LANGUAGE[®]



DOGG CATCHER™ 2

Instruction Manual V01

Dogg Catcher™ 2
Quick Start Guide (3851)

For full instruction manual go to: www.primos.com

To get Started using your Primos electronic predator call:

1. Install 4 AA batteries (lithium* or alkaline) into speaker, and 2 AAA batteries into remote
*lithium batteries are recommended
2. At the location you place the caller, power the speaker on by pressing the power button on back at base and press the power button on remote.
3. Point the speaker into the direction you would like to call.
4. Your caller is now ready to use with the remote control. In order to begin calling, select which sound you would like to hear.
5. You can use the remote to increase/ decrease the volume of the call or activate a second vocalization.

(See full manual at www.primos.com for more details)

Customer Service: 1-800-523-2395 www.primos.com

Important Note

Congratulations on your purchase of one of the best electronic predator calls on the market! Primos is very proud of this call and we are sure that you will be pleased with it as well. We appreciate your business and want to earn your trust. Please refer to the notes below and the instructions in this manual to ensure that you are completely satisfied with this product.

 
If your Primos Dogg Catcher™ 2 does not seem to be functioning properly or if you are having issues, **please check the Troubleshooting/FAQ Section on Page 7**. Problems are often due to something simple that was overlooked, or require only changing one setting to solve.

Introduction

The compact and simple to use Dogg Catcher™ 2 gives seasoned and beginning predator hunters a powerful electronic predator caller at an ultra-affordable price. It's packed with features including the 100 yards remote, 10 preloaded and proven Randy Anderson calls, 2 preloaded Expert Hunts™ and the ability to play two sounds at once. And its small size and Ground Swat camo makes it easy to conceal from even the most skittish predators as you use the attachable remote control to command it from up to 100 yards away!


FEATURES:

- Compact & lightweight for easy carrying and movement in field.
- Dual sound function plays two sounds simultaneously.
- Attachable remote control with up to 100 yd range.
- 10 preloaded Randy Anderson coyote calls.
- 2 preloaded Expert Hunts™.
- Adjustable legs to project sound in different terrain.

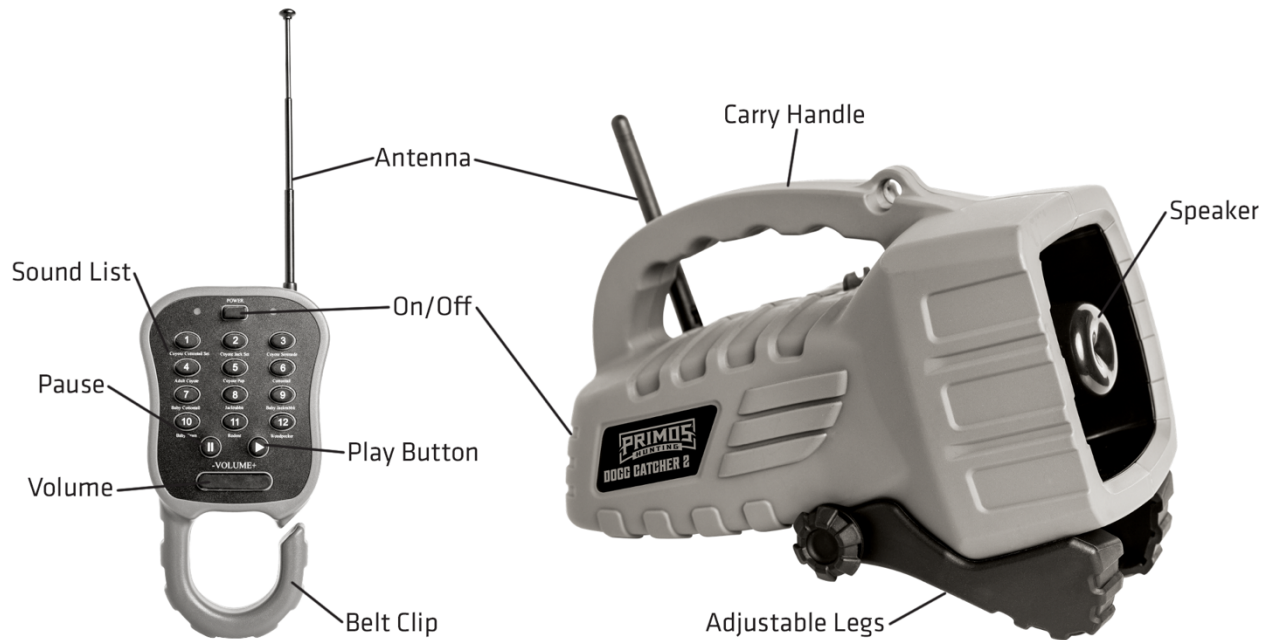

OPERATION INSTRUCTIONS

 IMPORTANT NOTE: Check your local and state hunting laws for legal and recommended use of electronic Game calls.

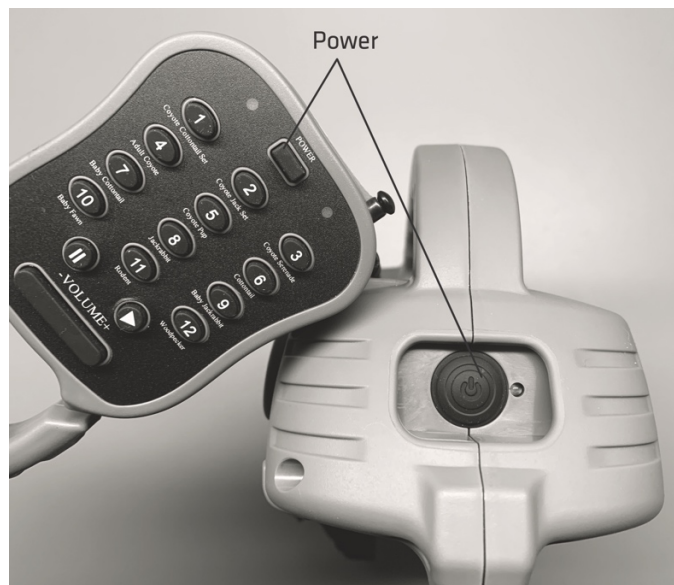

Turn power on both speaker and remote before using.

NOTE: Remote control buttons are designed to activate command when button is completely pressed down on the remote.

DOGG CATCHER™ 2 REMOTE

POWER ON/OFF BUTTON - [Located on top center of remote] Press to turn Power ON. (Green LED will illuminate.) Press button again to turn POWER OFF. (Green LED will turn off.)

ANTENNA - When using the device raise the antenna in order to increase your coverage area to pair with the caller.

PLAY SOUND - [12 sound buttons in center of remote] Press desired sound button to play. Note: When signal is sent to speaker LED in upper right corner will flash.

EXPERT HUNTS – Coyote Cottontail Set and Coyote Jack Set expert hunts are preloaded onto the Dogg Catcher™ 2.

STOP SOUND – Press sound button again to stop sound at any time.

Note: When signal is sent to speaker LED in upper right corner will flash.

MULTIPLE SOUNDS – Dogg Catcher™ 2 can play two sounds simultaneously. Follow the Play and Stop instructions above to operate each individual sound]

PAUSE – Press Pause button to pause a sound while it is playing.

PLAY – Press Play button to continue playing sound once it is paused.

VOLUME – Press UP/DOWN volume button at any time to select between 10 volume settings.

RED LED LIGHT – Indicates Speaker power is on.



DOGG CATCHER™ 2 CALLER

ANTENNA - When using the device raise the antenna in order to increase your coverage area to pair with the remote.

ADJUSTABLE LEGS - Depending on the terrain in which you are hunting you can adjust the legs in order to increase the angle to project the sound.



ATTACHING REMOTE TO SPEAKER

Attaching remote to speaker is designed for storage. Primos does not recommend transporting remote attached to speaker in and out of the field without extra attachment security protection as remote can be bumped and detach from speaker.

1. Simply align remote with cavity on side of speaker body. Place remote in the cavity. The connection is magnetic and will hold the remote in place for storage. Remote also has built in belt loop hook.

FIELD PLACEMENT

Place speaker up to 100 yards of your location. Position speaker facing away from your location in order to get maximum range with the sound. Hunting Tip: Keeping speaker within 50 yards allows for closer shots. Also place speaker to side of your location so animal is looking to the side of you and not in direct alignment with you.

IMPORTANT NOTE: If speaker is placed at long distances, on the ground, in thick cover, in underbrush, or has obstructions between remote and speaker always check remote function with speaker. If remote does not operate speaker, raise speaker off ground or decrease speaker distance.

CARING FOR YOUR CALLER

Your caller contains sensitive electronic components that can be permanently damaged if exposed to excessive shock or vibration. To minimize the risk of damage to your unit, avoid dropping your unit and operating it in high-shock and high- vibration environments.

- Do not store your unit where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.
- Avoid prolonged exposure to moisture. This can cause this unit to malfunction.
- Never use a hard or sharp object to operate this unit or damage may result.

BATTERIES

To avoid possible product damage and/or injury, NEVER INSTALL DIFFERENT TYPES OF BATTERIES in the product at the same time. Failure to follow may result in leaking or exploding batteries, damage to product, fire, or personal injury. Do not handle damaged or leaking batteries.

BATTERY INSTALLATION (Batteries not included)

 
(2) AAA Batteries in remote & (4) AA Batteries in caller

REMOTE

Remove battery cover and install 2 AAA batteries following polarity instructions in battery compartment. Reinstall battery cover and tighten with screwdriver or coin.

SPEAKER

Remove battery cover and install 4 AA batteries following polarity instructions in battery compartment. Reinstall battery cover and tighten with screwdriver or coin.

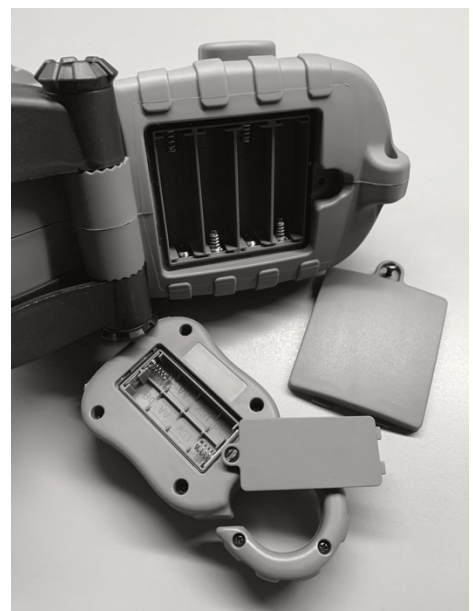

CLEANING THE UNIT

The Dogg Catcher™ 2 Caller is constructed of high-quality materials and does not require user maintenance other than cleaning. Clean the outer casings using a cloth dampened with a mild detergent solution, and then wipe dry and allow to air dry. Avoid chemical cleaners and solvents that can damage plastic components or soft-touch coating.

IMPORTANT NOTE: The caller is water resistant - not waterproof.

TROUBLE SHOOTING

Check batteries in speaker and remote control if caller is not functioning properly.

If the remote is not controlling speaker properly. Move remote closer to speaker until remote properly controls speaker.

If speaker continues to function incorrectly, call Customer Service at 1-800-523-2395 or email service@primos.com.

IMPORTANT

For your protection, please carefully read these warnings, precautions and safety/operating instructions completely before operating this product. Follow these instructions closely and keep this manual for future reference.

WARNING

To reduce the risk of fire, electrical shock or product damage/failure:

- Do not expose unit with the battery door open to rain, moisture, dripping, or splashing. Do not open or close the battery door with wet hand. Completely wipe off water on unit and door before opening.
- Do not lay product on moist ground or submerge in water.
- DO NOT OPEN CASE HOUSING. UNINSULATED, 'DANGEROUS VOLTAGE' WITHIN PRODUCTS ENCLOSURE.
- DO NOT REMOVE HOUSING COVER. THERE ARE NO USER - SERVICEABLE PARTS INSIDE, REFER SERVICING TO PRIMOS®.

CUSTOMER SERVICE

- Only use batteries as specified in this user manual and install according to correct polarization. Failure to follow may result in leaking or exploding batteries, damage to product, fire or personal injury. Do not handle damaged or leaking batteries.

- Do not expose to extreme heat. Do not leave product and/or batteries exposed in direct sunlight inside a vehicle, or other contained environment for a long period of time.
- Only use accessories as recommended in this manual

WARNING

Primos® game calls are so accurate you might attract other hunters, as well as game. The user of this product assumes all risk of injury in association with the use of this product.

MODIFICATION WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your warranty of this equipment.

OPERATING TEMPERATURE

- Recommended storage temperature range -10°F to 140°F
- Recommended operating temperature range 20°F to 120°F

FCC STATEMENT

Changes not expressly approved by Primos® could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules. Specifications and designs are subject to change without any notice or obligation on the part of the manufacturer.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Please

note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF WARNING STATEMENT

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC STATEMENT

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(S). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux C NR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ONE YEAR SERVICE GUARANTEE

1 YEAR LIMITED WARRANTY

Terms: You MUST keep a receipt for "Proof of Purchase" for any warranty claims on your product. More details below.

Please contact the Primos® Customer Service Team with any comments, questions, problems or return requests. Call (800) 523-2395 or email service@primos.com.

RETURN THIS PRODUCT TO BUSHNELL OUTDOOR PRODUCTS

DO NOT SEND BACK TO THE STORE

9200 Cody, Overland Park, KS 66214

Office 1-800-523-2395 | Fax 601-879-9324

primos.com

1. Please Contact Customer Care in order to get a Return Form.
2. Remove batteries from product and pack in well-padded or highly protective box. Primos® will NOT be responsible for damage incurred in returning product for repair / replacement.
3. Include Proof of Purchase. ANY ITEM RETURNED WITHOUT PROOF OF PURCHASE WILL NOT BE ACCEPTED.
4. Send product prepaid to: Bushnell Outdoor Products, ATTN: Lab Repair, 9200 Cody, Overland Park, KS 66214.

For warranty or service information, email service@primos.com or call Customer Service at 1-800-523-2395.

DISCLAIMERS

Primos® makes no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, or for damages resulting from the use of the information contained therein.

Primos® reserves the right to alter the features and contents of this publication, hardware or software without obligation or advance notice.

Warranty does not extend to any accessories used with this product.

Primos® is not responsible if you use this product for illegal purposes.

Primos® shall not be obligated to perform preventative maintenance, installation, deinstallation, or maintenance.

The illustrations in this manual are for instructional purposes only and may not represent actual product exactly.