

WD-300英文折页说明书: 单页尺寸 71x99mm(双面印刷)

正面

WD-300



Wireless Charge Clock Speaker

USER GUIDE
Hello! Let's get started!

封面 p1

Safety Instructions

Please read the following instructions. Failure to follow all the instructions listed below may damage the device and/or may result in electric shock, fire and/or personal injury.

- Do not expose the device to direct sunlight
- Do not remove screws from or open the device casing by yourself
- To reduce the risk of fire or electric shock, do not expose this equipment to rain or moistures.
- The unit shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on the unit.
- Never charge the device with a damaged power cable.
- Never put the device or charging cable near heat registers, radiators, stoves or heaters.
- Always put the device where it is not easily knocked over by persons in household or business.
- Never touch the device with wet hands.
- This device is only for the intended household, in-car or in-door use.
- Never use any detergents to clean any part of the unit.
- For safety reasons, this product should not be used when the car is exposed to high temperatures.

p2


Welcome

We would like to congratulate you on the purchase of your WD-300 Wireless Charge Clock Speaker. Please read this manual carefully before use.

What's Included


WD-300 device x1, USB Type-C power cable x1, Aux Cable x1, User guide x1

Overview

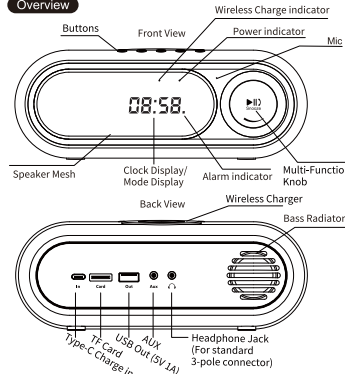

p3

Button Functions

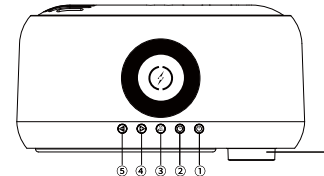

- Power Button:**
Press & Hold: Power On/Off
Short Press after device turned on: Switch between Clock Mode & Working Mode
- Clock Button:**
Short Press: Set Time
Press & Hold: Alarm On/Off
Press Twice: Set Alarm
- Mode/Bass Button:**
Short Press: Switch modes
Press & Hold: Bass Adjust (Music/FM)
- Next Button:**
Short Press: Next Track(BT/TF Card mode)/Next Channel (FM Radio)/Add Hours/Minutes (Clock Mode)/Alarm Dismiss (When alarm buzzes)
- Previous Button:**
Short Press: Previous Track(BT/TF Card mode)/Previous Channel(FM Radio)/Minus Hours/Minutes (Clock Mode)/Alarm Dismiss (When alarm buzzes)
- Multi-Functional Knob:**
Turn Knob: Adjust volume/Adjust bass level (Bass adjust mode)/Adjust Hours/Minutes (Clock Mode)
Short Press: Play/Pause(BT pairing mode, TF mode)/Answer/End a call(Incoming Call)/Mute(FM Radio/Aux in mode)/Confirm Hours/Minutes (Clock Mode)/5 minutes SNOOZE(When alarm buzzes)
Press & Hold: Reject an incoming call (incoming call)
Press & Hold 4 seconds: Reject an incoming call (incoming call)

p4

背面

Operation

Powering the device

Using the provided USB Type-C Cable, connect the Type-C connector to the Type-C Input on the speaker, and the Standard USB Connector to a 5V 3A(Or higher) Power Plug/Adaptor*.

Note: Please make sure to use a 5V 3A (or higher Ampere/Current Power Plug) to power the device. Using a 2A or lower current power plug may result in wireless charge malfunction especially when the wireless charge function and speaker function on the device are used at the same time.

Power On/Off & Switch modes

Press and hold the **Power** button to turn on the speaker. Short press the **Mode** button to switch modes. Short press the **Power** button to enter clock mode. Short press the **Power** button in clock mode to switch back to other modes again.

Wireless Charge your mobile device

Place your mobile device on the rubber ring of the powered WD-300. Look for the wireless charge icon **Ⓢ** and make sure the wireless charge area on your mobile device is right on top of the wireless charge icon **Ⓢ**. Adjust the position of your mobile device if charging is not stable.

Note: Some phone cases may affect or block the wireless charging transmission, remove the case if necessary.

Bluetooth Pairing

Press the **Mode** button repeatedly to enter Pairing mode. The word "BLUE" will start blinking on the speaker indicating that it is waiting for device to pair. On your Bluetooth device, find and select "WD-300 / WD-300A" under your bluetooth device listing to pair. A successful connection via bluetooth will be followed by an audible notification. For help with Bluetooth Settings, please consult your device's user manual.

p5

Handsfree Speakerphone

The handsfree speakerphone function is enabled when the device is paired with your mobile device. Press the **Mode** knob to answer an incoming call. To decline a call without answering, press and hold the **Mode** knob during an incoming call. To end a call, press the **Mode** knob during a call. For the best conversation experience, make sure the WD-300 unit is placed near (within 40cm) the user.

FM Radio

Press the **Mode** button repeatedly to enter FM radio mode. Press and hold the **Mode** knob to initial automatic channel search. Searched channels will be saved automatically. Press the **Mode** or **Next** button to switch channels. Short press the **Mode** knob to mute the speaker when listening to the radio and short press the button again to unmute.

Note 1: When using FM Radio mode, please plug in the provided AUX cable to the AUX Jack on the device. The cable acts as an external antenna for radio reception. You can adjust the position of the cable for better radio reception.

Note 2: Wireless charger function can interfere with the radio signals.

TF Card

Insert a TF card to enter TF card mode or press the **Mode** button to switch to TF card mode if card is already inserted. Press the **Mode** or **Next** button to select music from the card. Press the **Mode** knob to play/pause music.

Auxiliary Connectin (AUX)

Use the provided AUX cable, connect one end to the AUX Out jack of your audio source device and the other end to the AUX In Jack on the WD-300 device. Press the **Mode** button to switch AUX mode. Press the **Mode** knob to mute/unmute the speaker.

p6

Setting the clock

Short press the **Power** button to set the time. Press the **Mode** button or turn the knob to set the hour then press the **Mode** knob to confirm. Now press the **Mode** button or turn the knob to set the minute and press the **Mode** knob to confirm.

Setting the alarm

Press the **Power** button twice quickly to set the alarm. Press the **Mode** button or turn the knob to set the hour then press the **Mode** knob to confirm. Now press the **Mode** button or turn the **Mode** knob to set the minute and press the **Mode** knob to confirm. Once the alarm is set, a white dot next to the clock digits will appear indicating that an alarm has been set.

Snooze/Alarm Dimiss & Alarm On/Off

Press the **Mode** knob when the alarm buzzes to snooze for 5 minutes. Press any buttons (Except On/Off button & the Snooze button) to dismiss the alarm when it buzzes. The alarm will still buzz on the next day. To disable the alarm completely, press and hold the **Power** button until the white dot next to the clock digits disappears.

Soothing Mode/ White noise mode

(Optional feature. Only available in WD-300A soothing mode version.) Press the **Mode** button to switch to Soothing mode. Press the **Mode** or **Next** button to select soothing sounds. Press the **Mode** knob to play/pause soothing sound. Soothing sound/music will automatically stops if the speaker has not been operated for 30 mins.

Specifications

- BT version: V5.0
- Wireless Distance: <10m
- Speaker Power: 3W
- Speaker impedance: 4Ω
- Input Voltage: 5V
- Input Current: 3A
- Size: 195x105x72 mm

p7

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

p8