

True Wireless Stereo Earbuds

LE-702



USER GUIDE

Hello! Let's get started!

*Charge the earbuds and charging case prior to first use

Welcome!

Thank you for choosing our True Wireless Stereo Earbuds. We hope you will enjoy this product as much as we do! Please read this manual carefully before use.

※ This product is patented.

Important safety instructions

- To avoid accidental ingestion, keep the earbuds away from small children and pets. The earbuds contain Lithium-ion batteries, and may be hazardous if swallowed. When not in use, store the earbuds in the charging case with the lid closed.
- Use caution and follow applicable laws regarding mobile phone and headphone use if using the earbuds for phone calls while driving.
- Protect your hearing from high volume levels. Permanent hearing damage may occur when headphones are used at high volume levels for long periods of time.
- Focus on your safety and that of others if you use the earbuds while engaging in any activity requiring your attention (e.g. riding a bicycle or walking in or near traffic.)

Maintenance

- Keep this product away from excessive heat and humidity;
- Do not put this product under direct sunlight or hot areas. High temperatures will shorten the lifespan of the product. Do not subject to heat above 60 °C/140°F;
- Charge this product if it is not used for more than 1 month;
- To avoid risk of electrical shock, do not disassemble the product at any time;
- Do not drop or knock this product on hard surfaces;
- Do not use chemicals or detergents to clean the product;
- Do not expose this product to excessive rain or immerse in any liquid.
- Do not throw this product into fire.

 
Features

- Long play time up to 6 hrs
- 5 EQ presets
- Touch control
- Extra large dynamic graphene sound driver
- Superior sound quality
- Dual and Single earbud usage modes
- Auto power On/Off & Auto pairing
- Flexible fitting options with sport hooks & wing tips
- Call audio to both earbuds
- Voice assistant activation
- Charging case with charge out/power bank feature
- 2000 mAh high capacity battery charging case
- Waterproof IPX5*


*1 Water proof is not a permanent condition and may decrease as a result of normal wear.
2 The charging case is NOT water proof. Please avoid contacts with moisture, rain or liquid.
3 Sweat and water may affect touch control performance. Wipe dry the earbud if it is wet.

Overview

Earbuds

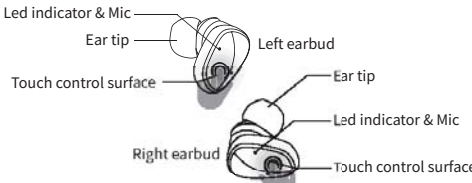

Charging case

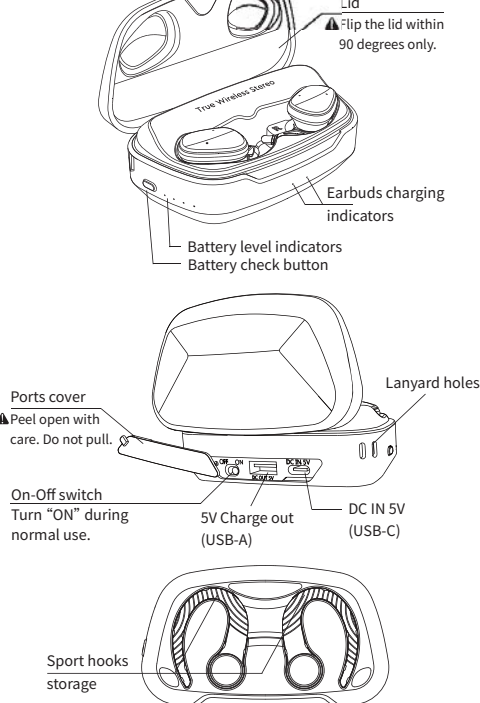 


What's included

Earbuds x 1pair



 
Charging case x1

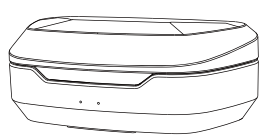

Wing tips



 
Sport hooks

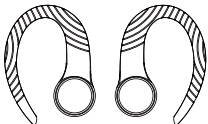

Ear tips



 x3 pairs

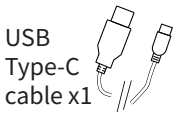

USB

Type-C

 
cable x1

Choosing the right ear tips:

The perceived sound quality and bass performance of the earbuds depends greatly on the correct fit of the earbuds in the ear. Please test which ear tip size gives you the best sound quality and the best wearing comfort.

How to wear


1.

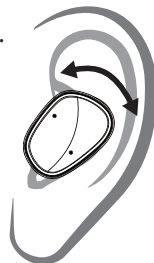

Lite fit

Insert the earbuds into your ears. Adjust the angle of the left earbud to roughly match the diagram on the left. Do the same with the right earbud.

 2.

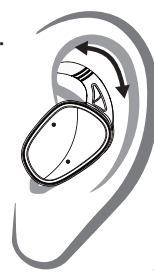

Secure fit

You can transform the earbuds to the Secure Fit version by attaching the wing tips onto the earbuds. Adjust the angle of the left earbud and wing tip to roughly match the diagram on the left. Do the same with the right earbud.

3.



 
Sport fit

You can transform the earbuds to the Sport Fit version by attaching the sport hooks onto the earbuds. Adjust the angle of the left earbud and sport hook to roughly match the diagram on the left. Do the same with the right earbud.

Charge the charging case to start


The earbuds come with a charging case which contains a built-in high-capacity rechargeable battery to recharge the earbuds. For first time use, toggle the on-off switch on the charging case to "ON" position to activate the case.

To charge the charging case, use the provided USB-C Cable and connect the USB-C connector to the DC-IN port on the charging case and the other side (Standard USB-A) to a USB Power Source such as a 5V USB adaptor (not included). The power level indicators will blink when charging.

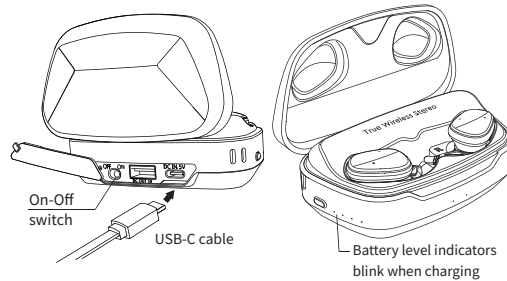

Charging the earbuds

 Insert the left & right earbuds into the charging case respectively to charge. Check if a red light appears on each earbud to ensure the earbuds are charging. The charging case also has two earbud charging indicators to check the charging status of the earbuds located on the front side of the charging case. Each charging indicator lights up when charging and turns off when the respective earbud is fully charged.

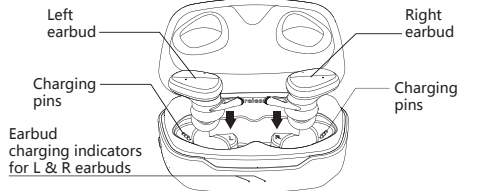

NOTE 1: The left charging indicator indicates the charging state of the left earbud and the right charging indicator indicates the charging state of the right earbuds.

NOTE 2: Wing tips with wrong angle on the earbuds may prevent the earbuds from fitting well into the charging case. Adjust the angle of the wing tips if necessary.

How to pair (Dual/Stereo earbuds mode)

1. Take out the earbuds from the charging case and fit the earbuds to your ears. The distance between the earbuds to the device (also each bud to the other) for pairing must not exceed 2m.
2. The two earbuds will power on with a short "beep" sound and pair with each other automatically.
3. You will hear the voice prompt announce "Pairing".
4. Enable your mobile device's Bluetooth pairing function. Via the menu of your Bluetooth device list, search and select "LE-702" to connect. Once connected, you will hear the voice prompt announce "Connected" on both earbuds.
5. You can now enjoy wireless stereo music with your earbuds!
6. The earbuds will automatically try to connect to the last connected device the next time it is powered on again.

NOTE: The connection between the earbuds may cut out temporarily on occasion. This is normal for wireless earbuds. However if the connection cuts out intermittently, then it may be caused by radio interference (e.g. near wifi router) or an obstacle blocking the signals. Try moving to another area/location for better connection.

Single earbud mode

Once paired and connected in Dual Earbud Mode, you can use either one of the earbuds individually by simply placing the other earbud into the charging case or powering it off. All operations are the same as Dual Earbud Mode except that the EQ function is not available in single earbud mode.

NOTE: Two earbuds cannot connect to two mobile devices individually at the same time.

Activate voice assistant

Your earbuds can activate voice assistant on your mobile device. To activate, make sure the earbud is connected to your device then touch the Touch control surface for 1 second and release. Note: Not all mobile devices support this feature.

Change EQ presets (Dual earbud mode only)

EQ presets feature offers different sound experiences. Double-tap the Touch control surface on the right earbud when playing music to change presets. Presets include: "Balanced", "Bass booster", "Vocal booster", "Treble booster" & "Enhanced sound".

Auto power off

Your earbuds will automatically power off if it is not connected for 5 minutes.

Charging case On-off switch

Turn this switch "ON" for normal use. If you intend NOT to use the earbuds for a long period of time, turn this switch "OFF". This will help to maintain the battery level of the case and stop the earbuds from being charged and monitored by the case. Note: In this situation, you must also turn the earbuds off manually.

Power On/Off directly from the earbuds (Restart)

To power on the earbuds manually, touch and hold the touch control surface on both earbuds for 2 seconds.
To power off the earbuds manually, touch and hold the touch control surface on both earbud for 3 seconds.

Reset earbuds connection

 
1. Power off the earbuds (Touch the earbuds for 3 seconds).
2. On your mobile device's Bluetooth setting, remove "LE-702" then disable the Bluetooth function.
3. Touch the right earbud's touch control panel until blue and red lights flash alternately on the earbud.
4. Touch the left earbud's touch control panel until blue and red lights flash alternately on the earbud.
5. Wait a few seconds to let the earbuds pair with each other.
6. Once the earbuds are paired with each other, the leds on both earbuds will flash blue simultaneously.
7. One of the earbud will flash red and blue alternately for mobile device connection. Enable back the Bluetooth function on your mobile device and tap "LE-702" to connect.

Clear earbuds pairing list

1. On your mobile device's Bluetooth setting, remove "LE-702" then disable the Bluetooth function.
2. Take both earbuds out of the charging case and manually power off the earbuds.
3. Touch the touch control surfaces of both earbuds until you see the leds on the earbuds flash purple (about 7 seconds).

Charge out feature (Emergency power bank)

The charging case can be used as a power bank. To charge a device, connect the device with its USB cable to the DC-Out port on the charging case and press the battery check button. You can also press the button to light up the battery level indicators.

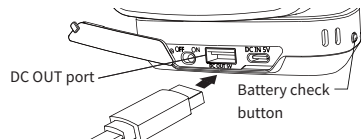

Low battery warnings

 
Earbuds

When the battery charge of the earbuds drops to a critical level, a voice prompt will remind you to recharge the earbuds.

Charging case

When the battery charge of the charging case drops to a critical level. All the led indicators on the charging case will blink.

Earbuds touch control operations



Function	Operations
1.Power On (Auto)	Take out the earbuds from the charging case/ Power On (Manual)
2.Power Off (Auto)	Place the earbuds into the charging case/ Power Off (Manual)
3.Answer a call	Tap the Touch control surface when a call is ringing
4.Hang up	Tap theTouch control surface during a call
5.Reject calls	Touch the Touch control surface until call rejected
6.Play/pause music	Tap the Touch control surface (left earbud)
7.Next	Double-tap the Touch control surface (left earbud)
8.Previous	Triple-tap the Touch control surface (left earbud)
9.Activate voice assistant	Touch the Touch control surface for 1 second then release (When paired with a device)
10.Change EQ	Double-tap the Touch control surface (right earbud)

LED indicators

Left earbud led indicator	Right earbud led indicator
Battery level indicators	Earbuds charging indicators
Status	Indication
Power on	Blue light flashing
Pairing mode	Blue light and red light flashing alternately
No connection:	Red light flashing slowly
Charging the earbuds:	Earbuds charging indicators light up & go off when finished
Low battery:	All led indicators blink
Charging:	Battery level indicators blink

Specifications

Model Number : LE-702	
Wireless Connection:	BT V5.0 (Subject to version updates)
Max Transmission distance:	Up to 15m (No Obstacle)
Supported Profiles:	A2DP/AVRCP/HSP/HFP
Play time:	Up to 6hrs
Charging time (Earbuds)	About 1 hr
Charging time (Case)	About 2 hr
Frequency response	20 Hz to 20 kHz
Input Voltage:	Charged by DC 5V USB-C
Battery:	Built-in Li-polymer battery
	3.7V 50mAh(Arbud), 3.7V 2000mAh(Charging case)
Size:	25x18x28mm(Earbud), 92x54x37mm(Charging case)
Weight:	10g (2 Earbuds), 120g(Earbuds and Charging case)

Troubleshooting

- Earbuds don't power on
Place the earbuds in the charging case to initiate charging.
- Earbuds are not paired after taking out from the charging case.
Place the earbuds back in the case and take them out to try again.
- No sound
Increase the volume on your mobile device and make sure it is not muted.

- The sound occasionally drops out
1. Make sure that the earbuds are within the transmission range of the Bluetooth device
2. Move your Bluetooth* device closer to the earbuds and keep them away from any radio interference or obstructions or try connecting to a different mobile device.
3. If your Bluetooth* device uses a metal protective case, remove the metal case and check if the problem is resolved.

- Earbuds not charging in charging case
1. Make sure the earbuds are properly placed in the charging case.If wing tips are attached, adjust the angle of the wing tips so that the earbuds fit snugly in the charging case.
2. The charging case maybe out of battery. Please charge the case.

- Earbuds powered on themselves inside the case.
1. If the charging case is out of battery power the earbuds will auto power on (as if they are out of the charging case). Please check if the charging case battery power is low and charge the case if needed.
2. Happens if the On-Off switch on the charging case is toggled from "ON" to "OFF" when the earbuds are inside the case. Keep the switch in "ON" position in normal use. Manually power off the earbuds if necessary.

- Noise or distorted sound from earbuds
Lower the music volume or try switch to a different EQ preset.
- Earbuds not connecting to last connected device.
Delete LE-702 from your paired Bluetooth list on your device. Search, then pair again (see instructions on "How to Pair").

*For all above, please make sure that On-Off switch is in the "On" position.

*The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

→ Reorient or relocate the receiving antenna.

→ Increase the separation between the equipment and receiver.

→ Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

→ Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2ASQYLE-702