

标记	处数	分区	更改	日期

576mm 128g双面铜版纸

126mm  
正面

Put in the paper roll (The print side should be below) and push it to the right (Dividing ruler should be above; Note the position of the paper roll device as shown).

Pull out the paper (Raise the paper out of the paper bin by approximately 15mm) and close the paper cover. Make sure the paper bin is closed.

Press Power button for 2 sec to turn on the printer, press feed button to push one piece of paper. Connect to the App, start to use it.

### 07. Product Warranty Description

Thank you for choosing Phomemo.

- The free warranty period is 1 year from the date of purchase.
- Within 30 days from the date of user's receipt, the user can choose to return.

### 08. Non-warranty Regulations

The warranty is void under the following conditions:

- Exceeding the warranty period.
- Not presenting the original warranty/maintenance card (e.g. hearing or tampering), altering product information.
- Pressing a damaged warranty/maintenance card (e.g. hearing or tampering), altering product information.
- Damage caused by unauthorized repair, disassembling, etc.
- Damage caused by human error.
- Damage caused by natural disasters such as earthquakes, floods, windstorms, lightning strikes, or external disasters such as fires and house collapses.
- Failure or damage caused by harsh conditions (oil, dust, moisture, direct sunlight, etc.) or failure to use or care for as outlined by the instruction manual.

### 09. Warranty/Maintenance Card

Replace  Return  Repair

User Information	Name:	Gender:	Phone:
	Address:		
Product Information	Date of purchase:	Product order number:	Product serial number:
	Fault description:		
Reason for Stoppage (Please Paste the Original Receipt)	Fault conditions:		Maintenance staff:
	Processing situation:	Repair date:	
Maintenance Record	Repair ticket number:	Date of inspection:	

Creator: Zuhai QUN Graphics Co., LTD  
Address: 1st Floor, Block B, No. 1, Cuzhu 4th Street, Qianhai, Zhuhai, Guangdong, P.R. China  
Email: support@phomemo.com  
Website: www.phomemo.com

### 10. FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Warning:  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Phomemo-M200 User Manual

Please read this manual carefully before using this product and store it properly.

576mm 128g双面铜版纸

126mm  
背面

### 01. Inside Box

If anything is missing, please contact the supplier.

### 02. Product Description

**Opening key** ① Paper Exit ⑤  
② Dust proof rubber cover ⑥  
③ Reset Hole ⑦  
④ Royle Hole ⑧

**Feed** ① Label paper: Press Feed Button ⑤ to feed the tape to the proper place and get ready for printing next tape.  
② Continuous paper: Press Feed Button ⑤ to keep paper feeding, it will stop when you let go of the button.

**System Setting** ① Press Power Button ③ for 1 second to switch to the setting interface.  
② Press Feed Button ⑤ for 1 second, scroll option list and select by pressing Power Button.  
③ Press Power Button ③ for 1.5 seconds to go back to the main page.

**Restore factory settings** ① Press the power key to enter the menu option, select restore factory settings, and then press the paper feed key to complete "restore factory settings".

### 03. Screen Information

Bluetooth    Setting Transfer    Cover Opening    Paper Condition    Print Condition    External Electricity    Charging/Battery

**Text Area**  
This area shows related text information.

Options	Parameter
Language	English, Chinese
Print concentration	10, 12, 14, 16, 18, 20, 22, 24, 26, 28, 30, 32, 34, 36, 38, 40, 42, 44, 46, 48, 50, 52, 54, 56, 58, 60, 62, 64, 66, 68, 70, 72, 74, 76, 78, 80, 82, 84, 86, 88, 90, 92, 94, 96, 98, 100
Print speed	100, 120, 140, 160, 180, 200, 220, 240, 260, 280, 300, 320, 340, 360, 380, 400, 420, 440, 460, 480, 500
Paper type	General paper, Continuous paper, Black card label
Automatic shutdown	5min, 15min, 30min, 1h, 2h, 4h, 8h, 24h, No shutdown
Restore settings	Restore to factory default settings.
Firmware version	Display Firmware version
Device address	Display device address

**Screen hint**

Content	Condition
Shutdown	Battery lower than 1%
Printing	Printing completed
Feeding	Press Feed button
Overheated, please wait	Print head is overheated
Maximum received	No paper in the bin or paper is installed incorrectly
Cover opened	The paper cover is opened

**Bluetooth** ① When printer connects to Bluetooth, this logo will light up. This logo will flash when the data is transferring.

**Setting/Transfer** ① When you are using USB wire, this logo will be shown and flash. If you press Power Button for a short time, it will be switched to Setting Mode, the logo will be shown as Setting Mode.

**Cover Opening** ① It indicates that the paper cover is opened or not closed correctly. A message will appear, stating that the paper cover is opened.

**Paper Condition** ① If the paper roll is not installed correctly, or there is insufficient paper, this logo will light up. A message will appear, stating that there is no paper. When the paper is generated, it will give you a confirmation so that you are able to proceed.

**Print Condition** ① If it lights up while the printer is printing or feeding.

**External Electricity** ① It will light up when the printer is connected to a power source.

### 04. Device Parameters

Hardware	Parameter
Model	M110
Color	Black
Print technology	Direct Thermal
Resolution	300 DPI
Printed paper	Thermal paper, coated paper, non-sensitized coated paper
Print speed	100~300mm/s (Max with 4.5mm thermal)
Print concentration	10~100%
Print concentration	10~100%
Life of print head	50000
Connection type	Bluetooth 4.0, USB Type-C
Battery	2000mAh
Charging time	2.5h (at 1A, 5V)
Standby	15~20h
Power supply mode	External battery, USB Type-C
Operating system	Android 5.0+, Windows 7/10, macOS
Material	ABS
Dimensions	85x85x110mm
Weight	110g (with 20mm paper)
Operating temperature	5°C ~ 35°C
Storage temperature	-20°C ~ 60°C
Operating humidity	20% ~ 85%
Storage humidity	5% ~ 95% (non-condensing)

### 05. Search Phomemo-M110 on App Store or Google Play to Get the App

### 06. Installing the Paper Roll

除非另有说明, 否则公差按下表:				Phomemo M110说明书		ZEGUAN 泽冠			
尺寸标注	CLASS A	CLASS B	CLASS C	型号		材料	128g双面铜版纸	表面	不覆膜
<6.0	±0.1	±1	±2	番号	30400300089	颜色		用量	1张
6.0~30.0	±0.2	±1	±2	设计	陈颖心2019-11-19	文件位置		单位	mm
30~	±0.1	±1	±2	审核	江民辉2019-11-19	版本	A0	图幅	1:1 1
120~400	±0.1	±1	±2	核准	王名湛2019-11-20	比例	1:1 1	第 1 张 共 1 张	
400~1000	±0.1	±1	±2						