

380mm

Thank you for choosing
Phomemo

Creator: Zhuhai QUIN Graphics CO.,LTD
Address: 1 Cui Zhu Street Building B 1st
Floor, Qianshan, Zhuhai, Guangdong,
P.R.China

Email: support@phomemo.com
Website: www.phomemo.com

FCC ID: 2ASRB-P1000

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product Warranty Description

Thank you for choosing Phomemo.

1. The free warranty period is 1 year from the date of purchase.
2. Within 3 days from the date of user's receipt, the user can choose to return.

Please save the warranty/maintenance card properly. The warranty/maintenance card will not be replaced if lost.

Non-warranty regulations

The warranty is void under the following conditions:

- ① Exceeding the warranty period.
- ② Not presenting the original warranty/maintenance card.
- ③ Presenting a damaged warranty/maintenance card (e.g. tearing tampering), Altering product information.
- ④ Damage caused by unauthorized repair, disassembling, etc.
- ⑤ Damage caused by human error.
- ⑥ Damage caused by natural disasters such as earthquakes, floods, windstorms, lightning strikes, or external disasters such as fires and house collapses.
- ⑦ Failure or damage caused by harsh conditions (oil, dust, moisture, direct sunlight, etc.) or failure to use or care for as required by the instruction manual.

Warranty/Maintenance Card

- Replace Return Repair

User Info	Name:	Gender:	Phone:
	Address:		
Product information	Date of purchase:		
	Product Order Number:		
	Product Serial Number:		
Return, Replace, or Repair Request	Reasons:		
Maintenance records	Fault conditions:		Maintenance staff:
	Processing situation:		Repair date:
	Repair ticket number:		Date of inspection:



Product certification

Inspector:
Date of manufacture:

Please read this manual carefully before using this product and store it properly.

 


Phomemo User Manual

115mm

380mm


Product Description

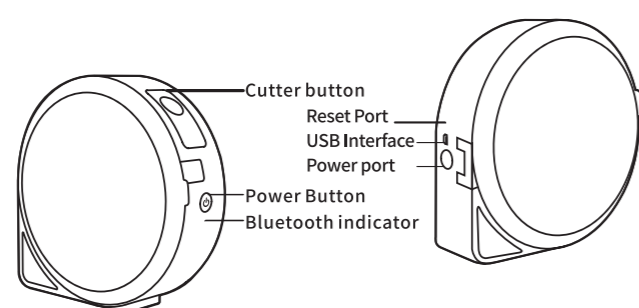

Power indicator status

Indicator light color	Status	Solution	
Power light	Orange light flash slowly	1. No printer ribbon 2. Press the cutter button when printing 3. Battery is lower than 10%	1. Install printer ribbon 2. Please use the cutter button to cut the printer ribbon and print again 3. Please connect the power source
	Orange light flash quickly	Power is lower than 5%, can't print	Please connect the power source
	Orange light flash breathy	Charing power was lower than 60%	/
	blue light flash breathy	Charing power was higher than 60%	/
Bluetooth light	Blue light on	USB or Bluetooth was connected	/
	Blue light flash slowly	No connected	Please connect usb or bluetooth

 
Operation Guidance

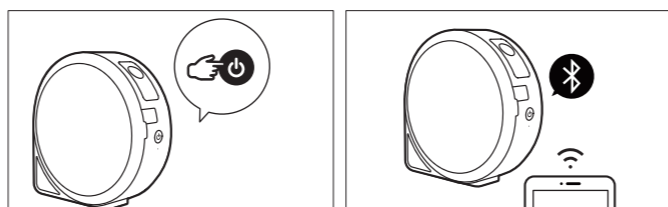

1. Fully charge the battery before using the first time. To turn on the machine, press and hold the power button for 3 seconds
2. Turn on Bluetooth, search for the device in the App and connect Switch print ribbon

Phomemo Search for phomemo and download the app

 Switch print ribbon

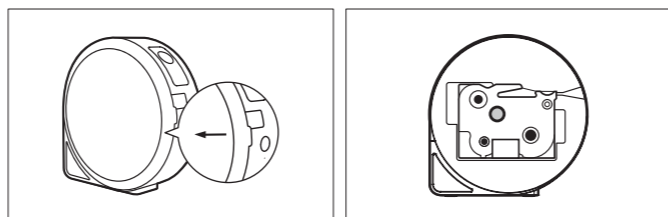

1. Open the top cover outwards in the direction of the arrow
2. Insert the consumables correctly in the direction of the instructions and cover the top cover to complete the installation. If the machine is malfunctioning, the reset hole can be restarted to restart the machine.

Attention

- ① Insert or pull out the charge cable gently to avoid any damages to the port.
- ② Pull out the cable after charging is complete.
- ③ Do not charge or use the printer in high temperature, high humidity, or foggy circumstances (e.g. in a bathroom, a steam room or beside a fire) which may be dangerous. (NOTE: This machine is not suitable for tropical environments)
- ④ Improper charging methods may cause damages to the print head.
- ⑤ Do not touch the print head in case of high temperature.
- ⑥ Be aware of the sharp blade.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/T technician for help.

Battery Warning Description

Never disassemble, impact, squeeze or put into fire;
If there is severe swelling, do not continue to use;
Do not put in a high temperature environment. Do not use if immersed in water;
Be sure to replace with an appropriate type of battery. (There is danger of explosion if you replace it with the wrong type of battery.)
Be sure to dispose of the used battery as instructed.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

115mm