 


USER MANUAL

CATCHX MINI BAIT BOAT

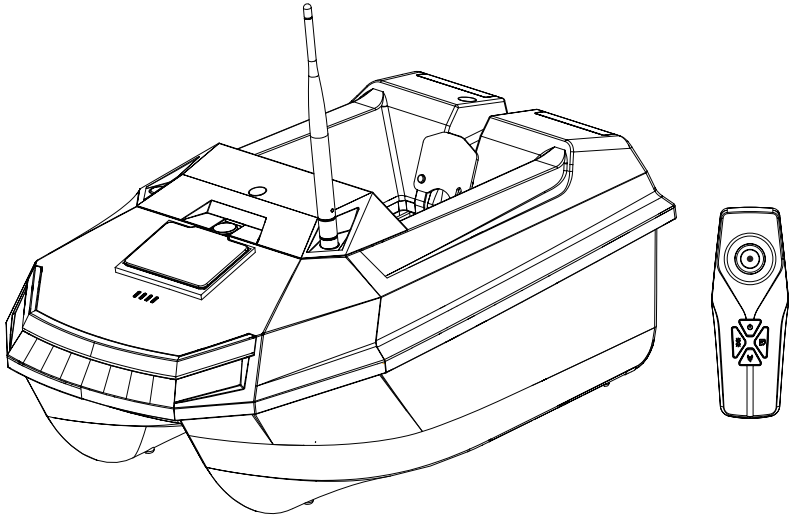

CatchX Mini

1. Specifications

CatchX Mini Bait Boat


Weight Inc Battery:	3.1kg
Dimensions:	H21.3cm*W31.4cm*L48.2cm
Number of Hoppers:	1 hopper
Max Speed:	1m/s
Range:	350 meters
Hopper Capacity:	1.5kg
Run Time on a Full Charge,	2.5hrs continuous play time
Boat lights:	1 front white; 1 rear red
Operating Temperature:	-10~45℃
Radio Frequency:	2.4GHZ
Waterproof Level:	Top: splash resistant Bottom: fully waterproof.
Battery Type:	Li-ion Battery Pack
Capacity:	7500mAh * 1
Voltage:	7.4V

Remote of CatchX Mini Bait Boat


Battery Type	AAA Battery*2
Frequency:	2.4GHZ
Play Time:	≥48hrs

*We strongly recommend using the chargers supplied by Rippton for trouble-free charging.

 2. Overview

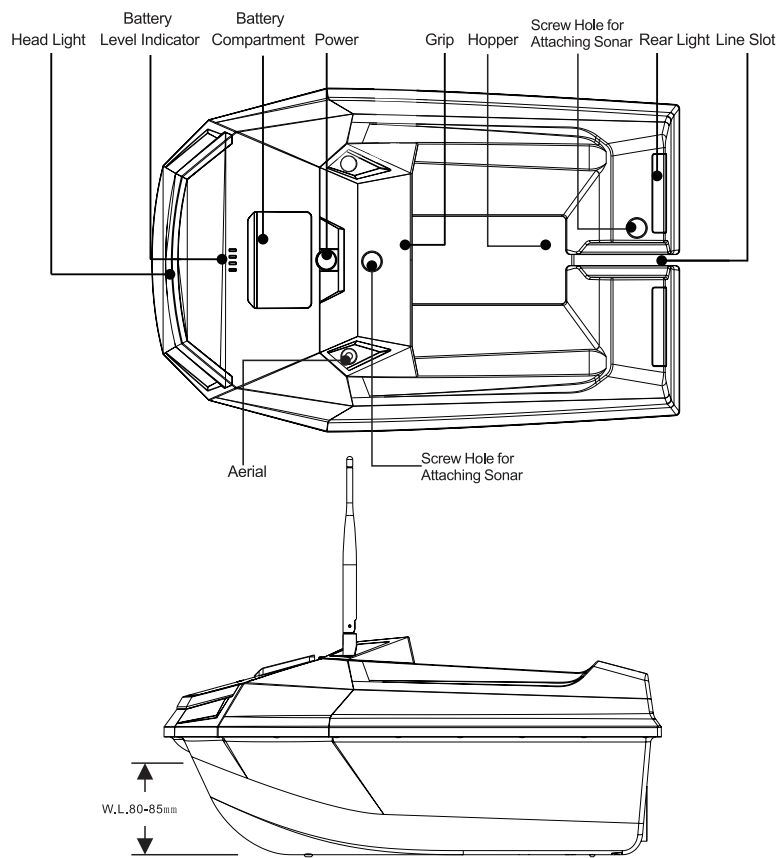


Hull

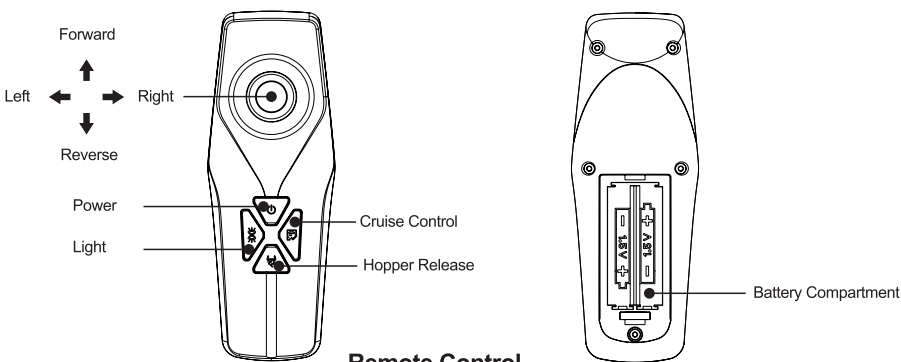 

Remote Control

3. Instruction

 HOW TO USE THE REMOTE

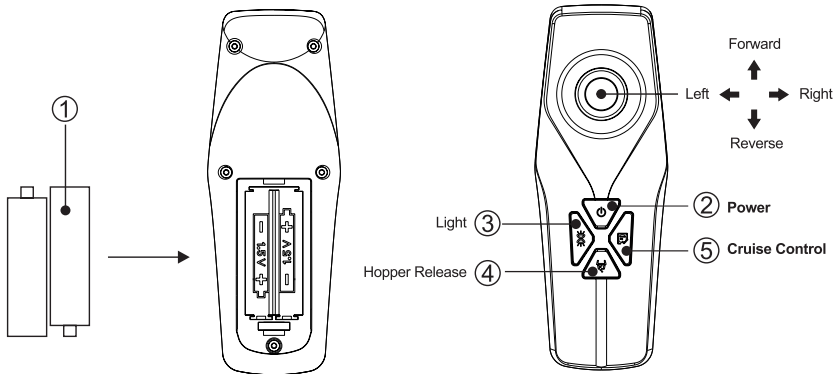

① Place two ‘AAA’ batteries properly in the battery compartment of remote control and close the compartment properly.

② Long press the “Power” button for 2 seconds and you will hear two short beeps when the remote is on. Same way to turn off the remote.

③ Long press the “Light” button for 2 seconds and you will hear two short beeps when the lights are on. Same way to turn off the lights.

④ Long press the “Hopper Release” button for 2 seconds and you will hear two short beeps when the hopper is released.

⑤ Long press the “Cruise Control” button for 2 seconds and you will hear two beeps when Cruise Control is on. Now the boat will sail auto - matically.

* If any deviation happens, please slightly push the joystick left or right to adjust the direction.

 
* To exit Cruise Control, please push the joystick down.

HOW TO TURN ON THE BAIT BOAT


① Place the boat battery in the compartment, power on and close the compartment properly.

② Place the boat on the level ground, switch on the power and wait for 10 seconds till the boat is on.

Note: To optimize the performance of the boat, please ensure it is placed on the level ground when turning on.

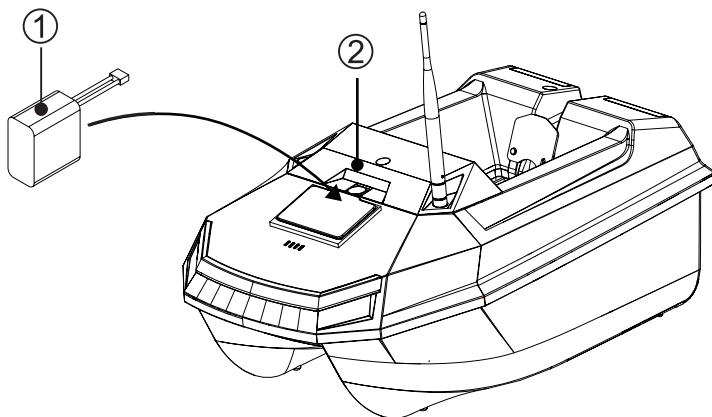


HOW TO CHARGE THE BAIT BOAT

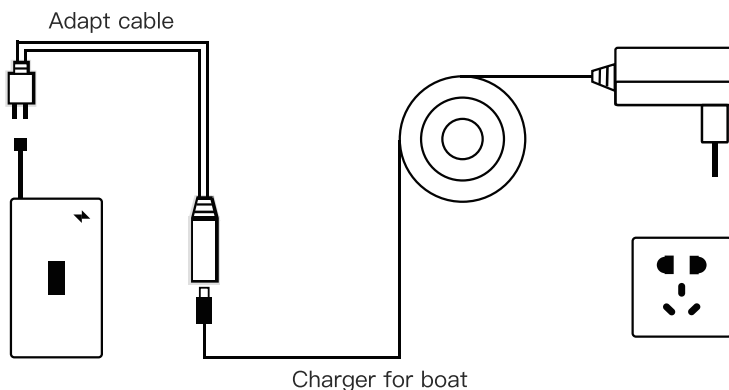 


Please charge the battery separately after taking it out of the battery compartment (please refer to image above).

 
HOW TO CALIBRATE THE REMOTE

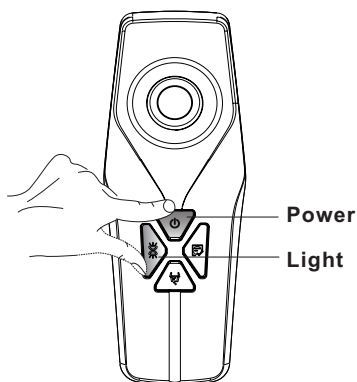

 ① When the boat and remote are off, press and hold on the “Light” button, then long press the “Power” button. It enters the calibration mode when it beeps.


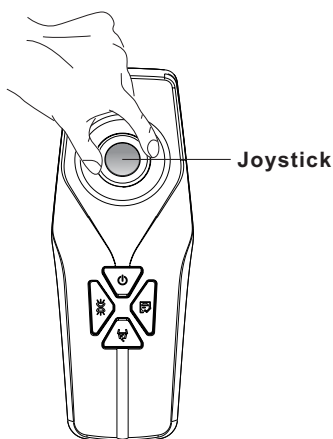


 ② Move the joystick in circles full stroke and then return the joystick to the neutral position.

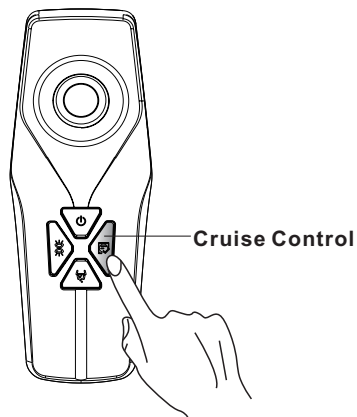


③ Press the “Cruise Control” button. If it emits a long beep, then the calibration is done.

  HOW TO PAIR THE REMOTE

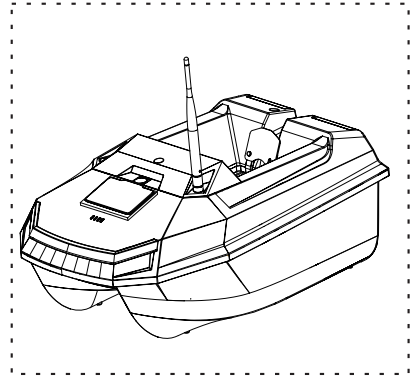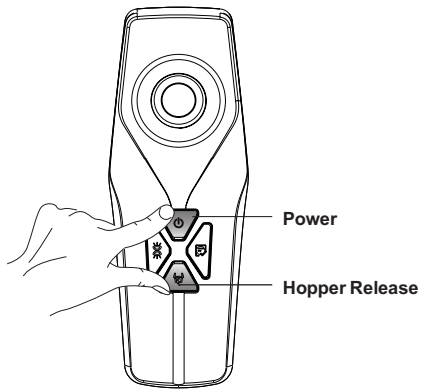

 - ① When the boat and remote are off, long press the “Power” and “Hopper Release” button together until the remote beeps.

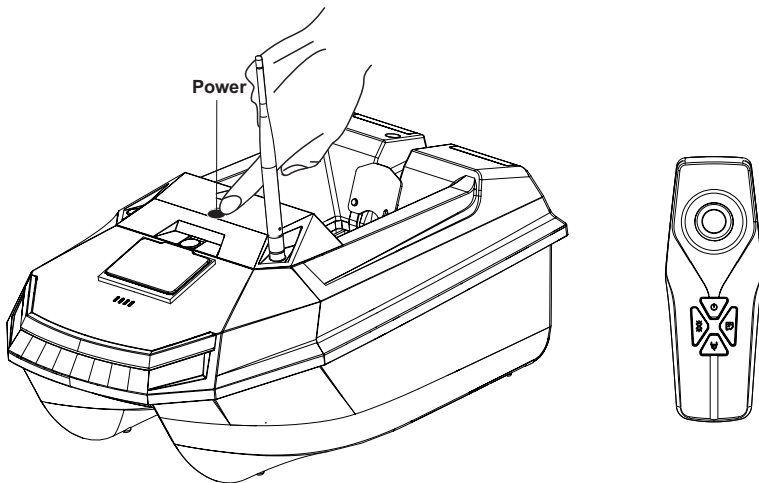

- ② Next, turn on the boat. If it emits a long beep, then it's paired.

4. Maintenance of Battery

- For long-term storage, please ensure the power switches of both the CatchX Mini and its remote control are turned off, and the power level of the CatchX Mini battery is greater than 80%. If not, the battery will be over-discharged due to a failure of normal use.
- Storage temperature: -20℃~45℃ (within one month).
- To prevent over-discharge and avoid decreasing the battery lifetime, the battery should be fully charged every month, as long-term storage will have a negative impact.

CE RoHS

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.