 




# Dual mode bluetooth stereo

MODEL: xSOUNDBAR xSUBWOOFER

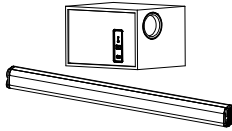

USER MANUAL

### IMPORTANT:

 
Short press the [PAIR] key on the back panel of the subwoofer or long press the play/pause [M] key on the side panel of the soundbar or remote control for 2 seconds to get the wireless subwoofer paired with the soundbar for the initial use. They can get paired automatically after that. If you disconnect the wireless subwoofer pairing by pressing the [PAIR] key on the subwoofer, please still use the same key to re-pair.

### Soundbar BACK PANEL



- [ AUX ] : AUXILIARY Input
- [ USB ] : USB Input
- [ OPTICAL ] : OPTICAL Input
- [ ARC ] : HDMI ARC jack
- [ COAXIAL ] : COAXIAL Input
- [ ON/OFF ] : Power Switch
- [ AC-110-240V ] : AC-110-240V POWER SUPPLY

### Subwoofer BACK PANEL



- [ POWER LED ] : Power LED indicator light
- [ PAIR LED ] : Pair LED light on: Soundbar and subwoofer are already paired. Pair LED light flash: Soundbar and subwoofer are not paired. Please short press the PAIR key to get paired.
- [ PAIR ] : When the soundbar and the subwoofer are both connected to the power supply, short press the button to pair the subwoofer and the soundbar.
- [ ON/OFF ] : Power Switch
- [ AC-110-240V ] : AC-110-240V POWER SUPPLY

## Operation process

### PAIRING THE SOUNDBAR TO THE SUBWOOFER

Short press the [PAIR] key on the back panel of the subwoofer or long press the play/pause [M] key on the side panel of the soundbar or remote control for 2 seconds to get the wireless subwoofer paired with the soundbar for the initial use. They can get paired automatically after that. If you disconnect the wireless subwoofer pairing by pressing the [PAIR] key on the subwoofer, please still use the same key to re-pair.

- Connect the AC power cord into a wall socket.
- Turn the speaker on by long pressing the [POWER] button on the speaker or remote control for 3 seconds.

### 3.1 Bluetooth mode operation

3.1.1 Press the [MODE] button on the speaker or the [BT] button on the remote control. When a "dingdong" sound is heard, then go into bluetooth pairing mode.  
3.1.2 During the pairing process, keep the speaker and bluetooth device within 10 meters of each other.  
3.1.3 Set your phone or other bluetooth device to bluetooth status.  
**Bluetooth Connection Method for Android system:**  
1. Go to SETTINGS->BLUETOOTH(make sure bluetooth is turned ON)  
2. When your bluetooth enabled device finds the speaker, select "Pro xSOUNDBAR"  
from the list of found devices. When succeeding pairing, you will hear "dingdong".

### Characters on the LED display and their corresponding functions

bt	BLUETOOTH
US	USB
AUX	AUXILIARY
OP	OPTICAL
ARC	HDMI ARC
COX	COAXIAL
MUS	MUSIC (NORMAL)
VOCA	NEWS (VOCAL)
MOV	MOVIE (ROCK)
CLAS	Classical
POP	Popular
PAU	Pause
MUTE	MUTE
BASS	BASS
REPE	REPEAT
ON	ON
OFF	OFF

### Caution:

- Do not take this device apart or try to repair it.
- Do not use this device near water or humidity.
- Clean only with a dry cloth.

 
### Limited Warranty:

You may return it to the authorized service for repair within 1 year from the date of your purchase.


### Cautions and warnings:

- Do not use the bluetooth speaker near water or humidity; do not use the device near the bathtub, water tank, swimming pool and so on.
- Do not install the bluetooth speaker in an extreme hot or cold environments.
- Do not expose the device in the sunshine directly.
- Do not use the device near fire, such as stove, candle or fireplace and so on.
- Do not use abrasive cleaning solvents to clean the device.


## In the box

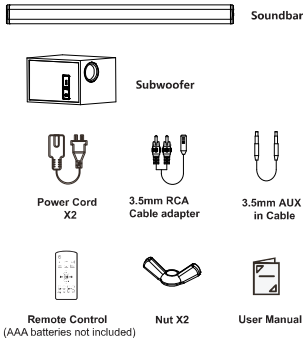

## REMOTE CONTROL

 


 How to install batteries:  
Remove the battery compartment cover from the back of the remote control and place 2 AAA batteries inside the compartment. Make sure the battery polarity matches the polarity markings inside the compartment.



## Location of controls
 
### SIDE PANEL

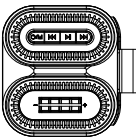

- [Power/M] button : Long press power ON/OFF (Long press 3 seconds) Short press to select mode
- [M] button : Skip to previous track
- [M] button : Short press Play / pause track When the soundbar and the subwoofer are both connected to the power supply, long press the button to pair the subwoofer and the soundbar
- [M] button : Skip to next track
- [+/-] button : Increase volume/Decrease volume
- [IR] Infrared remote control receiver
- [Display screen] Display the different status of the product

- [POWER] Key: Standby Power ON/OFF /Light ON /OFF (Long press for 3 seconds)
- [M] Key: Skip to previous track
- [M] Key: Play/pause music
- [M] Key: Skip to next track
- [VOL-] Key: Decrease volume
- [VOL+] Key: Increase volume
- [BT] Key: Bluetooth MODE
- [OPT] Key: OPTICAL MODE
- [ARC] Key: HDMI ARC MODE
- [USB] Key: USB MODE
- [AUX] Key: AUXILIARY MODE
- [COX] Key: COAXIAL MODE
- [MUSIC] Key: MUSIC MODE (NORMAL)
- [NEWS] Key: NEWS MODE (VOCAL)
- [MOVIE] Key: MOVIE MODE (ROCK)
- [RPT] Key: USB REPEAT MODE
- [MUTE] Key: MUTE MODE
- [EQ] Key: SHIFT BETWEEN CLASSICAL/JAZZ/POPULAR/ROCK/VOCAL/NORMAL MODE
- [BASS+] Key: SUBWOOFER VOLUME DECREASE / INCREASE

### 3.2 Optical/ARC/COX mode operation

3.2.1 Please insert one connection port of OPTICAL fiber into the [OPTICAL] fiber. Please insert one connection port of COAXIAL cable into the [COAXIAL] cable Input jack or one connection port of ARC cable into the [ARC] cable Input jack first, and then insert another connection port into the socket of media playback device.  
3.2.2 Press the [MODE] button on the speaker or the [OPT/COX/ARC] button on the remote control. This goes into the corresponding mode when the display displays OPT/COX/ARC.  
3.3 LINE IN mode operation  
3.3.1 Insert one of the connection ends of the audio cable into the [AUX] jack, and then insert another connection end into the port of the media playback device.  
3.3.2 Press the [MODE] button on the speaker or the [AUX] button on the remote control to enter AUX status.

### 3.4 Volume control operation

3.4.1 The volume can be adjusted by rotating the volume rotary knob or by lightly pressing VOL+/VOL- on the remote control.

### 3.5 Skipping and play/pause Songs operation

3.5.1 Press the [M] button on the speaker or press the [M] button on the remote control to skip to the previous song.  
3.5.2 Press the [M] button on the speaker or press the [M] button on the remote control to skip to the next song.  
3.5.3 Press the [M] button on the speaker or the remote control to play or pause music.

### 3.6 Control LED light

3.6.1 Long press the [POWER] button on the speaker or press the [POWER] button on the remote control to make the LED light ON/OFF.

### FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. FCC RF exposure statement: To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body.

生产单号:	型号: xSOUNDBAR
料号:	物料名称: 说明书
其它要求: 105g铜版纸, 黑白双面印刷	
需按要求折叠, 折叠后成品尺寸: 85*110mm	
内容以工程承认样品为准	
美 工	结构
电 子	审核

折线

折线