

Cover OUTSIDE

11" (27.9cm)

DRONE XTREME STUNT COPTER

Sharper Image® name and logo (including the 77 logo) are trademarks or registered trademarks. Distributed by and © 2022 MerchSource, LLC. Irvine, CA 92618. All rights reserved. For customer support, please call 1-800-374-2744.

Model Number: xxxxx

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displayed, published, or used for any purpose without prior written permission. It is not permitted to alter, remove, or reproduce any trademarks, or copyright notice from this manual.

 
**WARNING:**  
CHOKING HAZARD - Small Parts.  
Not for children under 3 years.



Printed in China

SHARPER IMAGE®

8+

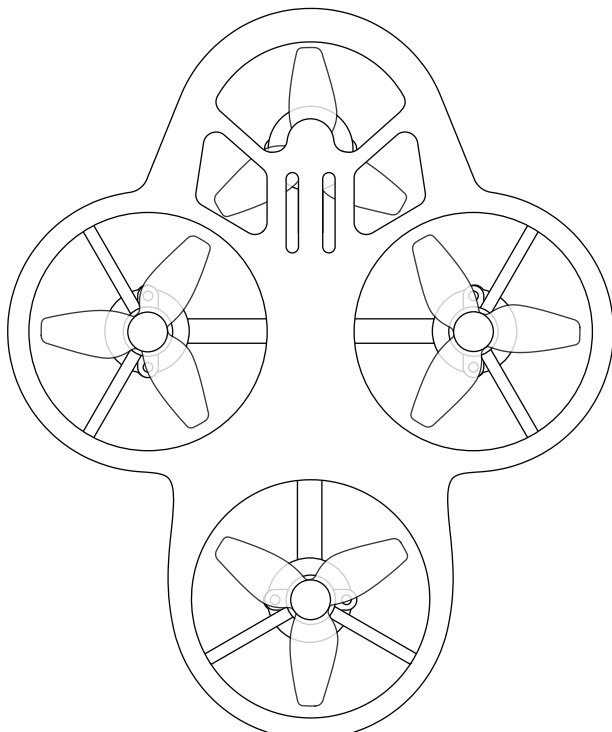


KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.  
Due to continuous product improvements, illustrations in this manual may differ slightly from the actual product.

DRONE XTREME STUNT COPTER

Cover INSIDE


CONTENTS

 Xtrem Drone  
Remote Control  
USB-C Cable  
4 Replacement Propellers

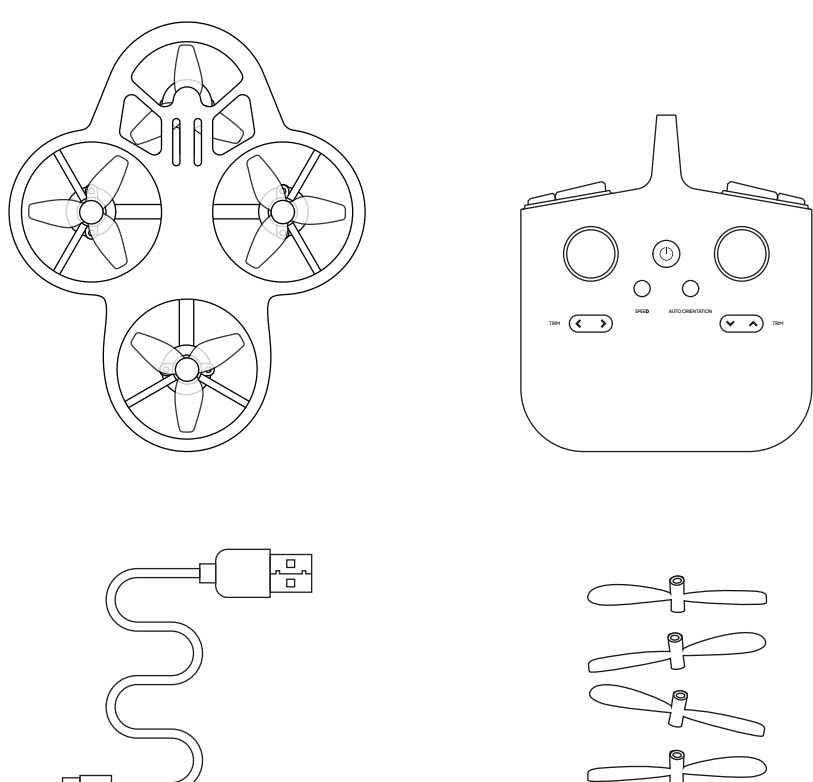


1

 REMOTE OVERVIEW AND ADDING BATTERIES

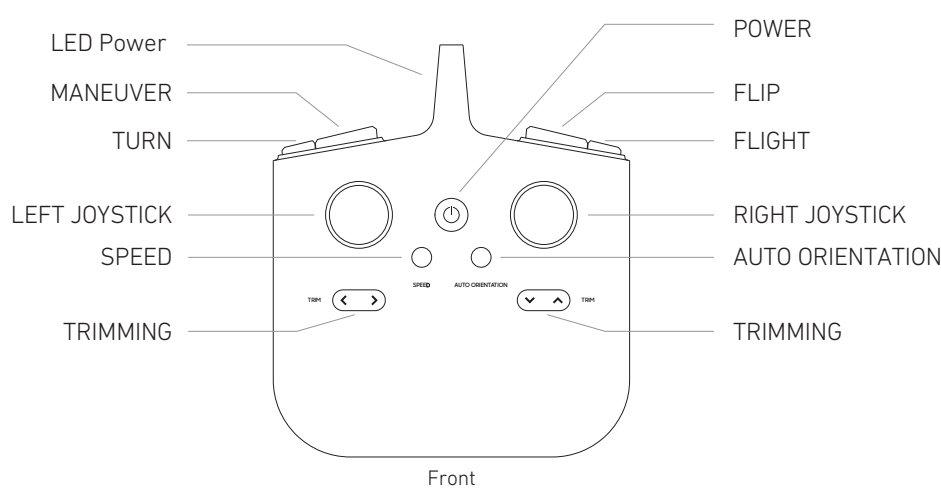

 1. The remote control uses 3x AAA batteries (not included).
2. Use tool to press the button to release the back panel. Slide the back panel down to remove the backplate.
3. Insert the batteries in the same orientation as shown.
4. Slide the back panel back up to secure the panel.

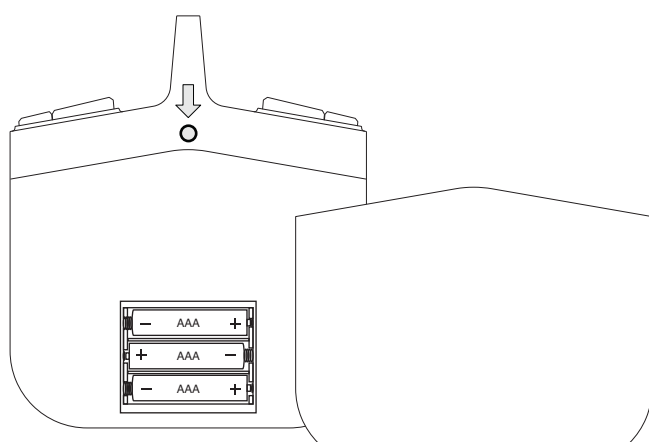

2

PLAY

TURN ON

 
- To power the remote control on, press the power switch once. The power LED will light up gradually.
- To power the drone, press down the power switch for about a second until the drone LEDs blink on, located at the bottom of the drone.
- If there is no input for 5 minutes, both the drone and remote control will automatically shut off.

PAIRING

- After turning on both the remote control and drone, move the left joystick up and down quickly to pair the remote control with the drone. The drone's lights will flicker during the pairing process and then remain on once paired.
  - The pairing will last for 1 minute. If the two cannot be paired successfully within 1 minute, both the drone and the remote control will enter sleep mode. You must turn off both to restart the pairing process.
  - When either the remote control or the drone disconnects, the remaining one automatically enters pairing mode.
- Note: The remote control and drone use a 2.4GHz connection.
- Calibrate the drone before play for easy flight. To do so, place both of the joysticks as shown in the diagram below until drone lights from rapidly blinking to keeping on. The keeping on lights means that the drone is ready for flight. Re-calibration will erase previous trim settings.

KEEP STABLE

After impact, the drone is unstable. 1) Put the left joystick lever to the left bottom and put the right joystick lever to the right bottom at the same time. This will reset the gyroscope. 2) If the above does not resolve the issue, reboot the drone and controller and pair again.

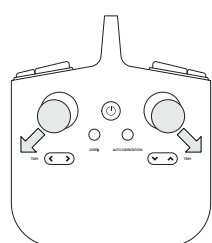

3

PLAY

CONTROLS

- To ensure steady flight, be sure to place drone on a level solid surface.
- There are 2 methods to take off the drone. To auto take off, push the flight button to automatically begin flight. The drone will rise between 4.9-6.5 feet (1.5-2m) and remain suspended. To manually begin flight, press the left joystick up and the drone will take off. Release the joystick to have the drone hover in place. To land the drone, either push the flight button and the drone will land automatically, or use the left joystick to manually land the drone. Be sure to land the drone on a level solid surface.
- The Accelerator joystick or left joystick, is used to control height and rotation of the drone. Push up to fly up and push down to fly down. Push left to spin the drone counterclockwise and push right to spin the drone clockwise.
- Use the right joystick to control the drone on the x axis. Push the stick up to move forward, down to move backwards, left to move to the left and right to move to the right.

SPEED

- You can switch between high speed mode and low speed mode. The remote will beep twice when enter high speed mode, and once when back in low speed mode. The drone defaults at low speed mode after turning on.

AUTO ORIENTATION

Press the Auto Orientation Button to turn the mode ON and then again to turn off.

- In this mode, the drone will always move in the direction you press the Multi Directional Button no matter which way the drone faces. When drone is in auto orientation mode, the drone will orient to the user (remote), no matter what direction the drone is facing.
- Press the Orientation button. Remote will beep every 6 seconds to indicate it is in Auto Orientation mode.
- Push the right stick up will send the drone away from the user, push left will move left, etc.
- Press Auto Orientation button to exit mode.

 
4

PLAY

Press any of the 3 stunt buttons to perform various stunts. Refer to the chart below for the button combination to perform certain tricks.


TURN STUNTS

Press down TURN stunt button and push right joystick, drone will start twist up or 360.

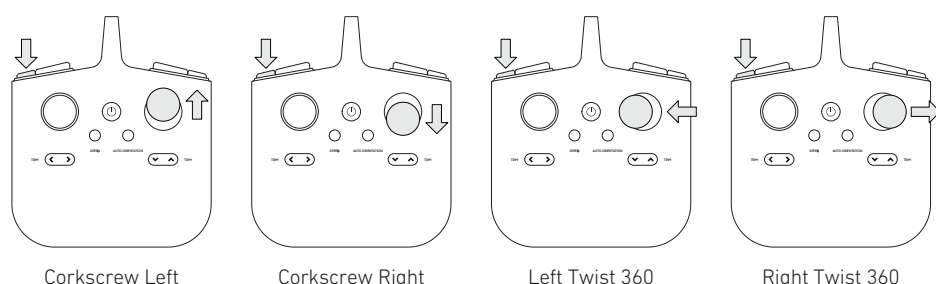

MANEUVER STUNTS

 Press down MANEUVER stunt button and press right joystick to perform automatically flying like leap frog, fade away, or banked loop stunt.

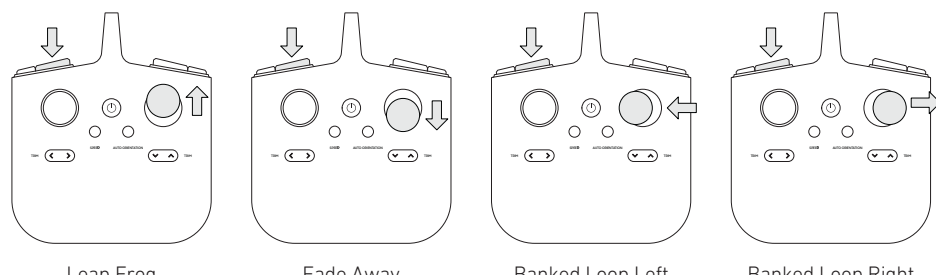


5

PLAY

FLIP STUNT

 Press the FLIP button then press the right joystick in the direction you want to complete a flip stunt.

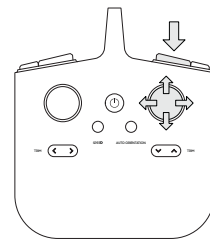


ADJUST THE DIRECTION OF THE DRONE

Drone drifts backwards: Press the Forward Trim button (Figure A).

Drone drifts forwards: Press the Backwards Trim button (Figure B).


Drone drift right: Press the Left Trim button (Figure C).

 Drone drift left: Press the Right Trim button (Figure D).

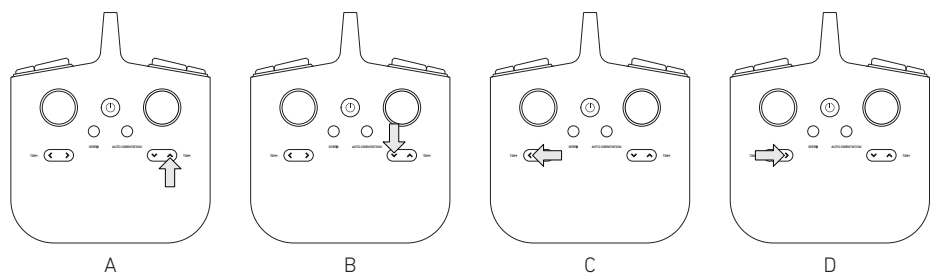

6

 REPLACING PROPELLERS

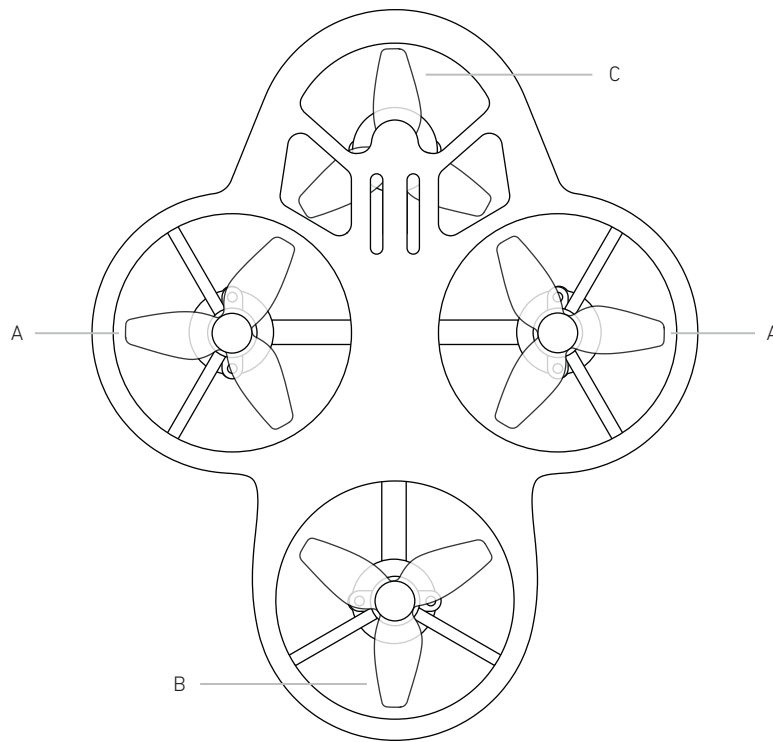

- Only an adult should replace propellers. To remove, pull up the propellers directly.
- Replace propellers by following the diagram.
- There is letter A, B, C on the back of the propellers.

7

CHARGING THE BATTERY

1. The Drone uses a built-in rechargeable battery. Be sure to charge before first use.
2. Attach the USB type-C cable that came included, into a power brick or appropriate power outlet.
3. Connect the other end of the cable to the USB-C opening located on the side of the drone.
4. When charging, the white LED on the drone will turn on and shut off when fully charged. It takes approx 50 minutes for a full charge. The drone can fly for approx 5 minutes on a full charge.
5. When the battery runs low, both the white and red LEDs on the drone will flash rapidly. The remote control will play a short beep sound every 2 seconds. The sound will stop after the drone is powered off or recharged.

Note: While the drone is charging, the drone will not take any input from the remote control even if they are paired.

SAFETY WARNINGS: PLEASE READ BEFORE USE

- Adult assembly required.
- Do not touch spinning propellers.
- Use this item only for its intended purpose.
- Do not expose to extreme temperatures or moisture.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- For indoor use only.
- Use caution and pay attention to your surrounding while operating this item.
- Always turn off when not in use.

8

BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.



BATTERY WARNINGS

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision
- Do not charge with non-rechargeable batteries
- Do not short-circuit the battery supply terminals
- Do not dispose of batteries in fire, batteries may explode or leak.
- Remove batteries (if removable) before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.

9

FCC STATEMENTS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

10