

# PBT9066BK

 
## Installing Batteries

1. Remove the battery cover from the back of the included remote control.
2. Install the included batteries into the compartment, following the polarity (+/-) diagram in the compartment.
3. Replace the battery cover.


## Location of Controls

1. **[MUTE]** Button: Mute/unmute sound
2. **[MIC PRI]** Button: Turn Mic Priority ON/OFF: Gives priority to microphone over music (mic must be plugged in)
3. **[REPEAT]** Button: Repeat single track
4. **[H]** Button:  
**Press:** Skip to previous track/station  
**Press + hold:** Fast backward track (USB or TF/SD card only)/FM freq.
5. **[I]** Button: Play/Pause
6. **[VOL-]** Buttons: Adjust mic volume
7. **[REC]** Button: Start recording
8. **[REC PLAY]** Button: Stop recording
9. **[TREBLE]** Buttons: Adjust treble
10. **[Power]** Button: Exit/enter Standby
11. **[MODE]** Button: Switch input mode
12. **[VOL+]** Buttons: Adjust volume
13. **[H]** Button:  
**Press:** Skip to next track/station  
**Press + hold:** Fast forward track (USB or TF/SD card only)/FM freq.
14. **[LIGHT]** Button: Turn lights ON/OFF
15. **[VOCAL]** Button: Switch between VOCAL ON and VOCAL OFF.
16. **[EQ]** Button: Switch between 6 EQ modes
17. **[BASS+]** Buttons: Adjust bass
18. Number keypad: Select track

## Remote Control

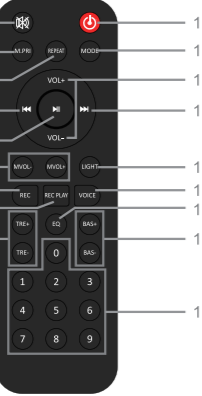

## Important Safety Instructions

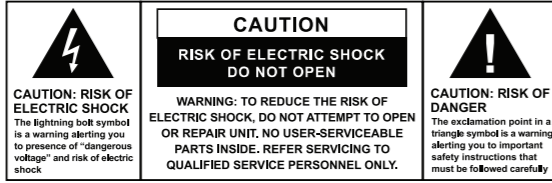 


- CAUTION: RISK OF ELECTRIC SHOCK**  
The lightning bolt symbol in a warning triangle indicates a risk of "dangerous voltage" and risk of electric shock.
- WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT ATTEMPT TO OPEN OR REPAIR UNIT. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.**
- CAUTION: RISK OF DANGER**  
The exclamation mark in a warning triangle indicates a warning alerting you to important safety instructions that must be followed carefully.
- Warning**  
To reduce risk of electric shock, and to ensure safe and proper use, read all safety information before using the device.
- This AC power plug is made to CUL/IEC standards that operates on AC current at 220 - 240 Volts 50 Hz.
  - Follow all instructions. Read all warnings.
  - For indoor use only.
  - Only use with manufacturer-approved accessories, and supplies.
  - Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
  - Keep away from eyes and moisture. Do not submerge in water.
  - Never operate or handle the product or plug with wet hands.
  - Clean only with a dry cloth.
  - Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  - Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  - Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  - Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  - Unplug during lightning storms or when unused for long periods of time.
  - Do not open or attempt to repair the unit yourself should it not be working.
  - Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged or wires are exposed, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
  - **WARNING:** The main plug is used as a disconnect device; the disconnect device shall remain readily operable.
  - **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on apparatus.

## CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN

 - CAUTION:** To reduce the risk of electric shock, do not open the device, there is no party inside for the user. Refer all servicing to qualified personnel.
- The lightning with the arrow symbol in the triangle is a warning sign alerting the user to "dangerous voltage" inside the unit.
- The exclamation mark in the triangle is a warning sign alerting the user of important instructions accompanying the product.
- The Caution mark is located at the back of the device.

## IMPORTANT

- The use of apparatus in moderate climates.
- The Marking plate is located at the back of the device.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.
- Ensure that the ventilation openings is not covered with items such as newspapers, tablecloths, curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Do not expose this appliance to dripping or splashing water.
- Do not place objects filled with liquids, such as glass, vase on the device.
- Do not throw batteries into fire! Respect the environment when disposing of used batteries.
- Batteries should not be exposed to excessive heat such as sunshine, fire or other similar heat source.
- The power plug is used as a disconnect device and must be easily accessible. To be completely disconnected from the power, the plug of the appliance should be accessible during intended use.
- Under the influence of fast transient and / or electrostatic electric phenomenon, the product may malfunction and the user must perform a power reset of the device.




## Compliance Information

- FCC Information**  
This device complies with Part 15 of the FCC Rules.
- Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.
- Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


- Radiation Exposure Information**  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## Rating Label Definitions

 - Direct current symbol.



 This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Southern Telecom is under license.



This symbol represents FCC Declaration of Conformity and compliance.

## Warranty Information

### 90-Day Limited Warranty

**LIMITED WARRANTY TO ORIGINAL CONSUMER**  
This product is supplied and distributed here by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer. Questions against defects in materials and workmanship ("Warranty") see below.

- To obtain warranty service:**
- Visit our customer support portal: [www.southtel.com/support123.com](http://www.southtel.com/support123.com)
  - Select the brand and model of your device
  - Select "Service Request" and fill out the form to begin your inquiry
  - Exchanges require dated proof of purchase from an authorized retailer
- Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

**Warranty service not provided**  
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE, SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR WARRANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT OR REFUND OF THE ORIGINAL PURCHASE PRICE. AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS SAVINGS, DATA OR RECORDS CAUSED BY THE USE, ABUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

 
Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Designed in US / Printed in China  
v1. 12-2020



Have questions? We've got answers.

Visit us at [customersupport123.com](http://customersupport123.com)

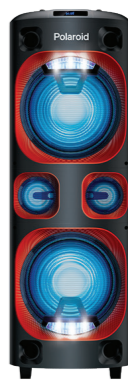

**PBT9066**  
LED Wireless Party Tower

User Manual

## Before You Begin...

### READ CAREFULLY AND KEEP THIS MANUAL

 
**Customer Support**  
For any questions or problems with your product, please visit our website at [SouthernTelecom.com](http://SouthernTelecom.com) and click on **Product Support**.

- Caution**  
To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.
- This device is NOT A TOY. Keep away from children and pets.
  - Do not disassemble, modify, or repair the device.
  - Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
  - Do not submerge in water.
  - Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.

- In the Box**
- PBT9066 - Wireless Speaker (x1)
  - Power Cable (x1)
  - Remote Control (x1)
  - Remote Control Batteries (x1)
  - AUX Cable (x1)
  - Wired Microphone (x1)
  - User Manual (x1)


## Location of Controls

1. **[MIC VOL-]** Knob: Adjust microphone volume
2. **[TREBLE]** Knob: Adjust treble
3. **[BASS]** Knob: Adjust bass
4. **[H]** Button: **Press:** Skip to previous track/station  
**Press + hold:** Fast backward track (USB or TF/SD card only), manually scan backwards (FM radio)
5. **[I]** Button: **Press:** Play/Pause
6. **[EQ/MEGA BASS]** Button: **Press:** Switch between 6 EQ modes  
**Press + hold:** Turn Mega Bass ON/OFF
7. **[H]** Button: **Press:** Play/Pause
8. **[MODE]** Button: **Press:** Scan for stations automatically (FM radio mode)
9. **[STANDBY]** Button: Enter/exit standby mode
10. **[VOLUME]** Knob: Adjust overall volume
11. **[H]** Button: **Press:** Skip to next track/station  
**Press + hold:** Fast forward track (USB or TF/SD card only), manually scan forwards (FM radio)
12. **[GT VOL-]** Knob: Adjust guitar volume
13. **[ECHO]** Knob: Adjust echo of connected guitar or microphone

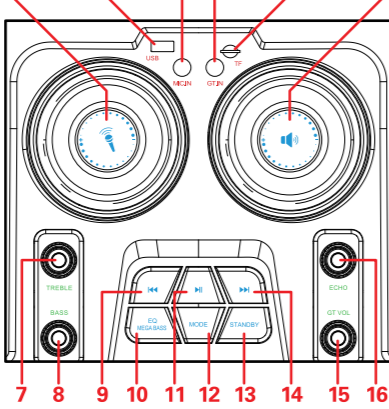

## Location of Controls (cont'd)

 - [Power] Switch:** Power ON/OFF
- [Lights Power] Switch:** Power lights ON/OFF
- [AC IN]** Port: AC Power Port
- [AUX IN]** Ports: AUX Input Ports
- [FMANT]** Port: Radio Antenna

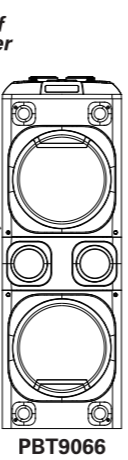

## Getting Started

**Connecting to Power**  
Plug the round connector of the included AC power cable into the AC power port on the back of the speaker. Plug the AC plug into a wall outlet.

- Powering ON/OFF**
- Press the **[Power]** switch on the back of the speaker to power ON or OFF.
  - The speaker will power ON in Standby mode. Press the **[STANDBY]** button on the top of the speaker or the main **[Power]** button on the remote control to exit or enter Standby mode.

**Changing Input Modes**  
Press the **[MODE]** button on the speaker or remote control to switch between input modes. The display screen on the top of the speaker will indicate the mode.

- Adjusting Volume & Playback**
- Adjust overall volume with the **[VOLUME]** knob on the top of the speaker, the remote control buttons, or the controls on a connected device.
  - Press the **[H]** and **[H]** buttons on the speaker or remote control to skip tracks or stations in Bluetooth mode, FM Radio mode, USB mode and TF card mode.
  - Press the **[H]** button to pause and resume playback.

## Adjusting the Sound

- Turn the **[TREBLE]** knob on the speaker or the **[TRE+]** and **[TRE-]** buttons on the remote to adjust speaker treble.
- Turn the **[BASS]** knob on the speaker or the **[BASS+]** and **[BASS-]** buttons on the remote to adjust speaker bass.
- Press the **[EQ/MEGA BASS]** button on the speaker or remote control to switch between 6 different equalizer styles: Pop, Rock, Jazz, Classical, Custom or Normal.
- Press + hold the **[EQ/MEGA BASS]** button to turn Mega Bass ON or OFF.

- Bluetooth Pairing**
1. Switch the speaker to Bluetooth mode.
  2. Set your mobile device to search for Bluetooth devices. When it appears, select **PBT9066BK** from the list of found devices.
  3. After a successful pairing, a tone will be heard and you will be able to play music on the speaker.

In Bluetooth mode, volume & playback can be adjusted using the controls on your paired device, the speaker, or the remote control.

- Press + hold the **[MODE]** button to turn Bluetooth ON or OFF.

**Using the Speaker Lights**

- Press the **[Lights Power]** switch on the back of the speaker to turn the speaker lights ON or OFF.

## Using the FM Radio

Extend the Radio Antenna on the back of the speaker. Switch to FM mode. The display screen will show the current FM frequency.

- All radio functions are controlled by the buttons on the speaker or remote control.
- Press and hold the **[H]** button to start automatically scanning and saving available radio stations. If not stopped, it will make a complete scan and return to the first saved station.
  - Press the **[H]** and **[H]** buttons to flip through saved stations.
  - Press + hold the **[H]** and **[H]** buttons to manually scan forward or backward.

## Using the AUX Input

Plug the left (L) and right (R) connectors of the included AUX cable into the corresponding AUX input ports on the back of the speaker. Plug the 3.5 mm connector into the headphone jack or 3.5 mm AUX output on your device.

Switch to AUX mode.

In AUX mode, all playback will be controlled by your connected device.

## USB Device and TF Card Input

Insert a USB device, such as a USB flash drive, or micro SD/TF card into the USB or TF card input ports on the top of the speaker.

**Note:** You may need to have files stored in the root folder of the device. Check your device's manufacturer information for more details.

Switch to USB or TF mode. The speaker will begin playing music off the device.

In USB and TF mode, playback and volume adjustment will be controlled with controls on the speaker or remote control.

## Using a Guitar

Plug the output connector of a guitar (*not included*) into the GT-IN guitar input port on the top of the speaker.

- Turn the **[GT VOL]** knob on the speaker to adjust guitar volume (**Note:** make sure the **[MIC VOL]** is not set to 0. This will cause the **[GT VOL]** knob to not work.)
- Turn the **[ECHO]** knob on the speaker to adjust guitar echo.

## Recording Sound

1. Plug in the microphone or a guitar.
2. Adjust the speaker sound to your liking using the speaker controls described in the **Adjusting the Sound** section of this manual.
3. Insert the USB device or TF/SD card that you would like to record on into the speaker. If it's your first time recording on this device, the system will automatically create a folder named "RECORD" to save the recorded files. Make sure the file system of the device is FAT32.
4. Press the **[REC]** button on the remote control to begin recording. The display screen will show the recording time.
5. When you are finished recording, press the **[REC PLAY]** button on the remote control to stop and play.

## **Warning Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.