



INSTRUCTION MANUAL

Model: CF4S

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS FAN

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


1. Only use this fan as described in this owner's guide, other non-recommended use may cause fire, electric shock, or injury.
2. Keep the fan out of the reach of children. This fan is not for use by children.
3. Do not leave the fan running unattended.
4. Never insert fingers, pencils or any other object through the guards when fan is running.
5. Do not disassemble or modify the product for any other purpose.
6. Place this product away from curtains, draperies, tablecloths and other fabrics, since they may be drawn into the fan, damage the motor and/or cause a fire.
7. No part of this product should be placed near furnaces, fireplaces, stoves or other high temperature heat sources.
8. A battery pack is built in the product. Do not dispose the product in a fire as it may explode.
9. If the fan will not be used for a long time, please charge the battery completely and then store in a dry place.
10. Unplug the USB cable when charging is completed.
11. If strong heat occurs during charging, stop charging or using the product and contact the customer service center.
12. If you connect the USB cable to an adaptor for re-charging, please make sure the power output of the adaptor cannot exceed 5V/2A.

SAVE THESE INSTRUCTIONS

FAN OPERATION

1. Use the USB cable to charge the battery before using the fan. If you connect the USB cable to an AC adaptor for re-charging, please make sure the power output of the adaptor cannot exceed 5V/2A.
2. The battery indicator will blink when the fan is in charging status. After battery is completely charged, the battery indicator will stop blinking.
3. Press the power button to start the fan, the power indicator will turn on in white. The battery indicator will indicate the remained battery volume.
4. Press the power button once at a time to switch from different speed settings. There are 4 speed settings in this fan.
5. Press and hold the power button for 1 second during operation to turn off the power.
6. The fan head can be tilt up and down within the angle of 3° - 17°.
7. For Wi-Fi connection and voice control setup thru Amazon Alexa or Google Home, please refer to the Wi-Fi Setup Instruction Manual in the packaging box.

Control Panel

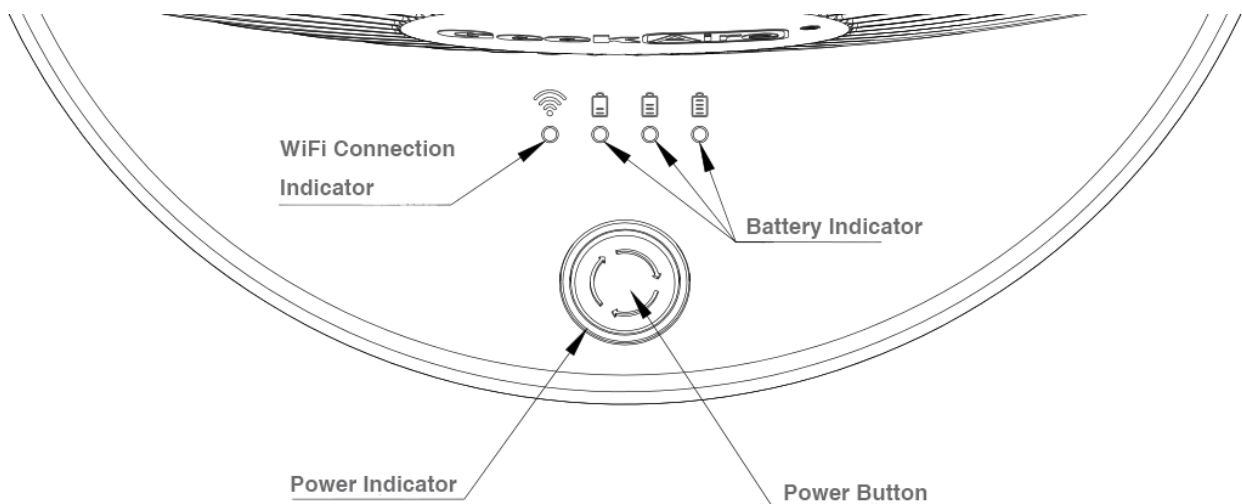

Specification

Model	CF4S
Speed	4 speeds
Output Power	9W
Input	DC 12V / 1A
Battery	Lithium-ion 18650 / 5000 mAh
Work Time	3.5 hours
Charge Time	3.5 – 5 hours
Smart Function	Wi-Fi / Amazon Alexa / Google Home

CLEANING AND MAINTENANCE

- Always turn off and unplug the fan before cleaning.
- Use only soft, damp cloth to gently wipe the surface of the fan.
- To clean between the grilles, we recommend using a pipe cleaner, vacuum cleaner or compressed air to gently remove the dust.
- DO NOT immerse the fan into water and never allow water to drip into the motor housing.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, you may leave the fan assembled and covered to protect it from dust. Store the fan in a cool dry place.

DISPOSAL

We encourage you to participate in electronics recycling program, so please observe local regulations for proper disposal of discarded electronic products.

FCC WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

WARNING!

DO NOT ATTEMPT TO OPEN OR REPAIR THE FAN YOURSELF. DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY

LIMITED WARRANTY

HOME EASY LTD warrants to the original consumer or purchaser this Geek Aire Personal Air Circulator is free from defects in material or workmanship for a period of One (1) year from the date of purchase. If any such defect is discovered within the warranty period, HOME EASY LTD, at its discretion, will repair or replace the Product at no cost. This limited warranty is good only to the original purchaser of the product and effective only when used in United States.

For warranty or repair service: Call 844-801-8880 and choose the appropriate prompt, or email info@homeeasy.net. Please have your Product's model number, your name, address, city, state, zip code and phone number ready.

NO OTHER WARRANTY IS APPLICABLE TO THIS PRODUCT. THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED. INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW. IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S.DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE. INCLUDING WITHOUT LIMITATION. LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE, SOME STATES AND/OR TERRITORIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU, THE ORIGINAL PURCHASER, SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR TERRITORY TO TERRITORY.

THIS LIMITED WARRANTY DOES NOT APPLY TO

1. Failure of product to perform during power failures and interruptions or inadequate electrical service
2. Damage caused by transportation or handling.
3. Damage caused to the product by accident, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accident, alteration, misuse, abuse, or improper installation, repair, or maintenance. Improper use includes using an external device that alters or converts the voltage or frequency of electricity
5. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts.
6. Normal maintenance as described in the User's Guide, such as cleaning or replacing filters, cleaning coils, etc.
7. Use of accessories or components that are not compatible with this product.

The cost of repair or replacement under these excluded circumstances shall be borne by the consumer.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant

to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.