

Instructions

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following :

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
2. Do not let lamps rest on the supply cord or on any wire.
3. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
4. Do not cover the product with cloth, paper or any material not part of the product when in use.
5. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting(GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
6. This seasonal use product is not intended for permanent installation or use.
7. Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
8. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
9. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
10. Do not use this product for other than its intended use.
11. Do not hang ornaments or other objects from cord, wire, or light string.

12. This product has a polarized plug(one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fitfully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace.

13. Read and follow all instructions that are on the product or provided with the product.

WARNING

- **ELECTRIC PRODUCT.** Keep away from children. Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The light is very bright. Do not shine directly into eyes.
- Use only with enclosed Class 2 Transformer model JT-DC050V1000-C.

IMPORTANT

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems. Keep away from heaters and other heating sources! Please note that damages caused by manual modifications on the device or unauthorized operation by unqualified persons are not subject to warranty. Keep young children and amateurs away from the device!

SAVE THESE INSTRUCTIONS.

 
PACKING LIST

Projector	1pc
Stake	1pc
Stand	1pc
Remote Controller	1pc
Instruction	1pc

ASSEMBLY INSTRUCTIONS


For Stake

1. Gently move contents from packaging and lay out in a clear area.
2. Loosen the plastic screw in projector housing to adjust screw post.
3. Attach stake to projector by aligning the stake to screw post.
4. Adjust the angle of projector.
5. Plug power cord into standard wall socket.

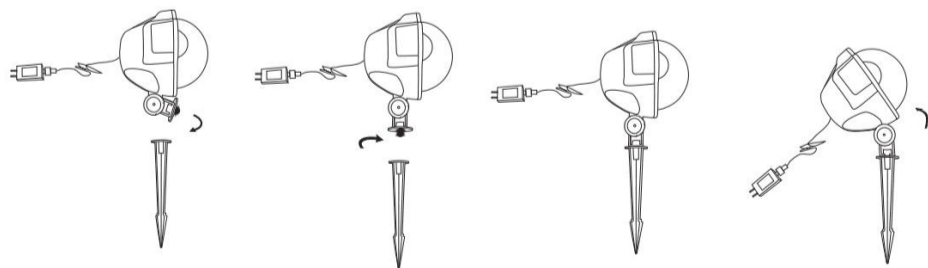



For Stand

   1. Gently move contents from packaging and lay out in a clear area.
2. Loosen the plastic screw in projector housing to adjust screw post.
3. Attach stand to projector by aligning the stand to screw post.
4. Adjust the angle of projector.
5. Plug power cord into standard wall socket.

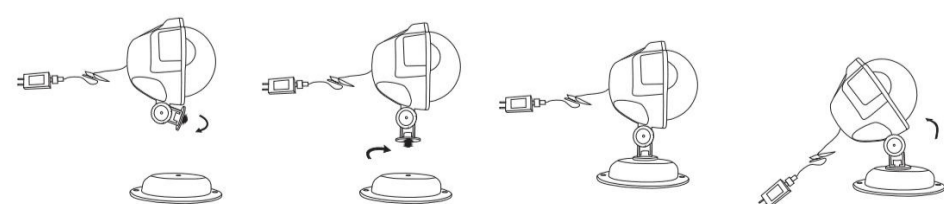





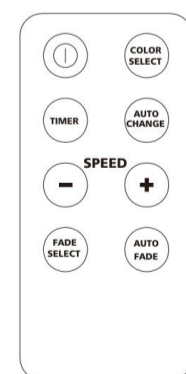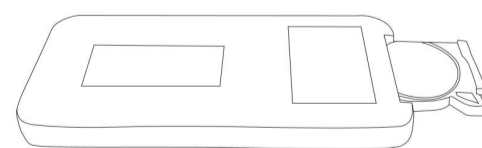



BATTERY CAUTION

- Keep this product's battery out of the reach of small children or pets. if ingested, contact a physician immediately.
- Use only same type CR2032 3V Lithium battery for replacement, use of other batteries may damage remote.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the battery is installed correctly with regard to polarity (+ and-).
- Remove battery from equipment which is not to be used for an extended period of time.
- Remove used battery promptly.
- When the remote control begins to lose its sensitivity, check the batteries and replace if necessary.
- Battery is pre-installed in the remote control. Pull plastic tab from bottom of remote when ready to use.



REMOTE FUNCTIONS

	Pressing to turn the projector on; pressing again to turn the projector off.
	Choosing color effects of 10 color combination.
	Pressing to turn the timer mode on, the projector will flash three times to confirm timer is set and stay on for 6 hours and then turn off for 18 hours. Pressing again the timer button, the projector will flash once to confirm the timer mode is turned off.
	Choosing the auto color change option.
	Decreasing the speed of the motion, 4 speeds for selection, including in static mode.
	Increasing the speed of the motion.
	Choosing between the fade in and fade out options.
	Choosing the auto fade option.

USE AND CARE INSTRUCTIONS

- Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- Do not use seasonal products unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product, its wires, or on extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.
- Read and follow all instructions that are on the product or provided with the product.
- SAVE THESE INSTRUCTIONS.**

Use and Care Instructions

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well Secured and stable.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

CAUTION

- To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify string.
- To reduce the risk of fire or electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and b) Do not mount or support strings in a manner that can cut or damage wire insulation.

Model No.: PJ005

TROUBLESHOOTINGS

If projector does not work:

- Make sure the projector is connected to the transformer. Make sure connectors are fully inserted into the transformer, and tight.
- Make sure the transformer is plugged into a 120V AC outlet.
- Make sure the outlet has power (check to see if any switches control the outlet).
- Reset the GFCI outlet in case it activated.

If projector does not work:

- This could be due to the built in timer function. The light will turn off after a predetermined amount of time depending on if the timer function is active. Pressing the "TIMER" button on the remote disables this feature. Note: Projector will blink once to signify timer function is no longer active

If the projector has no response when remote buttons are pressed:

- Make sure the light has power (see first troubleshooting step – "If lights do not work").
- Make sure you fully depress the buttons on the remote (red LED on top of remote should flash when button is pushed).
- If the steps above do not work, replace the battery in the remote with a new battery using the remote control battery installation instructions above.

If projector turns on or off at the wrong time:

- Please insure the "TIMER" button was pressed at desired start time. The projector only has a timer function of 6 hours on/ 18 hours off. Once button is pressed, Projector timer will set. (The projector will flash three times when TIMER is enabled and flash once when TIMER is disabled.)

To stop lights from changing colors automatically:

- Please press "COLOR SELECT" button on remote to select your desired color.

To stop lights from changing fade functions automatically:

- Please press "FADE SELECT" button on remote to select your desired fade function.

Low-voltage Transformer for Outdoor Use Instruction Manual



These instructions are for the outdoor use low-voltage transformer Model: JT-DC050V1000-C

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be practiced including the following:

- READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- Read and follow all instructions that are on the product or provided with the product.
- Do not use an extension cord.
- Reference the National Electrical Code, ANSI/NFPA 70 and Canadian Electrical Code (CEC), specifically for the installation of wiring and clearances from power and lighting conductors.
- Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- Do not install or use within 10 feet of a pool.
- Do not use in a bathroom.
- WARNING:** Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
- WARNING:** Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
- WARNING:** Risk of Electric Shock. Mount the unit at a height greater than 1 foot (0.3 m) from the ground surface.

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

A. General Information

- Input voltage: 120V AC/60Hz, Output: 5V DC, 1A
- Protective device: Built in fuse: The transformer has a built in fuse which automatically cuts power to the transformer if it short circuits due to unstable input power, overloaded output, and other reasons. This fuse is a one shot device and cannot be reset, please replace transformer.

B. Installation

- This product can be installed in either indoor or outdoor locations, but avoid splashing water from falling onto, or reaching the transformer.
- Please install the connector of end product into the output socket of transformer following the end product instructions.
- General information –
 - Damage may occur to this product if used in extreme temperatures.
 - Do not change the wiring on the end product.
 - Please use correct voltage for your product by checking the nameplate information on the transformer.
- After finishing the installation, please plug into a 120V AC/60Hz electrical outlet.

WARNING: When used outdoors, install only to a Class A GFCI protected receptacle where the transformer is protected from water or rain while plugged in (completely covered by the outlet box while plugged in). Do not use where only part of the transformer is protected from rain or water (outlet boxes where there is only a partial cover shall not be used for outdoor installations). This power unit is intended to be correctly orientated in a vertical or floor mount position. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3(B)/NMB-3(B).

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.