



## USER MANUAL

# NoteBook 14

PN1404P

## Manual Book

### INTRODUCTION

#### Overview

If you have questions about the operating systems or programs then please consult the appropriate manuals. A few notes and warnings in bold are used throughout this guide that you should be aware of in order to complete certain tasks safely and completely.

#### NOTES

Tips and information for special situations.

#### IMPORTANT

Vital information that must be followed to prevent damage to data, components, or persons.

#### WARNING

Useful information that must be followed for safe operation.

#### DANGER

Do not even do this steps

#### What's in the box

- The packaging box contains the following items:
  - Notebook
  - Manual Book
  - AC Adapter
  - Earphone

## SAFETY INSTRUCTIONS

### Precautions

Follow these precautions and instructions:

- Do not place the notebook underneath heavy loads or in an unstable position.
- Do not use or expose the notebook around magnetic fields as magnetic interference may affect the performance of the notebook.
- Do not expose the notebook to high levels of direct sunlight, high-humidity or wet conditions.
- Do not block the air vents in the notebook or impede the airflow in any way.
- Do NOT expose to or use the notebook near liquid, raining area, or moisture.
- Do NOT use the modem during electrical storms.

#### NOTE

This Notebook PC should only be used in environments with ambient temperatures between 5°C (41°F) and 35°C (95°F).

#### Maintenance

Turn OFF and disconnect all external peripherals to prevent damage to the connectors. To prevent damage to the product during transport, please turn off the notebook.

For safety and convenience when traveling, please follow these instructions:

- Backup all needed files on your hard disk before traveling.
- Recharge your battery overnight to ensure full battery power before you leave.
- Do not forget to bring along the AC adapter.
- Check the voltage rating and the outlet type of your destination. If the power cord of the adapter is different, then you need to purchase a suitable one.
- Carry your notebook in its carrying case or in a briefcase. Never check-in the notebook as a luggage.
- Protect your notebook from dirt, water, shock, and scratches.

#### IMPORTANT

Do not pick up the notebook by its display/panel

Follow this step to prolong your battery life:

- Do not try to disassemble, crush, puncture and drop your notebook.
  - Recharge batteries only as described in this manual and only in ventilated areas. Never use an external charger other than the one supplied with your notebook.
  - Do not leave your notebook in hot locations, it can make the battery broken.
  - Do not keep a notebook more than 2 months without recharge the batteries, or recharge a battery in a long time because it can damage the battery.
- You can save your hard disk life with these steps:
- Always back up your data files from your hard disk.
  - Install the virus detecting program to monitor virus that could tamper your files.
  - Use scandisk once in a while to correct any errors found in the directory and your files.
  - Do not shift the notebook suddenly while the hard disk is being accessed, especially do not jar the hard disk as this may cause a hard disk crash.

- Use hard disk maintenance programs like Disk Defragmenter of Windows®. It will reorganize your hard disk at once.
- Place the notebook straight with a comfortable distance from your body
- Adjust your chair comfortably.
- Keep your fore-arms, wrists, and hands in a relax position.

### LEARNING THE BASICS

#### Using keyboard

Your notebook is equipped with a standard keyboard, there are a number of extra features and function controls on the built-in keyboard including Windows® system hot keys.

Function keys: There are 12 function keys used in combination with the Fn key, function keys marked with icons execute specific functions.

Ctrl, Fn, Alt keys: Do different things depending on the program you are using.

Character keys: Have the same function as notebook display, except Caps Lock that can change the letter keys to upper case. Caps Lock LED on the keyboard indicator panel illuminates when you press the Caps Lock.

Numeric keys: To activate press Fn+Num Lock simultaneously.

### GETTING STARTED

Your notebook PC comes with a universal AC-DC adapter. That means you may connect the power cord to any 220V-240V outlets without setting switches or using power converters.

#### IMPORTANT

Using the wrong AC power could damage your notebook. Never pull directly on the power cable to unplug it. Hold the power plug when removing the cable from outlet.

#### Turning your notebook on and off

To turn on your notebook, press and release the power button. To turn off, use the Windows shutdown command. Click on **Start** menu and click **Shutdown**. You can also put the computer in sleep mode.

#### IMPORTANT

To avoid data loss, never turn off the notebook while a drive is in use.

#### NOTE

- When turning on the notebook for the first time, do not turn it off until the operating system has loaded completely.
- If system errors occurred, you can press ctrl+alt+del at the same time to enter the End Task menu or you can press power button for 8 seconds to turn the notebook off.

#### Selecting a place to work

Place the notebook in flat and wide surface to provide adequate ventilation and prevent overheating. Protect your notebook from:

- Equipment that generates a strong electromagnetic field, such as stereo speakers.
- Dust, humid place, and direct sunlight.
- Liquids and corrosive chemicals.

#### Keeping yourself comfortable

To reduce strain and stress injuries do this steps:

1. Avoid placing your notebook in front of a bright light that could reflect directly to your eyes.

## Quick Installation Guide

### INTRODUCTION

No.	Item	Description
1	Button Battery	The power source when the notebook is closed.

### BASIC ITEMS

Notebook AC Adapter Manual Book/QIG

### CONNECT TO PERIPHERALS

1. Connect the AC adapter.
2. Connect the power cable.

1. Insert USB flash/cable to any USB ports in the notebook.
2. Operating system will either auto load the driver from the system or prompt you to install the driver.

#### NOTE

When using the power cable, insert the power cable completely into the AC adapter.

### HDMI Port

1. Connect HDMI cable to the HDMI port of the notebook.
2. Operating system will auto load the connection or prompt you to install the driver.

#### NOTE

The items in the package may vary depending on model purchased. Some items may be replaced with similar products and the color of items may differ from this document.

### Memory Card

Insert memory card all the way into the slot. To remove, simply pull out the memory card.

### Discharging the battery completely

Use the notebook with battery power until it shuts down automatically due to a low battery. Disable the **Power Options** function in the control panel, especially any Alarms (uncheck the tick boxes) and **Schermes** (change all the settings to Never). When the battery nearly runs out, save and close any critical files immediately.

### Fully charging the battery

When charging the battery, don't stop until the LED charging indicator off.

### BIOS CONFIGURATION

You may need to run the BIOS Setup when:

- An error message appears on the screen during the system booting up and is requested to run SETUP.
- You want to change the default settings for customized features.
- You want to reload the default BIOS settings.

#### How to run BIOS setup

To run the BIOS Setup Utility, turn on the notebook and press the [Del] or [F2] key during the POST procedure.

If the message disappears before you respond and you still wish to enter Setup, either restart the system by turning it OFF and ON, or simultaneously pressing [Ctrl]+[Alt]+[Del] keys to restart.

#### NOTE

Be noted that the screen snaps and setting options in this chapter are for your references only. The actual setting screens and options on your notebook may be different because of BIOS update.

- The drivers, BIOS, BIOS and utilities bundled in the support DVD may vary by models and are subject to change without notice.

#### IMPORTANT

Do not make any changes unless you are sure of what you are doing. Many of the settings are required by system, and changing them could cause it to become unstable or worse.

### Info menu

The Info menu contains the basic information of the system and shows some system information, such as the BIOS version, CPU type and speed, and the system memory.

### Main menu

The Main menu contains the basic configuration settings of the system. Such as: System Time & Date - The hour is displayed in 24-hour format. The values set in these two fields take effect immediately.

Total Memory - This field shows the memory size of system total memory.

### Advanced menu

The Advanced menu contains advanced I/O (Input-Output) configuration settings of the system. Example: enabling/disabling AHCI mode.

### Boot menu

The Boot menu contains the boot configuration settings of the system. Set Boot Priority - Set the sequence of boot devices.

The system will try to boot from the first device. If it is not available, the system will try the next boot device.

### Security menu

Security menu contains the security settings, which safeguard your system against un-authorized use.

Administrator Password - This set of password controls the system supervisor's access to the whole BIOS setup utility.

User Password - This set of password controls the system user's access to the whole BIOS setup utility. If the password on boot is needed, the password have to be arranged first. Otherwise the password can not be activated.

#### NOTE

- Password Supervisor must be created before a password to turn on the notebook is made.
- To clear existing password press **Enter** and type the existing password. Then press **Enter** for the new password (without typing any password entry) and **Enter** again to confirm the password clearance.

### Save & Exit menu

Save Changes and Reset - Save the changes you have made and exit BIOS setup. After finishing with your settings, you must save and exit so that the new settings can take effect.

Discard Changes and Reset - Exit BIOS setup without saving the changes you have made.

Discard Changes - Get the default values of BIOS. Restore Defaults - Load the defaults values of BIOS.

### TROUBLESHOOTING

#### If notebook will not start

- Make sure the AC adapter and power cable are attached properly.
- Make sure the battery is fully charged.
- Make sure the memory is attached correctly.
- Make sure there is no problem with your hard disk.

### Display

If the screen does not display properly go on **Properties menu => Appearance** (change color) or **Properties => Setting** (display resolution).

### Sound system

- If you do not hear any sound from the notebook, adjust the volume control. If you are using headphone or speakers, check that they are securely connected to your notebook.

- If the notebook emits a loud, high-pitched noise. This is the feedback through the microphone and speakers. It occurs in any sound system when input from a microphone is fed to the speakers and the speaker volume is too loud. Adjust the volume control.

### Printer

If the printer can not work:

- Make sure the printer is on, and the driver is already installed.
- Make sure the cable printer is connected to your notebook.
- Make sure the paper is loaded in your printer.

### Virus

1. Install an **Anti-Virus** program and keep the **definitions file** (the file which tells your program which viruses to look for) up to date.

**Anti-Virus** programs are commercially available and the **definitions file** updates are usually downloadable **directly** from the internet.

2. Be careful when opening e-mail from sources you don't know. Viruses are often triggered from within e-mail attachments so take care when opening any attached file.

You can configure most **Anti Virus** programs to check **e-mail attachments**.

### Quick Installation Guide

#### INTRODUCTION

No.	Item	Function
1	Welcome	The built-in webcam for taking a picture or video <b>optional feature</b> .
2	Keyboard	To input characters and numbers.
3	Touchpad and Buttons	Touch-sensitive pointing device which functions as well as computer mouse.

No.	Item	Desk-Top
1	RAM	Random Access Memory
2	USB 2.0	Connect a USB device (Mouse, USB, Camera)
3	Headphone & microphone jack	Connect headphone, microphone or speaker into this jack.
4	Memory card reader slot	To transfer pictures, music and data between mobile PC and other devices (e.g. digital cameras, MP3 players, etc.)

No.	Item	Desk-Top
1	FireWire	Connect a USB device (mouse, USB, camera)
2	LAN	Connect to an AC Adapter.
3	Power HDMI	Connect to a display device (Projector, A/V Receiver or any compatible device).
4	Keypad/track pad	Anti-tilt key

### CONNECT TO PERIPHERALS

#### CONNECT TO PERIPHERALS

1. Connect the AC adapter.
2. Connect the power cable.

#### NOTE

When using the power cable, insert the power cable completely into the AC adapter.

### HDMI Port

1. Connect HDMI cable to the HDMI port of the notebook.
2. Operating system will auto load the connection or prompt you to install the driver.

#### NOTE

The items in the package may vary depending on model purchased. Some items may be replaced with similar products and the color of items may differ from this document.

### Memory Card

Insert memory card all the way into the slot. To remove, simply pull out the memory card.

### FCC ID: 600000000000

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.