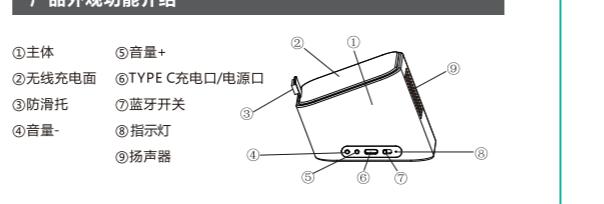
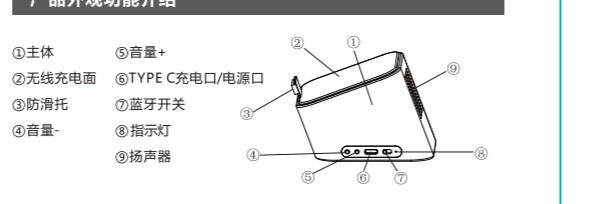


<h1>使用说明书</h1> <p>使用本产品前请仔细阅读本使用说明书，并妥善保管。</p> <h2>小巧便携 蓝牙音响&无线充电器</h2>	<p>尊敬的客户： 非常感谢您选用无线蓝牙音响&无线充电器，请在使用前，详细阅读本说明书，正确操作使用，以更好的发挥产品优越性能。请保管好此说明书。</p> <p>注意事项</p> <ul style="list-style-type: none"> ● 请在常温环境中存放以及使用本产品； ● 请勿将本产品暴露在雨中或潮湿环境中； ● 请勿丢弃，避免因跌落造成产品损坏； ● 请勿自行拆解、修理和改造本产品； ● 产品内置锂电池，请勿随意丢弃或置于火中，以免引起危险！ 	<p>温馨提示</p> <ol style="list-style-type: none"> 1. 避免严重撞击主机，连接符合安规的电源； 2. 为有利于延长无线音箱寿命和你的身心健康，请不要在长时间大音量的环境下听音，以免损害你的听力； 3. 出现故障时，请立即拔掉USB插头，防止元器件损伤； 4. 电量不足会影响蓝牙距离或蓝牙容易断开，请及时充电。 <p>产品外观功能介绍</p> 	<p>操作顺序</p> <p>蓝牙音响使用</p> <ul style="list-style-type: none"> ● 锂电池充电时⑧红灯亮，充满时⑧红灯灭； ● 打开电源开关⑦搜索蓝牙设备⑧一秒间隔闪一次； ● 选择蓝牙设备名：Y.Creator； ● 蓝牙配对后⑧一秒间隔闪并有配对声响； ● 低电压警报：滴警告声连续5次后关机。 <p>Play Mode Instruction</p> 	<p>产品参数</p> <p>产品类型：蓝牙音响&无线充电器 功能用途：无线充电、无线蓝牙音乐播放 蓝牙规格：Bluetooth V5.0 传输距离：20m (因环境因素及连接的蓝牙设备不同而不同) 充电容量：800mAh/3.7V 电源输入：DC5-12V 内置电池：锂电池 输出功率：3W 无线充电规格：A2DP v1.3, AVRCP 输入：DC5V=2.0A9V1.5A 12V1.5A 输出：DC5V-1.0-1.5A9V1.0A12V1.25A 功率：5W 10W 15W (Max) 可满足2~8mm充电距离 过压保护、过热保护、过流保护、FOD异物检测 使用温度：0~45°C</p> <p>外形尺寸：72x72x82mm 重量：约270克</p>	<p>系统组成</p> <ol style="list-style-type: none"> 1. 蓝牙音响&无线充电器 1份 2. TYPE C 电线 1份 3. 产品说明书 1份 <p>常见问题解决方法</p> <table border="1"> <thead> <tr> <th>问题</th> <th>解决方法</th> </tr> </thead> <tbody> <tr> <td>多次连接配对不成功</td> <td>1. 检查蓝牙音箱是否处于搜索状态，或重新开机。 2. 周边蓝牙设备太多，造成搜索困难，关闭其他蓝牙设备。</td> </tr> <tr> <td>声音小或失真</td> <td>1. 检测蓝牙设备音量，调节其音量至合适位置。 2. 电池电压低请充电。</td> </tr> </tbody> </table>	问题	解决方法	多次连接配对不成功	1. 检查蓝牙音箱是否处于搜索状态，或重新开机。 2. 周边蓝牙设备太多，造成搜索困难，关闭其他蓝牙设备。	声音小或失真	1. 检测蓝牙设备音量，调节其音量至合适位置。 2. 电池电压低请充电。	<table border="1"> <thead> <tr> <th>问题</th> <th>解决方法</th> </tr> </thead> <tbody> <tr> <td>音量出现断音</td> <td>1. 超出蓝牙音箱有效连接距离，或蓝牙音箱孔与蓝牙设备有障碍物。 2. 重新开机。</td> </tr> <tr> <td>蓝牙状态指示灯不亮</td> <td>1. 表示电池电量不足，请充满再用。 2. 重新开机。</td> </tr> <tr> <td>蜂鸣器滴滴响</td> <td>1. 手机充电线是否正对充电面，手机充电线选择适当位置。 2. 手机与充电线之间是否有金属物。</td> </tr> </tbody> </table>	问题	解决方法	音量出现断音	1. 超出蓝牙音箱有效连接距离，或蓝牙音箱孔与蓝牙设备有障碍物。 2. 重新开机。	蓝牙状态指示灯不亮	1. 表示电池电量不足，请充满再用。 2. 重新开机。	蜂鸣器滴滴响	1. 手机充电线是否正对充电面，手机充电线选择适当位置。 2. 手机与充电线之间是否有金属物。
问题	解决方法																			
多次连接配对不成功	1. 检查蓝牙音箱是否处于搜索状态，或重新开机。 2. 周边蓝牙设备太多，造成搜索困难，关闭其他蓝牙设备。																			
声音小或失真	1. 检测蓝牙设备音量，调节其音量至合适位置。 2. 电池电压低请充电。																			
问题	解决方法																			
音量出现断音	1. 超出蓝牙音箱有效连接距离，或蓝牙音箱孔与蓝牙设备有障碍物。 2. 重新开机。																			
蓝牙状态指示灯不亮	1. 表示电池电量不足，请充满再用。 2. 重新开机。																			
蜂鸣器滴滴响	1. 手机充电线是否正对充电面，手机充电线选择适当位置。 2. 手机与充电线之间是否有金属物。																			

<h1>User Manual</h1> <p>Before using this product, please read this operating manual carefully and keep it properly.</p> <h2>PORTABLE BLUETOOTH SPEAKER & WIRELESS CHARGER</h2>	<p>Dear customer: Thank you very much for purchasing our wireless speaker. Please read this user guide carefully before using the product to ensure you are getting the most out of this product. Please keep this instructions safe for future reference.</p> <p>Attention</p> <ul style="list-style-type: none"> ● Store and use this product at room temperature. ● Do not expose this product in the rain or humid environment. ● Do not throw it to avoid the damage caused by dropping. ● Do not disassemble, repair or modify this product. ● This product comes with built-in lithium battery. Keep away from fire to avoid danger of injury. 	<p>Tips</p> <ol style="list-style-type: none"> 1. To avoid damaging this product, only connect it to a compatible or certified power supply. 2. To prolong its service life and protect your health, please do not listen to music at high volume for a long time, so as not to impair your hearing. 3. If malfunction occurs, please immediately shut off the power and unplug it to prevent damage to the speaker and other components. 4. Please charge it in time when electricity shortage occurs to avoid influence to the transmission distance and connection of BT. <p>Product Appearance and Function Introduction</p> 	<p>How to use</p> <p>Bluetooth speaker using The red indicator light⑧ is on when charging, and it'll off when full charged. Turn on the power switch⑦, Then search for Bluetooth, the indicator light⑧ flashes once per second. Choose the Bluetooth device(Name: Y. Creator) After the Bluetooth device pairing, the indicator light⑧ flashes once per 2 seconds with a pairing sound. Low voltage alarm: The drop warning sound for 5 consecutive times, then the power be turned off.</p> <p>Play Mode Instruction</p> 	<p>Product Parameters</p> <p>Product type: Bluetooth Speaker & Wireless Charger Function: Wireless charge, Bluetooth play Bluetooth Version: Bluetooth v5.0 Distance: 20m (Depending on environmental factors and connected Bluetooth devices) Charging capacity: 800mAh/3.7V Built-in battery: Li-ion battery Output power: 3W</p> <p>Wireless charger version</p> <p>Wireless charger: A2DP v1.3, AVRCP Input: DC5V=2.0A9V1.5A 12V1.5A Output: DC5V-1.0-1.5A9V1.0A12V0.85A Power: 5W/75W/10W/Max) Charging distance: 2-8mm Overvoltage protection, overheat protection, overcurrent protection, FOD foreign matter detection Operating temperature: 0~45°C Dimensions: 72X72x82mm Net Weight: 270 g</p>	<p>Contents of Package</p> <p>Bluetooth speaker & wireless charger-----1 pc Type C USB cable-----1 pc User manual-----1 pc</p> <p>Common Problem & Solutions</p> <table border="1"> <thead> <tr> <th>Problem</th> <th>Solutions</th> </tr> </thead> <tbody> <tr> <td>Failed to connect for many times</td> <td>1. Check if the speaker is in searching state, or just restart it. 2. It is difficult to search when there are too many devices. Please turn off other BT devices.</td> </tr> <tr> <td>Low sound or sound distortion occurs</td> <td>1. Check the volume of BT device and adjust it to a suitable volume. 2. Low voltage, please charge it.</td> </tr> </tbody> </table>	Problem	Solutions	Failed to connect for many times	1. Check if the speaker is in searching state, or just restart it. 2. It is difficult to search when there are too many devices. Please turn off other BT devices.	Low sound or sound distortion occurs	1. Check the volume of BT device and adjust it to a suitable volume. 2. Low voltage, please charge it.	<p>Problems</p> <p>Unstable Signal Indicator light is not on when the speaker is on Bluetooth status.</p> <p>Solutions</p> <p>Check if it is beyond the operating range or there are any obstacles between the speaker and Bluetooth devices. It means the battery power is low, please charge it during play. 1. Confirm if the mobile phone charging surface is facing the charging surface, and select an appropriate position for the mobile phone. 2. Check if there are any metal foreign matters between the mobile phone and the charging panel.</p> <p>Bluetooth "滴滴" loooping sound</p> <p>Solutions</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Relocate or reorient the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation. Changes or modifications not expressly approved by the responsible party for compliance could void the user's authority to operate the equipment.</p>
Problem	Solutions											
Failed to connect for many times	1. Check if the speaker is in searching state, or just restart it. 2. It is difficult to search when there are too many devices. Please turn off other BT devices.											
Low sound or sound distortion occurs	1. Check the volume of BT device and adjust it to a suitable volume. 2. Low voltage, please charge it.											