K6 Smartband

Operation Manual



Thank you for choosing this product, please read the operation manual carefully before use.

English Version ----- -16-

日本语バージョン ------ -33-

Setting

Use "VeryFit", on iOSor Android smart phone to set the wristband as follows:

Note: hardware and system of devices should meet the requirements:








iOS 9.0 & Above


Andriod 6.0 Above Support Bluetooth4.0

1. Product activation and installation

The product must be activated by charging before initial use, and then charge the product to ensure normal power supply. The hand ring will automatically power on. Take out: Pull open the strap and take out the bracelet body

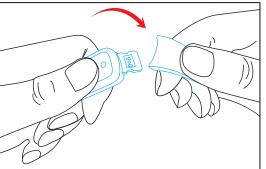

Charge the battery: Insert the chip-mounted end of the bracelet body into the USB interface to activate the product by charging (be cautious not to reverse the polarity, and comply with the required voltage and current:5V / 500mA)

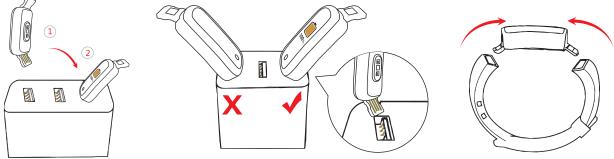

Installation: Mount the bracelet body into the slot of the wrist strap.

2. Touch key



Single click the touch key: Interface switch Press and hold the touch key: Enter

3. Download Very Fit Search and download

Search and download "VeryFit " from the Apple Store or Android App store.

Scan the QR code and download

It probably has aproblem to open the link with WeChat or other scan tools, please copy the link and open it through browser.




4. Connect the Smart Bracelet

4.1 Make sure the Bluetooth of Smart phone is ON



4.2 Open APP "Very Fit", Choose the binding bracelet

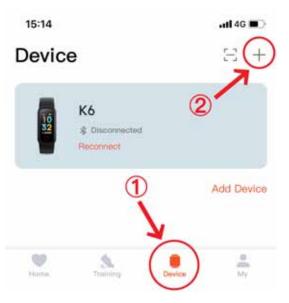

4.3 Search bracelet Bluetooth

15:14 and 40 ■) < Add Device	15:19 40 ■) veryfit :
Watch >	1630 _{Steps}
Bracelet	00:00 12:00 24:00 Distance 1.21 km
(3) ▲ 15:15	Activities Medium- bigh in-
K6 device	80 _{kcal} 13 _{min} 2 _{Hour}
1	Sleep HR 04/01 04/15
15:15 and 40 =>	6.34mm 93pm
• •	Weight 09/22
Bound successfully	Home Training Device My
Finish	

Note: When selecting the right band from the search list, please slide the screen of wristband to wake up the device and then complete connectind.



Features



1. Time menu



You can change the watch face via the app: Device > More. [Press the touch button] to go to the next menu: Data menu.

2. Data menu




[Press the touch button]to go to the next menu: Heart rate menu.[Long press the touch button for 2 seconds]to enter the submenu of Data menu.



[Press the touch button] to go to the next submenu. Note: To return to Data menu, long press the touch button when in submenu of Data menu.

3.Heart rate menu

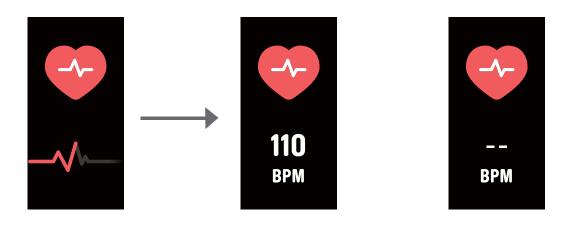

Measuring heart rate...

Data detected

No data detected

Heart rate measurement

To manually measure your heart rate more accurately, wear the device on the upper part of your wrist; wear it tighter during exercise.

Heart rate monitoring throughout the day

This feature is enabled by default, heart rate will be automatically monitored throughout the day.

Note: Heart rate is measured 1 second after the Heart rate menu is entered. " — " is displayed before a heart rate data is detected; when measurement is done, heart rate data is displayed.


[Press the touch button] to go to the next menu: Exercise menu.

4. Exercise menu




[Long press the touch button for 2 seconds] to enter the submenu of Exercise menu. [Press the touch button] to go to the next submenu of Exercise menu. Note: You can select the exercise types displayed on the band via the app (including 3 exercises which can be recorded and 11 other activities).

4.1 Start an exercise

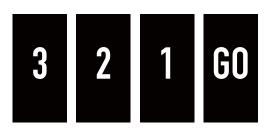

An exercise is started after the 3-2-1-GO countdown.

4.2 In exercise mode

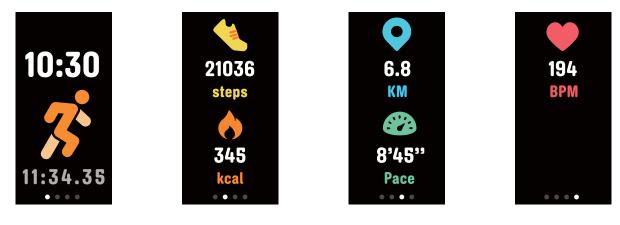

Main interface Step

Steps/Calories

Distance/Pace

Real-time heart rate

[Press the touch button] to go to the next submenu.

[Long press the touch button for 2 seconds]

to exit the exercise mode.

Note: To display riding speed and distance, you need to pair the device with the app, and tap "Start" on the app when you start riding.

4.3 Pause an exercise



[Long press the touch button for 2 seconds] to exit the exercise mode. Note: This feature is available only when the exercise is started from the app. For an exercise started from the app, you can pause, start or exit it on the app, while you can only exit it using the band.

4.4 Exit an exercise

1)If an exercise lasts for less than 1 minute, a reminder asking you not to save the data will be shown.

[Press the touch button]

to go to the Exercise menu.

(The exercise data will not be recorded)

2)If an exercise lasts for longer than

1 minute, an "end of exercise" reminder will be shown.

[Press the touch button]

to display the exercise data.

4.5 Data display when an exercise ends







Distance /Average pace



Short

trainning

session

Not save

Good job!

Average heart rate /Exercise duration

[Press the touch button] to view the next data page; long press the touch button to return to the first submenu of Exercise menu.

4.6 Event reminders in exercise mode

NO action quit in **15** s

1)Exercise exits when no movement is detected.[Press the touch button]to exit the reminder and return to exercise mode.

Notes:

(1)If no movement is detected in 15 minutes, a reminder will be shown 15 seconds before the exercise is ended automatically.(2)If movement is detected during the 15-second countdown, the reminder will be exited.

(3)If still no movement is detected during the 15-second countdown, the exercise mode will be exited.

2)Exercise is compulsorily exited when memory is full

[Press the touch button] to exit the exercise. Note: When the band's memory is full, the user

will be reminded to exit the exercise mode.

Memory insufficiency

Synchronize and try again

3)Exercise is compulsorily exited when battery is low.

[Press the touch button]

to exit the exercise.

Note: During an exercise, when the battery is low, the exercise will be paused and the user will be reminded to exit the exercise mode.



4)Cannot start an exercise when battery is low



[Press the touch button] to exit the exercise mode. Note: This reminder will pop up when a user tries to start an exercise in case battery is low.

5)Abnormal operation during an exercise

[Press the touch button] to exit the reminder. Note: For an exercise started from the app, this reminder will pop up when the Bluetooth connection between the band and the app is disconnected.



A reminder will pop up.

5. Stopwatch menu

[Long press the touch button for 2 seconds] to enter the Stopwatch menu.





5.1 Start the stopwatch

Press the touch button] to start counting time. [Long press the touch button for 2 seconds] to return to the Stopwatch menu.




5.2Pause the stopwatch

[Press the touch button] to pause. [Long press the touch button for 2 seconds] to return to the Stopwatch menu.

5.3Restart the stopwatch


[Press the touch button] to continue counting time. [Long press the touch button for 2 seconds] to return to the Stopwatch menu. 00:00 49 Click to continue

6. Alarm menu

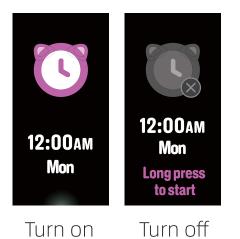

[Press the touch button] to return Time menu. [Long press the touch button for 2 seconds] to turn on/off the alarm. Note: Relevant setting needs to be finished on the app.

7. Reminder menu Call reminder

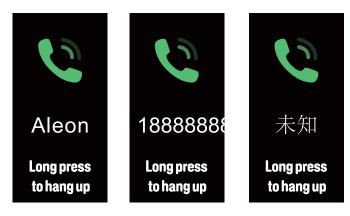


[Press the touch button] to exit the reminder and answer the call. [Long press the touch button for 2 seconds] to hang up. Note: Call reminder has to be turned on on the app.

2)Message reminder




On the Message interface, press the touch button to read the whole message. Note: Relevant setting needs to be finished on the app.

3)Alarm reminder

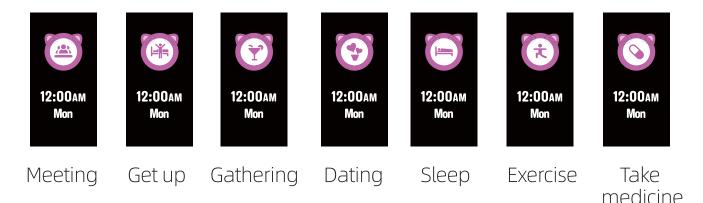

Note: Relevant setting needs to be finished on the app.

4)Hydration reminder

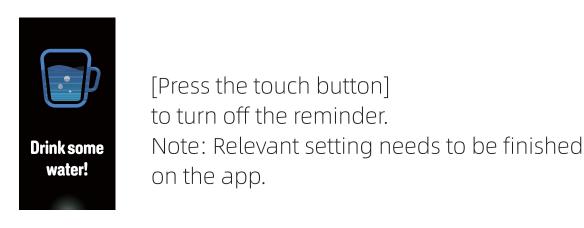

5)Reminder to move around



[Press the touch button] to turn off the reminder. Note: Relevant setting needs to be finished on the app.

6)Goal achieved reminder



When a goal is achieved, the band will vibrate and a goal achieved reminder will be displayed.[Press the touch button] to turn off the reminder.

7)Low battery reminder

[Press the touch button] to turn off the reminder.



Please ch[.] arge first

8)Ultra-low battery reminder

The screen will stay on this interface, and the user cannot enter other modes.



9)Device error reminder



Error code:

- -01 indicates an error of acceleration sensor
- -02 indicates an error of heart rate sensor
- -03 indicates an error of touch button IC
- -04 indicates an error of flashlight

Note: When a device error is detected, the error will be displayed on the corresponding interface every time the device is turned on.

Technical data



Model No.: K6 Battery capacity: 90 mAh Charging time: 2h IP rating: IP68 Operating temperature: 0-60 °C Frequency range: 2402-2480 MHz Screen type: 0.96" color screen Charging voltage: 5V±0.2V Standby time: 6 days Weight: Bluetooth version: BLE 4.2 Max. transmission power consumption: 0dBm

Care and maintenance

Three suggestions for use and maintenance:

1)Keep the product clean.

2)Keep the product dry.

3)Do not wear the product too tight.

* Do not use household cleansers when cleaning the product.

Use soap-free cleansers instead.

* For stubborn stains, it is recommended to remove by scrubbing with alcohol.

Waterproof: Not suitable for use while diving, swimming in the sea, or in a sauna. Suitable for use in swimming pools, showers (cold water) and shallows.

Safety instructions

• Do not place the product and its accessories at extreme temperatures, otherwise it may cause hazards such as product failure, fire or explosion.

• Protect the product from strong impacts or jolts, so as not to damage the product and its accessories, thus avoiding product failures.

• Do not disassemble or modify the product and its accessories by yourself. Contact us for after-sales service when the product fails.

FAQs

Why can't I find the device when pairing?

(1)Ensure that your smartphone's Bluetooth is turned on, and the operating system of your phone is Android 6.0 or above, or iOS 9.0 or above.

(2)Ensure that the distance between your phone and the device is less than 0.5 meter when pairing. After pairing is completed, ensure that the device is within normal Bluetooth communication distance (within 7 meters).

(3)Ensure that the device has sufficient power. Please contact us, if the problem remains after the device is fully charged.

Why do I fail to connect to Bluetooth occasionally?

(1)Restart the band's Bluetooth.

(2)Restart your phone or your phone's Bluetooth.

How to restore to factory settings?

Ensure that the device is paired with your phone. Turn on the app, select "Delete device" in "Device settings".



The device meets the EU ROHS criterion. Please refer to IEC 62321, EU ROHS Directive 2011/65/EU and revised directive. This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and

2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS



Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.

If you experience discomfort or skin irritation when wearing your smart watch, then we recommend you try cleaning your device. Sometimes residue or foreign materials build up around your device and may aggravate your skin. It's also possible that you are not wearing the watch correctly. We recommend making sure to clean and adjust your watch regularly for a more comfortable fit.

Caution:

• If you experience skin irritation when wearing your watch, please refrain from wearing, and wait two to three days to see if your symptoms ease. If symptoms persist or worsen, please consult a physician.

• If you have eczema, allergies or asthma, you may be more likely to experience a skin irritation or allergy from a wearable device.

CAUTION

• Risk of explosion if the battery is replaced by an incorrect type

• disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;

• leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;

• a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

設定

設定には iOS または Android のスマートフォンが必要で す。

注意:お使いの端末が下記の性能を見対している必要があります









iOS 9.0 & Above Andriod 6.0 Above Support Bluetooth4.0 1.製品の起動とインストール

初めて使う際は、使用前に製品を十分に充電して下さい。 十分に充電されると製品は自動的に起動します。

取り外し: ブレスレットからバンドを引っ張って取り外して下さい。

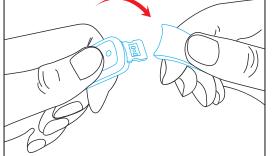

充電: 金属端子のついた方を USB 充電口に挿し込んで下さい(表裏の向きを間違えないで下さい、また 5V 0.5A 以上でないと充電できません)。

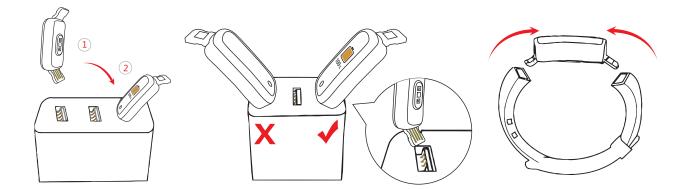

取り付け: ブレスレットにバンドを挿し込んで下さい。

2.タッチキー



1度だけ軽く押す: インターフェーススイッチ 長く押す: 決定

3. VeryFitPro をダウンロード

検索してダウンロード アップルストアまたは Android の Play ストアから" VeryFit "を検 索してダウンロードして下さい。 QR コードをスキャンしてダウンロード Wechat や他のスキャンツールで問題がある場合は、リンクをコビ ーしてブラウザから開いて下さい。



4.スマートブレスレットに接続

て下さい。

4.1 スマートフォンの Bluetooth が ON になっていることを確認し

Settinss	Bluetooth oth	
Bluetooth		
Now discoverable	as "iphone".	
MY DEVICES		


4.2 " VeryFit "を開いて、「結合」をタップして下さい




4.3 ブレスレットの Bluetooth を捜索します。

		veryfit	
Watch	×	1630steps	
Bracelet	ò	00.00 Distance 1.21 km	* 12:00 34:00
3 15:15 C Please select a dev	uali40 ■⊖		them Walk around the theory Walk around 13mm 2 Hour
Ко со са 77 ей обла	ati	Sleep 04/01	HR 04/15
4 15:15 <	uni 40 🖷)	6.34	93
•	•	Weight 09/22	
Bound successfull	Y	Transe Strange	Denim Str


4.4 ブレスレットと結合

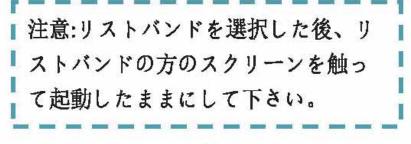

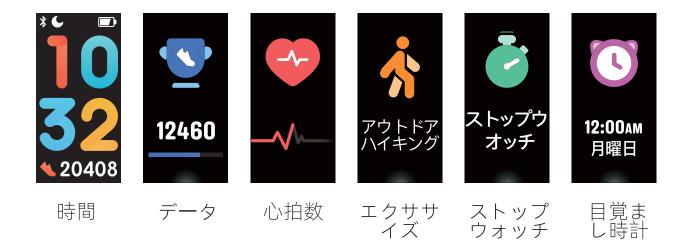

機能


1.時間メニュー

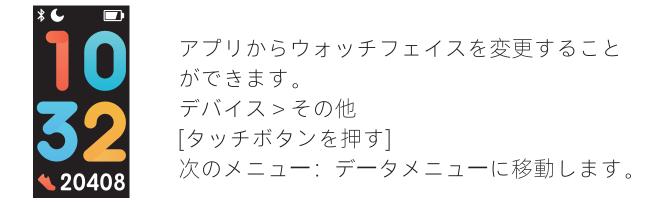

2.データメニュー




[タッチボタンを押す] 次のメニュー:心拍数メニューに移動します。 [タッチボタンを2秒間長押しする] データメニューのサブメニューに入ります。

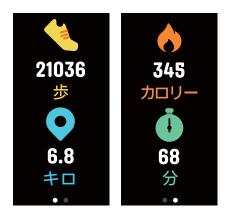

[タッチボタンを押す] 次のサブメニューに移動します。 注:データメニューに戻るには、データ メニューのサブメニューでタッチボタン を長押しします。

3.心拍数メニュー

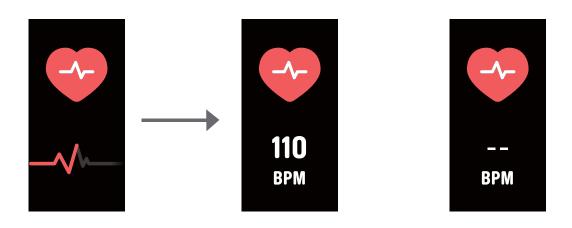

心拍数の測定中...

データが検出さ れました

データが検出され ませんでした


心拍数の測定

より正確に心拍数を手動で測定するには、手首の上部にデバイ スを装着します。運動時にはしっかりと装着してください。 **1日中の心拍数のモニタリング**

この機能はデフォルトで有効になっており、心拍数は一日を通 して自動的にモニターされます。

注:心拍数は、心拍数メニューに入ってから1秒後に測定されま す。「_____」は、心拍数のデータが検出される前に表示され、 測定が終了すると心拍数のデータが表示されます。 [タッチボタンを押す] 次のメニュー:エクササイズメニューに移動します。

4.エクササイズメニュー

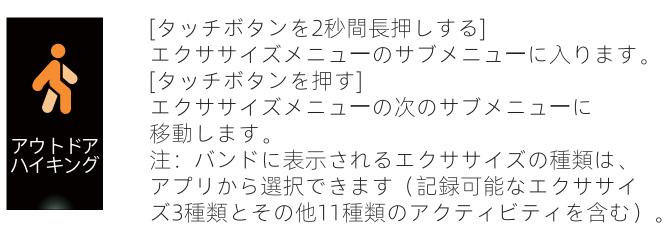

4.1エクササイズの開始



3-2-1-GOのカウントダウンの後 にエクササイズを開始します。

4.2エクササイズモード中





メインインタ フェース


ステップ/ カロリー

距離/ペース

リアルタイム の心拍数

[タッチボタンを押す] 次のサブメニューに移動します。 [タッチボタンを2秒間長押しする] エクササイズモードを終了します。 注:走行速度や走行距離を表示するには、デバイスとアプリを ペアリングし、走行開始時にアプリの「スタート」をタップす る必要があります。 -22-

4.3エクササイズの一時停止

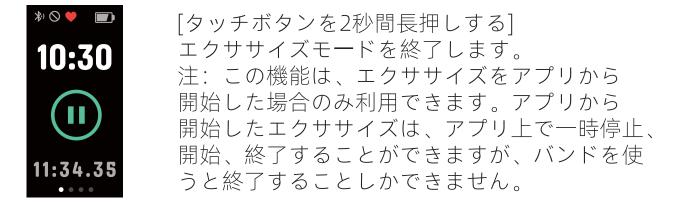

4.4エクササイズの終了

1)エクササイズが1分未満の場合は、「データを 保存しないでください」というリマインダーが 表示されます。 [タッチボタンを押す]

エクササイズメニューに移動します(エクササ イズのデータは記録されません)

2)エクササイズが1分以上続く場合は、「エクサ サイズ終了」のリマインダーが表示されます。 [タッチボタンを押す] エクササイズのデータが表示されます。

4.5エクササイズが終了するとデータが表示されます。





平均心拍数/ エクササイズ時間

[タッチボタンを押す]と次のデータページが表示されます。タッ チボタンを長押しすると、エクササイズメニューの最初のサブメ ニューに戻ります。 -23-





スポーツ していなく 15 秒後に 退出する 1) エクササイズは動きが検出されないと終了します。 [タッチボタンを押す] リマインダーを終了し、エクササイズモードに 戻ります

注:

(1)15分以内に動きが検出されない場合は、エクササイズ終了の 15秒前にリマインダーが自動的に表示されます。

(2)15秒のカウントダウン中に動きが検出されると、リマインダーは終了します。

(3)15秒のカウントダウン中に、なお動きが検出されない場合は、 エクササイズモードが終了します。

2)メモリがいっぱいになると、エクササイズは 強制的に終了します

[タッチボタンを押す]エクササイズを終了します。 注: バンドのメモリがいっぱいになると、 ユーザーはエクササイズモードを終了するよう にリマインドされます。

3)バッテリー残量が低下すると、エクササイズは強制的に終了します。

[タッチボタンを押す] エクササイズを終了します。 注:エクササイズ中、バッテリー残量が低下す ると、エクササイズは一時停止され、エクササ イズモードを終了するようにリマインドされます。




メモリはいっ

ぱいでシ

ンクロナイズ

後試みてく ださい

4) バッテリー残量が低下するとエクササイズを開始できません

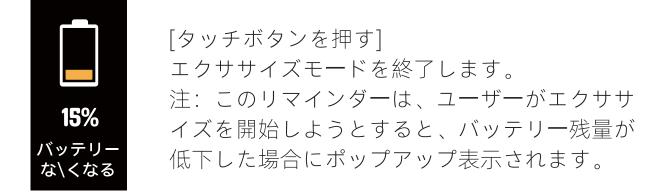

5)エクササイズ中の異常な動作

[タッチボタンを押す] リマインダーを終了します。 注:アプリからエクササイズを開始した場合、 バンドとアプリ間のBluetooth接続が切れると、 このリマインダーがポップアップ表示されます。



リマインダーがポップアップ表示されます。

5.ストップウォッチメニュー


[タッチボタンを2秒間長押しする] ストップウォッチメニューに入ります





5.1ストップウォッチを開始する [タッチボタンを押す] 時間のカウントを開始します。 [タッチボタンを2秒間長押しする]

ストップウォッチメニューに戻ります

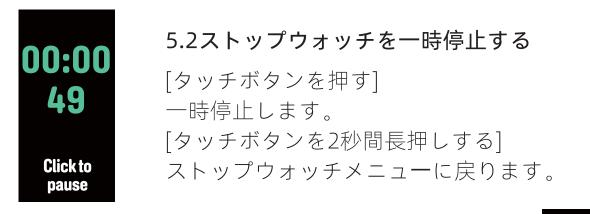

5.3ストップウォッチを再起動する

[タッチボタンを押す] 時間のカウントを続けます。 [タッチボタンを2秒間長押しする] ストップウォッチメニューに戻ります。



6.アラームメニュー



[タッチボタンを押す]と、時間メニュ ーに戻ります。 [タッチボタンを2秒間長押しする]とア ラームがオン/オフ切り替えします。 注:関連する設定はアプリ上で終了す る必要があります。

オンオフ

Long press

to hang up

7.リマインダーメニュー 1)電話リマインダー

くうく

プレスとハン

グアップ

Long press

to hang up

[タッチボタンを押す]とリマインダーが終了し、電話に応答で きます。

[タッチボタンを2秒間長押しする]と電話が切れます。 注:通話リマインダーはアプリ上でオンにする必要があります。

2)メッセージリマインダー




メッセージインターフェースで、タッチボタ ンを押すと、メッセージ全体を読むことがで きます。 注:関連する設定はアプリ上で終了する必要が あります。

3)アラームリマインダー




注: 関連する設定はアプリ上で終了する必要があります。

4)水分補給のリマインダー

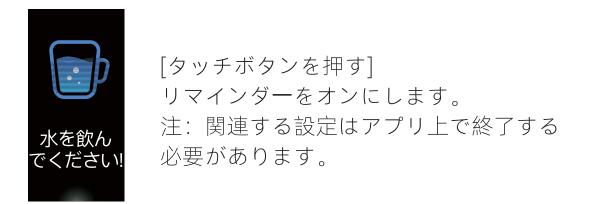

5)動き回るリマインダー

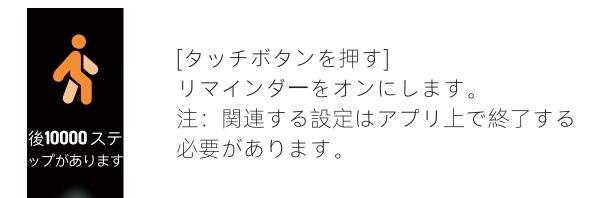

6)目標達成のリマインダー



目標を達成するとバンドが振動し、目標達成 のリマインダーが表示されます。 [タッチボタンを押す] リマインダーをオンにします。

7)バッテリー低下のリマインダー

[タッチボタンを押す] リマインダーをオンにします。




8)バッテリー超低下のリマインダー

画面はこのインターフェイスのままで、 ユーザーは他のモードに入ることができません。



9) デバイスエラーのリマインダー

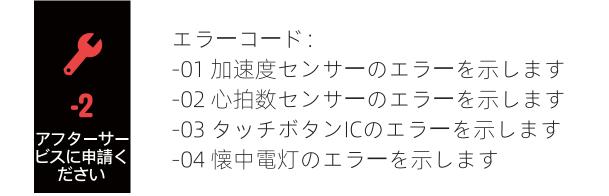

注: デバイスのエラーが検出されると、デバイスの電源を入れるたびに対応するインターフェースにエラーが表示されます。



モデル番号: K6 バッテリー容量: 90 mAh 充電時間: 2時間 IPレーティング: IP68 動作温度: 0~60 ℃ 周波数範囲: 2402~2480 MHz スクリーンタイプ: 0.96インチ カラースクリーン 充電電圧: 5V±0.2V スタンバイ時間: 6日間 重量: Bluetoothバージョン: BLE 4.2 最大伝送電力消費量0dBm

お手入れとメンテナンス

使用方法とメンテナンスについての3つのアドバイス:

1)清潔に保ってください。 2)乾燥した状態で保管してください。 3)バンドを締め付けすぎないようにしてください。 *お手入れの際には、家庭用クレンザーを使用しないでください。 代わりに石けん成分不使用の洗浄剤を使用してください。 *頑固な汚れには、アルコールでこすり洗いするのをお勧めします。 防水:ダイビング、海での水泳、またはサウナでの使用には適し ていません。スイミングプール、シャワー(冷水)、浅瀬での 使用に適しています。

安全のための注意事項

●本製品および付属品を極端な温度の場所に置かないでください。 製品の故障、火災、爆発などの危険を引き起こす原因になります。

●強い衝撃や震動から本製品を保護し、本製品や付属品を損傷させないようにして、製品の故障を回避してください。

●本製品および付属品の分解・改造は、お客様ご自身で行わないでください。製品が故障した時のアフターサービスは弊社までお問い合わせください。

よくある質問

ペアリング時にデバイスが見つかりません。これはどうし

てですか?

(1)スマートフォンのBluetoothがオンになっていること、お使い のスマートフォンのオペレーティングシステムがAndroid 6.0以上、 またはiOS 9.0以上であることを確認してください。

(2)ペアリング時には、スマートフォンとデバイスの距離が0.5m 以下であることを確認してください。ペアリングが完了したら、 デバイスが通常のBluetooth通信距離内(7m以内)にあることを 確認してください。

(3)デバイスに十分な電力が供給されていることを確認してくだ さい。満充電になっても問題が解決しない場合は当社までご連絡 ください。

時々、Bluetooth接続に失敗するのはなぜですか?

(1)バンドのBluetoothを再起動してください。(2)お使いのスマートフォンまたはスマートフォンのBluetoothを 再起動してください。

どのようにして工場出荷時の設定に戻すのですか? デバイスとスマートフォンがペアリングされていることを確認し てください。アプリをオンにして、「デバイスの設定」で「デバ イスの削除」を選択します。



The device meets the EU ROHS criterion. Please refer to IEC 62321, EU ROHS Directive 2011/65/EU and revised directive.

This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and

2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS



Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances. If you experience discomfort or skin irritation when wearing your smart watch, then we recommend you try cleaning your device. Sometimes residue or foreign materials build up around your device and may aggravate your skin. It's also possible that you are not wearing the watch correctly. We recommend making sure to clean and adjust your watch regularly for a more comfortable fit.

Caution:

• If you experience skin irritation when wearing your watch, please refrain from wearing, and wait two to three days to see if your symptoms ease. If symptoms persist or worsen, please consult a physician.

• If you have eczema, allergies or asthma, you may be more likely to experience a skin irritation or allergy from a wearable device.

CAUTION

• Risk of explosion if the battery is replaced by an incorrect type

 disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;

 leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;

• a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



Scan the QR code for more function information

FCC ID : 2AT6I-K6



Made in china