

Thanks for purchasing PICTEK Cherub Baby Machine, your sleep buddy will provide services for you. Please read the instructions and precautions carefully. PICTEK products are covered by a 12-month limited warranty from the date of its original purchase. If any problem occurs, please contact support@picket.com for help. We can only provide after sales service for products that are sold by PICTEK or PICTEK authorized retailers and distributors.

 
Precautions

1. Please do not disassemble or repair the device yourself, otherwise it will be deemed as abandoning the warranty service.
2. Do not place the device near any heat source or under direct sunlight.
3. Unplug the power adapter when you are not using it for a long time.
4. Turn off the power before cleaning.

Package Contents



LED and Button Rules



- **Main Light**
- **Type C port**
- **Speaker**
- **Volume** - Volume up
- **Volume** - Volume down
- **Cool/Warm** Short press to choose from cool to warm light appearance. Short press to turn the light on/off. Long press for 5s to turn both lights and sound off.
- **Color** Long press to choose the next color (7 colors in total).
- **Play/Pause** Play or pause the sound.
- **Sound** Short press to choose the next sound (11 sounds in total).
- **Mode** Short press to choose the next favorite mode. Long press for 5s to pairing mode.

- **Rotate** Rotate to adjust the light brightness.
- **Status LED** Blink on once: Pairing mode. Blink twice: WiFi connecting mode. Off: Successfully connected.

Specifications

Model	HP110A
Wattage	7.5W
Input	5V/1A 1.5A
Network	WiFi IEEE 802.11 b/g/n (2.4GHz)
Operating system	Android 4.4+ or iOS 9.0+
Luminous Flux	200lm-10%
CCT/Color	2000K-4000K/16 Million Colors
Operation Temperature	+10°C ~ -40°C / 14°F ~ 104°F
Lifespan	20,000hrs

Installation Guide

1. Power up the device. Make sure the status LED blinks once per second otherwise long press the "Mode" button for 5s to pairing mode.
2. Download the app and create an account. From Apple App Store or Google Play search for "Meros" and download it. Or scan the QR code to download.



Note:
- Only support 2.4GHz WiFi networks.
- For Android smartphone location and GPS needs to be enabled.

FCC statement

Operation is subject to the following two conditions:
(1) This device will not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

How to Use APP

1. Add product

When you finish downloading and registering your account, make sure your smartphone already connected to the WiFi, choose the "Cherub Baby Machine" and follow the App guide to get started. When you are done, the following interface will appear.



2. Interface introduction



Home Page

- **On/Off**: Turn both light and sound on/off.
- **Mute/Unmute**: Turn sound on/off.
- **Light/Light off**: Turn light on/off.
- **Child lock**: Enable it to void the functions of all physical buttons.
- **Icon**: Enter the Device Settings page.
- **x > x**: Press to choose the prominent favorite mode.

Device Page

- **Light**: To choose a different light color.
- **Sound**: To choose a different sound.
- **Favorite**: To choose and set favorite modes (the combination of light and sound).
- **Time**: Timer to turn light off.
- **ON/OFF**: Turn on/off the device.
- **Main interface**: Adjusts brightness and volume.
- **Collecting icons**: To save current light and sound appearance as a favorite mode.
- **Device Settings icon**: Enter the Device Settings page.

Routines

Set the routines in Device Settings > Automation > Routines. You can automatically turn the cherub baby machine on or off at the expected time. For instance, you can turn it on at 9:00 AM every day to help baby sleep on time.



How to use voice control

1. Download the Alexa APP

If you first time use Echo, search for the Amazon Alexa APP on Google Play Store or Apple App Store. Once downloaded, open the Alexa app and log into your Amazon account. If you do not already have an Amazon account, choose "Create a new Amazon account" and enter the request info. Once logged into the app will prompt you for setup.

 
Note: You cannot use Alexa Voice Services if you aren't logged into an Amazon account.

2. Voice control your device

In the Home Page, follow instructions in Account > Integration to pair your Cherub Baby Machine with Amazon Alexa or Google Assistant. Use voice commands below to voice control the device.

3. Voice Command

Amazon Alexa
- Alexa, dim cherub 30%.
- Alexa, mute device.
- Alexa, set the sound to lullaby to Cherub.



- Alexa, turn on light for the Cherub.
- Google Assistant**:
- Hey Google, adjust Cherub to 65% brightness.
- Hey Google, brighten cherub.
- Hey Google, make the cherub magenta.
- Hey Google, turn off light for the cherub.

FAQs

At PICTEK we strive to meet your satisfaction. Any question about Cherub Baby Machine please feel free to contact support@picket.com.

1. **What should I do when my Meros app is unable to control the added Cherub Baby Machine?**
You can troubleshoot the following:
- Check the main WiFi's Internet connection.
- Make sure that the main WiFi's password hasn't been changed.
- Make sure your device isn't booted from the main WiFi.
- Factory reset and try to add it again.
2. **Can I control the Cherub Baby Machine from multiple smartphones?**
Yes. Download Meros app to your devices and sign in using the same Meros account.
3. **How do I pair the Cherub Baby Machine with Amazon Alexa or Google Assistant?**
Visit Account > Amazon Alexa or Google Assistant page within Meros app for pairing instructions.