

Robotic Vacuum Cleaner

R530

**Instruction Manual**

# Important Safety Instructions

To reduce the risk of injury or damage, read these safety instructions carefully and keep them at hand when setting up, using, and maintaining this device.



## WARNING SYMBOLS USED

This is the safety alert symbol. This symbol alerts you to potential hazards that could result in property damage and/or serious bodily harm or death.

- This device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this device in a safe way and understand the hazards involved.
- Children should be supervised to ensure they do not play with this device.
- Cleaning and maintenance shall not be performed by children without adult supervision.
- This device is only to be used with the power supply unit provided.
- For the purposes of recharging the battery, only use the detachable power supply unit provided with this device.
- The battery must be removed from this device before this device is disposed of. To remove the battery from this device, first remove the screws on the bottom, then remove the battery by disconnecting the quick connector.
- The used battery should be placed in a sealed plastic bag and disposed of safely according to local environmental regulations.
- The external flexible cable or cord of the power supply unit cannot be replaced; if the cord is damaged, the power supply unit shall be disposed of.
- This device is for indoor use only.
- This device is not a toy. Do not sit or stand on this device. Small children and pets should be supervised when this device is operating.
- Store and operate this device in room temperature environments only.
- Clean with a cloth dampened with water only.
- Do not use this device to pick up anything that is burning or smoking.
- Do not use this device to pick up spills of bleach, paint, chemicals, or anything wet.

- Before using this device, pick up objects like clothing and loose paper. Lift up cords for blinds or curtains, and move power cords and fragile objects out of the way. If this device passes over a power cord and drags it, an object could be pulled off a table or shelf.
- If the room to be cleaned has a balcony, a physical barrier should be used to prevent access to the balcony and to ensure safe operation.
- Do not place anything on top of this device.
- Be aware that this device moves around on its own. Take care when walking in the area where this device is operating to avoid stepping on it.
- Do not operate this device in areas with exposed electrical outlets on the floor.
- Do not expose the electronics of this device, its battery, or the integrated Charging Base. There are no user-serviceable parts inside.
- Do not use this device on an unfinished, unsealed, waxed or rough floor. It may result in damage to the floor and this device. Use only on hard floor surfaces or low-pile carpet.
- This device has been designed to be used on floors without scratching them. We still recommend that you test this device on a small area of the room to be cleaned to ensure no scratches are made before cleaning the whole room.

This symbol on the device or its packaging indicates: Do not dispose of

## Notice

 


electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obliged to take back your old appliance for disposal at least free of charge.


# Contents

Product Composition / Package Contents .....	4
Product Composition / Part Name .....	5
Icons Display Function .....	6
Dust Box, Water Tank and Charging Dock .....	7
Product Usage / Preparation .....	8
Product Use/ Robot Charging .....	9
Product Use / Turn On / Turn Off .....	10
Product Use / Start Pause, Wake up .....	10
Product Usage / Select a Cleaning Mode .....	11
Time Scheduling Setting .....	12
Mopping / Water Tank .....	13
Cleaning and Maintenance .....	14
Troubleshooting .....	19
Product Parameter .....	20


# Product Composition / Package Contents

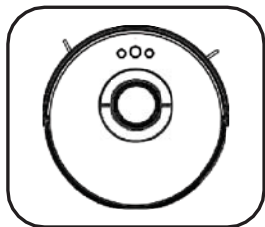


Robot

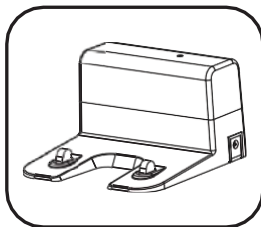 


Charging Dock

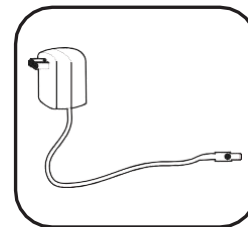 


Power Adapter

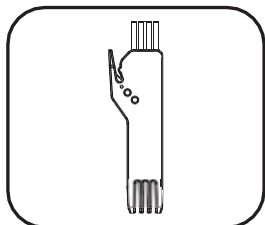 


Cleaning Brush

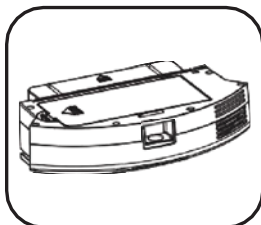 


Dust Box

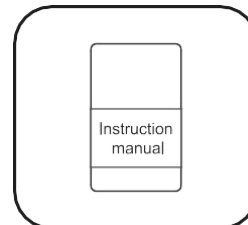 


Instruction Manual

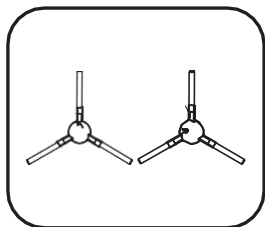 

Side Brush x4

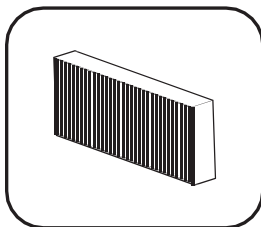 


HEPA Filter x2

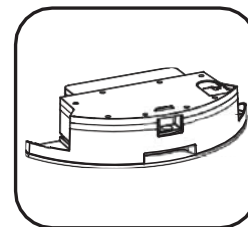 

Water Tank



# Product Composition / Part Name
 
## Front Robot

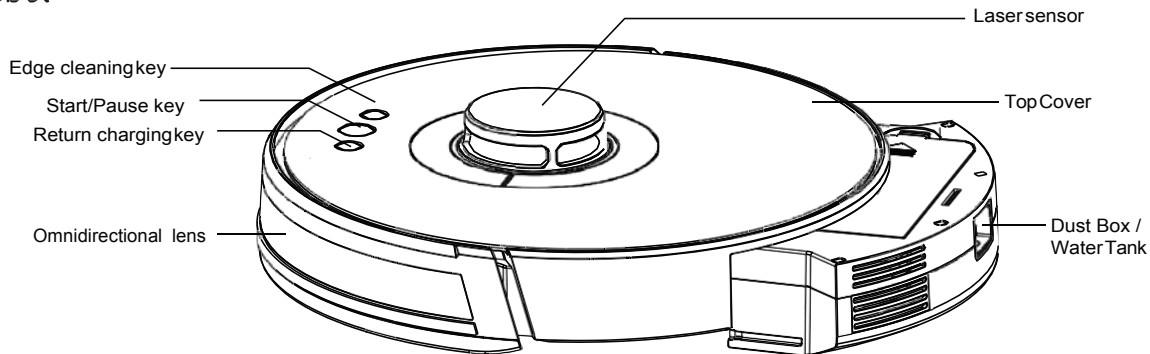

Press and hold "Return" key for 3 second to ener WIFI setting

## Back Robot

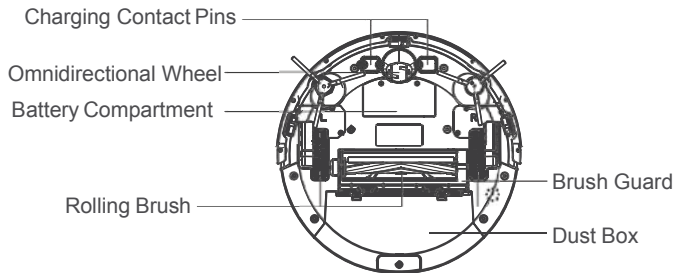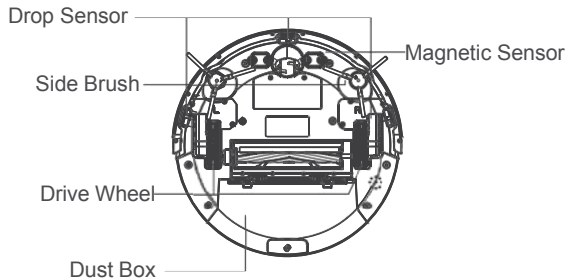  

# 1 use mobile phone to scan the QR code to download APP



APP

## IOS:

Use iPhone "APP store" search "SWEAFT" to download the APP



iPhone screenshot

## Andriod:

Use Andriod phone "Market" search "SWEAFT" to download the APP



Andriod phone  
screenshot

 
## 2 APP usage guide

### iOS / Andriod smart phone:

1. Login APP, or register as new user in the first time of use. Please fill up necessary information in APP registration in order to access the APP
2. Existing account login: you can login through registered mobile phone number, binding WeChat account or QQ account



iOS login screen

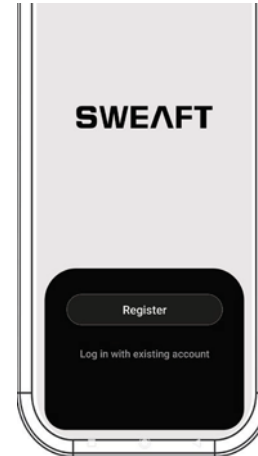


Andriod login screen

### 3 APP connects to Robot operation guide

 Switch on Robot, then press and hold the “Return” or “Home” button for 3 sec after a “Ding” sound, Robot will have a voice message of “Smart link”. Then, the Wi-Fi icon will flash and ready for Wi-Fi connection.

Open up the “SWEAFT” APP, press “Add device” and select the correct Robot vacuum cleaner model to establish the connection

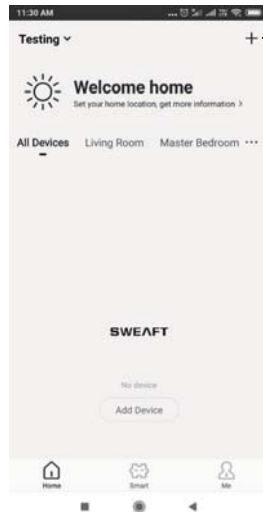


Pree “+”to  
add device



Press to confirm  
establishing  
connection



### Select P8 Model

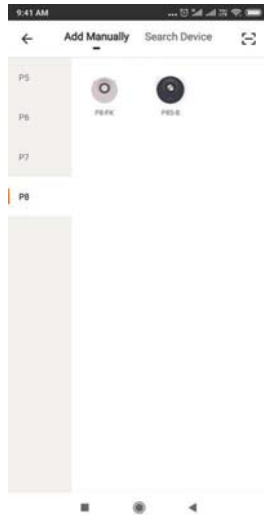 


### Select network to connect




#### Attention:

  1. Select the Wi-Fi network, enters user name and password, wait for establish connection



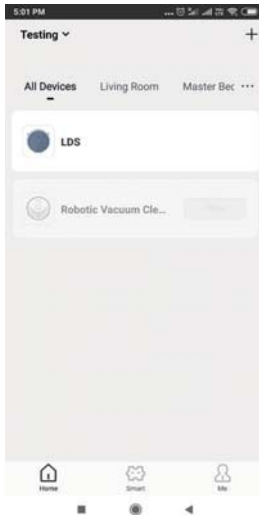



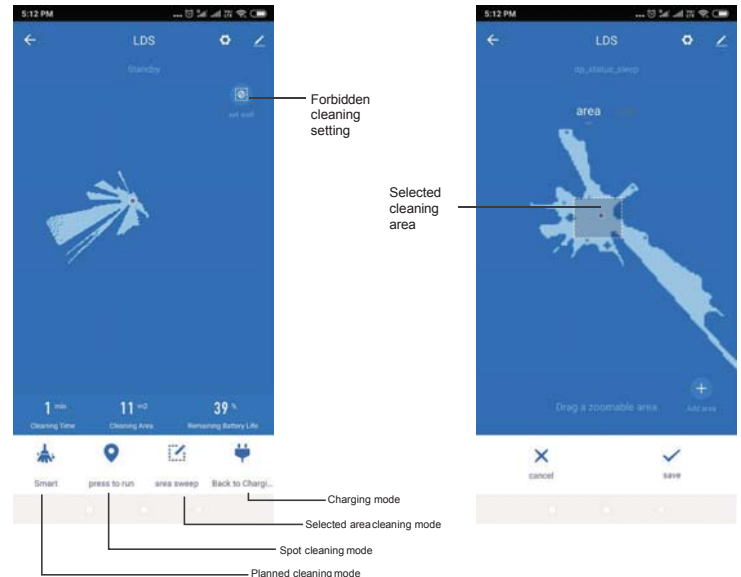




**4** Successful connected to Wi-Fi, press name of the Robot, “LDS” as below, enter to APP operation






**5** After connection established, APP interface guide




# APP Display Function:

 
Function Description	
	Edge cleaning mode: icon always light up, start cleaning; icon flashing, cleaning pause
	Auto cleaning mode: icon always light up, start auto cleaning; icon flashing, cleaning pause
	Single room mode: icon always light up, start single room cleaning; icon flashing, cleaning pause
	Section cleaning: user able to create cleaning area in the map available in APP. Robot will start cleaning after area set.
	Location mode: user able to spot any location in the map available in APP. Robot will go to the location and start circular cleaning once in 2M radius.
	Zig-Zag cleaning mode: robot will start edge cleaning to create area block. Robot will start Zig-Zag cleaning in the block and return to started point once cleaning is done.
	Spot mode: icon always light up, start intensive cleaning in the selected area; icon flashing, cleaning pause.
	Set undesired cleaning area
	Return charging: icon always light up, robot will automatically return to Charging Dock; icon flashing, cleaning pause.
	Scheduled cleaning mode: icon always light up, scheduled cleaning is set; icon flashing setting up schedule time cleaning.
	Charging mode: icon flashing, when battery is charging. Otherwise, display available battery level.

Button	Function Mode	Switch Function	Function Description
	Power button	Press once > 0.3 Sec	Start up robot
		Press and hold > 3 Sec	Turn off robot
		Press once > 0.3 Sec	Start Zig-Zag cleaning
		Press once > 0.3 Sec	Pause
	Return button	Press once > 0.3 Sec	Robot return to Charging Dock for charging
		Press once > 0.3 Sec	Pause
		Press and hold > 3 Sec	Go to Wifi connection mode
	Edge cleaning button	Press once > 0.3 Sec	Start edge cleaning
		Press once > 0.3 Sec	Pause


# Dust Box, Water Tank and Charging Dock

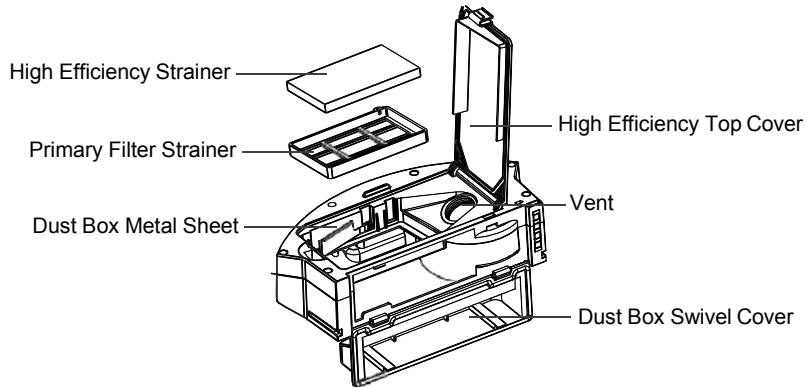

Dust Box

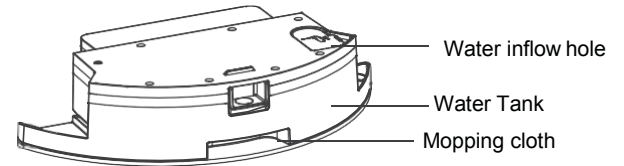 

Water Tank


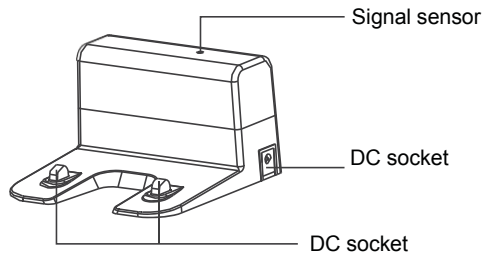 


Charging Dock

# Product Usage / Preparation

  
Before using the Robot, remove the protective strip on the Robot and Charging Dock.

Remove Protection

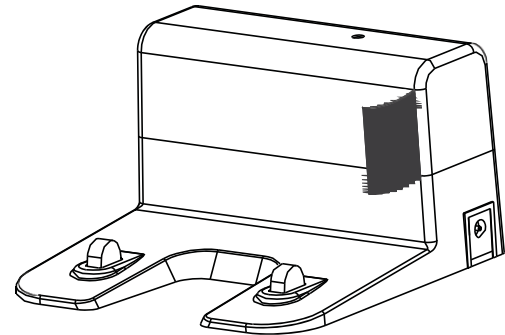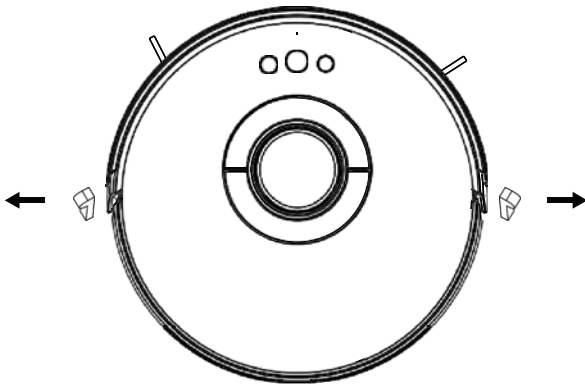


# Product Usage / Robot Charging

 
- ① Place the Charging Dock on a hard, level surface and against a wall. Remove objects within 1.5 ft/0.5 m on both sides and within 3 ft/1 m in front of the Charging Dock.

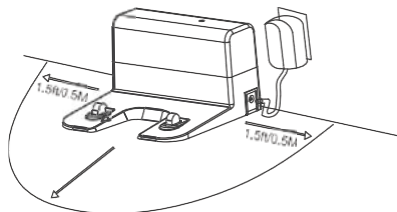

- ② Plug the adapter into the a wall outlet and plug the DC jack into the DC socket of the Charging Dock.

 
When the Charging Dock connects to AC power, the LED indicator on the Charging Dock is flashing green.

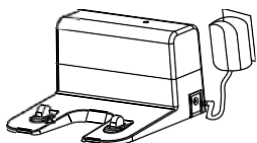

 Install the Charging Base in a location that Robot can easily access. Please place the Charging Base against a wall, and on a hard-level surface rather than on rugs or carpets.

- Always keep the Charging Base plugged in, otherwise Robot will not automatically return to it.

 
- ③ Install the side brushes before use.

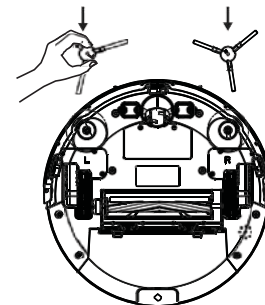

- ④ Charging your robot

Place the robot on the Charging Dock for battery charging (When charging, indication light is flashing. Light will stay light up when charging is finished. Normal charging time is about 5 hours)

 Robot returns to the Charging Dock at the end of a cleaning cycle or when its battery is running low

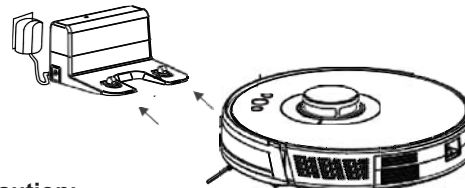

## Caution:

- Do not expose Charging Dock with direct sunlight or any strong reflection on light source. If cannot be avoided, please cover the bottom part of Charging Dock about 7 cm.
- Recommend to fully charge the robot to ensure operating time.
- Avoid to have Water Tank inserted in robot when charging. Avoid to have wet mopping cloth in which may damage wooden floor.