



### FCC ID:2AT9Z-RX4-1800

#### **LED Status Indicators**

LED indicator	Status	Description
Green	Solid on	The router system is starting.
	Binking	The router is performing WPS or Mesh negotiation.
Red	Solid on	Failed to connect to the network.
Blue	Solid on	Router has been successfully connected to the Internet.

Ports / Buttons	Description	
WPS	To start the WPS negotiation process of the router	
RST	To reset the router	
LAN 1. 2. 3. 4	To connect to the wired devices such as computers, switches, etc	
WAN Port	To connect this router to the internet	
POWER	To connect to the power cord	

# Website : www.juplink.com Email : Support@juplink.com

## **Before Setting**

To customize your wireless network connection and

#### other advanced repeater settings, please go to www.juplink.com

to download RX4-1800 User Guide for more information.

### **Operating Conditions**

Working Temperature: 0~45°C / 32~113°F


Working Humidity: 10%~90% RH

(non-condensation)

Storage Temperature:-40~85°C / -40~185°F

Storage Humidity: 5%~95% RH

(non-condensation)

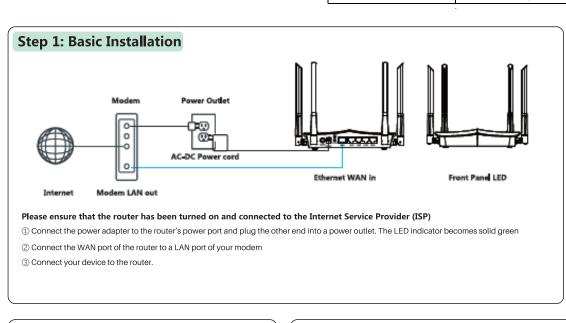




② Click the network icon of your device or go to Wi-Fi Settings of your smart device, and then select the SSID **Juplink-RX4-1800\_5G** or Juplink-RX4-1800 to join the network

Ensure that Mobile Data (if any) is disabled.

### 2. Basic connection - WPS Button

 Wireless devices that support WPS, including Android phones, tablets, and most USB network adapters, can be connected to your router

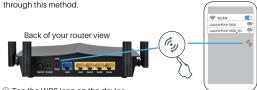

① Tap the WPS icon on the device

2 Within two minutes, press the button on your router

Note: ① WPS is not supported by iOS devices.

© The WPS function cannot be configured if the wireless function of the router is disabled. Also, the WPS function will be disabled if your wireless encryption is WEP. Please make sure the wireless function is enabled and is configured with the appropriate encryption before configuring the WPS.

# **Step 3: Log In to Your Router**

① Lauch a web browser on the device which has been connected to the repeater, Enter router. juplink.com in the address bar to log in.

router.juplink.com 5 ② Enter passwrod:admin OR Code Enter your passwrod Log in

3 Click Log in, enter Setting Page

# **Step 4: Set up Internet Connection** Method 1: Connect to the Internet Automatically 1 Wait for the router to detect the Internet mode automatically

ted the addressing type of WAN side is DHCP, In DHCP ne address is assigned by the upper device, and the route can be connected to the network directly.

Note: Generally, the Addressing Type is DHCP. If it is PPPOE, or Static Please refer to **Method 2, Method 3** 

**Step 6: Set your Login Password** 

① Set your Login Password or select Same with Wi-Fi password

# Method 2: Connect to the Internet - PPPoE

 $\ensuremath{\textcircled{1}}$  Select PPPoE from the Addressing Type drop-down menu



2 Enter the Username and Password provided by your ISP

③ If you forget your Username and Password, Click Get from old router Follow the instructions finish the setup

# **Method 3: Connect to the Internet - Static**

① Select Static from the Addressing Type drop-down menu



② Enter your IP Address, Subnet Mask, Default Gateway and Primary DNS, Secondary DNS

# **Step 5: Set your wireless Network** ① Modify your **Wi-Fi Name** (SSID) , **Password** (Wi-Fi password)

Configure Wi-Fi Information JUPLINK Wi-Fi6 Juplink-RX4-1800 Juplink-RX4-1800\_5G **Dual frequency** 

③ Select Dual frequency(recommended) and click Next

# Configure Login Password JUPLINK Wi-Fi6 Same with Wi-Fi password ② Click **Apply** finish your setting

### What's in the Box

- 1 x Juplink RX4-1800 Router
- 1 x Ethernet Cable
- 1 x AC-DC Adapter
- 1 x Quick Start Guide

Manufacturer's information

Nanjing Juplink Intelligent Technologies Co., Ltd. Address: No. 757 Dixiu Road, Binjiang Economic Development Zone Jiangning District, Nanjing Technical Support Email: Support@juplink.com