
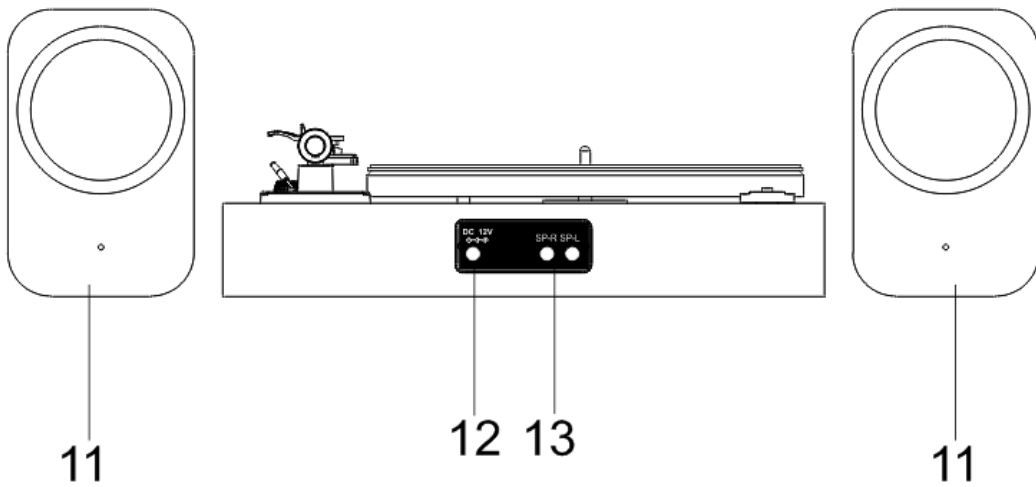


Product: Turntable

Model No.: 1931

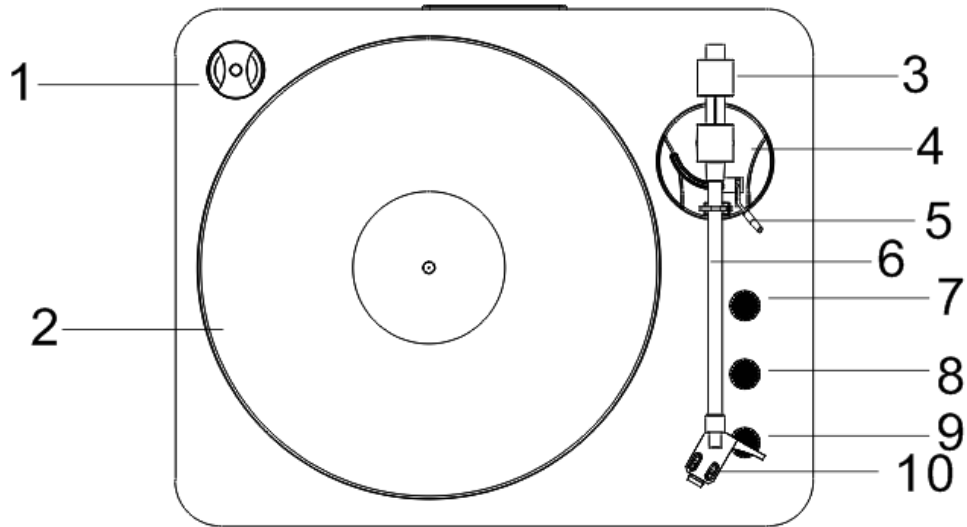

1.45 turn adapter

2.Turntable

3. Gravity hammer

4.Tone Arm Seat

- 5. Tone boom lift**
- 6. Tone Arm**
- 7. Turntable rotation switch**
- 8. Turntable turn knob**
- 9. Tone adjustment knob switch**
- 10. Phono**
- 11. Speaker**
- 12. Power socket**
- 13. Audio output jack**

Installation Notes

- 1. Open the package and take out the machine, then take out the foam on the machine board, and take out the power adapter and plug.**
- 2. Put the gravity hammer on the stick and push it until it gets stuck.**
- 3. Turntable installation: Align the center hole of the turntable with the turntable shaft on the machine and gently lower it. Then, grab the turntable belt from one of the holes of the turntable by hand, and put the belt on the motor.**

Turntable playback operation

This unit is a standard 3-speed turntable player and can play 33/45/78 rpm records

- 1. Turn the function knob to the turntable function**
 - 2. Put the record on the turntable (Note: Play a 45-turn record, if necessary, put the 45-turn adapter on the turntable shaft)**
 - 3, the speed to the speed corresponding to the record**
 - 4. Untie the cable on the tone arm, remove the tone arm clasp, lift the lifting frame, move the tone arm to the position above the record you want to play, and then lower the lifting frame. The turntable will play automatically.**
 - 5. Turn the volume knob to adjust the volume played by the camera.**
- 1. When the record is finished playing, it will automatically switch to Bluetooth.**

Bluetooth transmitting operation

- 1. Turn on the power supply of the machine**
- 2, the machine will be in Bluetooth receiving state**
- 3. At this point, the two devices have started pairing. When the pairing is successful, the unit will make a Bluetooth connection tone.**

4. Turn off Bluetooth pairing and turn off the power switch.

Specifications

1. Product: Belt Drive Phono

2. Basic specifications

Power: DC 12V 2.0A

**Product size: 420 * 340 * 160mm Sound size: 140 * 130 *
200mm * 2**

Power consumption: 30W

3. Turntable specifications

Motor: DC motor

Drive mode: Belt drive

Speed: 33, 45, 78RPM

4. Accessories

Manual

45 turn adapter

Gravity hammer

Power Adapter

Turntable

Turntable pad

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different**

from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.