 




Basic Installation

Connect to LAN or
Wifi after power on

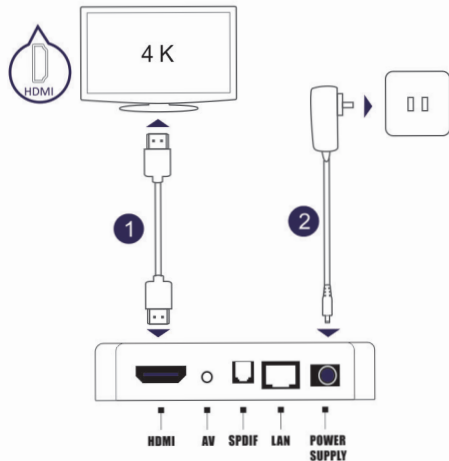

1 HDMI Connection

Connect HDMI cable from box to HD TV.

2 Power Connection

Once plug in the power cord, it will power on automatically then wait for the LED display.

3 Switching to the correct output source

Use the TV remote control to power on TV, then switch to the correct HDMI input source. Once correct, the TV should display the box home interface.

4 Complete setting

 
Follow the startup instruction to finish the basic setting.



Auxiliary Connection


Connecting to HI-FI

Stereo System

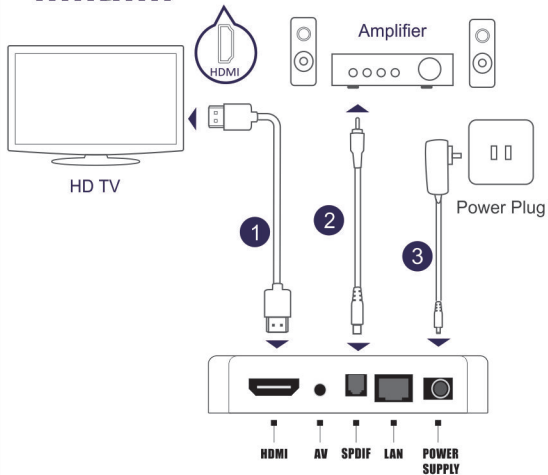

Smart TV conversion

 Connecting to Traditional TV

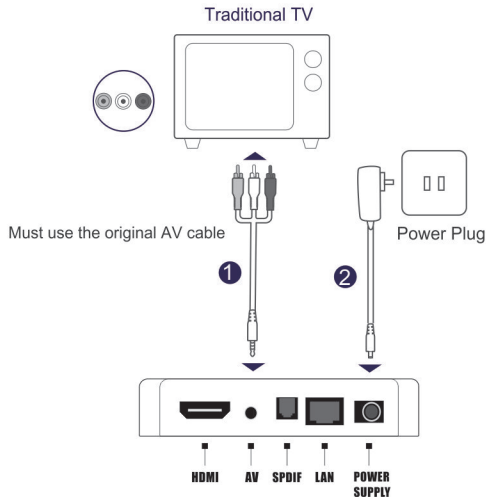

If there no sound after the connecting to stereo system, please check the plug have been insert properly, re-plug If necessary.

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.