

Aux-in Mode

1. You do not have to switch the headphones "on" for this mode.
2. Insert the provided audio cable into "Audio Slot" input on the headphones, and the other end of the audio cable to the playback devices output/line out.
3. In this mode, you can **only** control the **playback volume** with your **playback device** and not with the volume controls on the headphones.

Hands-Free Mode

1. To answer a call, press the answer key on your phone or press the "Answer" button on the headphone.
2. To hang up, press the end key on your phone or press the "hang up the call" button twice on the headphone.
3. To **redial your last call**, double click the call button. Music playback will automatically be paused.

Charging

1. Please ensure that the battery is **fully** charged before using the device for the first time.
2. Connect the provided USB charger cable to the charging slot on the headphones. Connect the other end to the USB wall charger or to the USB port on your computer.
3. The LED indicator light will display a red light when charging.
4. LED indicator light will turn off when headphones are **fully** charged.

TECH • REDEFINED




Made in China

SYMPHONY

Wireless headphone

USER MANUAL

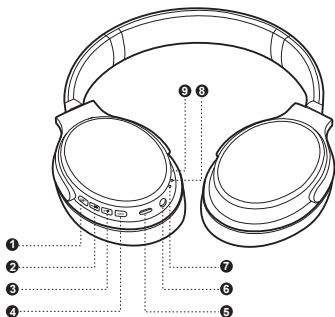

Specification

Model name: Symphony
 Wireless version: V4.2
 Wireless chip: JL + Power amplifier
 Connection port: USB
 Operation distance: 10m
 Rechargeable battery: Lithium ion
 400mAh
 Playback time: 100% volume 10h
 Charging time: 2.5h
 Current: 30mA
 Material: Metallic finish

Feature list

1. ON/OFF/Pause/Play/Answer/Hang up the call
2. Next/Volume+
3. Previous/Volume-
4. MODE
5. Charging slot (USB)
6. Audio Slot
7. Indicator light
8. Microphone built-in
9. TF slot

Wireless Mode

1. Press and hold the "On" button for 3 seconds to turn on the device.
2. The red and blue LED lights will flash, meaning the headphone is ready to pair with a wireless device.
3. Ensure your device's wireless function is on. Search for "Symphony" from the device list. Confirm pairing once your phone finds the device.
4. When pairing is successful, the blue LED light will flash slowly.
5. The headphones are now paired and ready to use with your device.

MP3 Mode

1. Press and hold the "On" button for 3 seconds to turn on the device.
2. Insert your Micro SD, the device will begin to read from the card.
3. Alternatively, short press the "Mode" button until you have cycled to the MP3 Mode.
4. Control the playback using the controls on the headphones.

Volume control

1. Press and hold the "On" button for 3 seconds to turn on the headphones.
2. Control the volume using the controls on the headphones by pressing and holding the "Next/Volume+" or "Back/Volume-" button to adjust the volume level.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Headwind Ceramic Limited may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.