

## Pair up with the subwoofer

### Automatic pairing

Plug the soundbar and the subwoofer into the mains sockets and then press **⏻** on the unit or remote control to switch the unit to ON mode. The subwoofer and soundbar will automatically pair.

- When the subwoofer is pairing with the main unit, the Pair Indicator will flash fast.
- When the subwoofer is paired with the main unit, the Pair Indicator will light up.

### NOTE:

- Do not press the **⊙** button on the subwoofer except for manual pairing.
- If the automatic pairing fails, pair the subwoofer with the main unit manually.

### Manual pairing

If no audio from the wireless subwoofer can be heard, manually pair up the subwoofer.

1. Unplug both units from the mains sockets again, then plug them in again after 3 minutes.
  - Press and hold the **↻** button on the soundbar or on the remote control for 3 seconds.
  - The Pair indicator on the subwoofer will rapidly blink.
2. Then press **⏻** on the unit or remote control to switch the unit ON.
3. The Pair indicator on the subwoofer will become solid when successful.
4. If the Pair indicator still keeps blinking, repeat step 1-3.

### NOTE:

- The subwoofer should be within 6 m of the soundbar in an open area (the closer the better).
- Remove any objects between the subwoofer and the soundbar.
- If the wireless connection fails again, check if there is a objects or strong interference (e. g. interference from an electronic device) around the location. Remove these objects or strong interferences and repeat the above procedures.
- If the main unit is not connected with the subwoofer and it is in ON mode, the unit's POWER indicator will flash.

# Basic Operation

## Standby/On

When you first connect the main unit to the mains socket, the main unit will be in STANDBY mode.

- Press the button on the unit or on the remote control to switch the unit ON.
- Press the button again to switch the unit back to STANDBY mode.
- Disconnect the mains plug from the mains socket if you want to switch the unit OFF completely.

## Auto Wake

- If a TV or an external device is connected (AUX / OPTICAL), the unit will switch on automatically when the TV or the external device is switched on.

## How to Enable Auto Wake

- Short press the  $\rightarrow$ (SOURCE) button and + (VOL +) button on the unit to enable or disable Auto Wake function.
- Auto Wake On: white and green LED blink twice sequentially. While in STANDBY mode, the RED LED is breathing.
- Auto Wake Off: white and red LED blink twice sequentially. While in STANDBY mode, the LED is in solid red.

## Automatic Power Off Function

The unit automatically turns to STANDBY mode after about 15 minutes if the TV or the external unit is disconnected, switched off.

- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.



## Select Modes

Press the  $\rightarrow$ (SOURCE) button repeatedly on the unit or on the remote control to select the OPTICAL, BT(Bluetooth), AUX mode. The selected mode will show on the display.

## Adjust the Bass Button

- Press BASS+/- button to increase or decrease the bass. (bass+5 / bass-5).
- After about 3 seconds, the unit will exit from bass/treble setting. The display will show the current selected mode. You may now press the VOL+ / - buttons to adjust volume.

## Adjust the Volume

- Press the + / - buttons on the unit or VOL+/VOL- on the remote control to adjust the volume.
- If you wish to turn the sound off, press the  (MUTE) button on the remote control. Press the  (MUTE) button again or press the VOL+ / VOL- buttons to resume normal listening.

## Select a Preset Sound Effect

- While playing, press the EQ button on the remote control to select desired preset equalizers: MUSIC, MOVIE, TV.

## OPTICAL/ARC/AUX Operation



1. Ensure that the unit is connected to the TV or audio device.
2. Press the button repeatedly on the unit or on the remote control to select the OPTICAL, BT, AUX mode.
3. Operate your audio device directly for playback features.
4. Press the VOL +/- button to adjust the volume to your desired level.

# Bluetooth Operation

## Pair Bluetooth-enabled Devices

The first time you connect your bluetooth device to this player, you need to pair your device to this player.

### Note:

- The operational range between this player and a Bluetooth device is approximately 26 feet (8m) (without any object between the Bluetooth device and the unit).
  - Before you connect a Bluetooth device to this unit, ensure you know the device's capabilities.
  - Compatibility with all Bluetooth devices is not guaranteed.
  - Any obstacle between this unit and a Bluetooth device can reduce the operational range.
  - If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
1. During ON mode, press the  button repeatedly on the unit or the  (BT) button on the remote control to select Bluetooth mode. "NO BT" will show on the display if the unit is not paired to any Bluetooth device.
  2. Activate your Bluetooth device and select the search mode. "SAKOBS SB2133" will appear on your Bluetooth device list.
    - If you cannot find the unit, press and hold the button on the remote control to be searchable. The display will show "PAIR" and you will hear "Pairing" from the unit.
  3. Select "SAKOBS SB2133" in the pairing list. After successful pairing, you will hear "Paired" from the unit, and the display panel shows "BT".
  4. Play music from the connected Bluetooth device.

## To disconnect the Bluetooth function, you can :

- Switch to another function on the unit.
- Disable the function from your Bluetooth device. The Bluetooth device will be disconnected from the unit after the "Disconnected" voice prompt.
- Press and hold the ►|| button on the remote control.

### Tips:

- Enter "0000" for the password if necessary.
- If no other Bluetooth device pairs with this player within two minutes, the player will recover its previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
- If the connection is lost, follow the instructions above to pair your device to the player again.

## Listen to Music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
  - If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.
1. Pair your device with the player.
  2. Play music via your device (if it supports A2DP).
  3. Use supplied remote control to control play (if it supports AVRCP).
- To pause/resume play, press the ►|| button on the remote control.
  - To skip to a track, press the ◀◀/▶▶ buttons on the remote control.

## Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.


### No power

- Ensure that the AC cord of the unit is properly connected .
- Ensure that there is power at the AC outlet.
- Press STANDBY button to turn the unit on.

## **Remote control does not work**

- Before you press any playback control button,
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

## **No sound**

- Increase the volume. Press VOL + on the remote control or on the soundbar.
- Press  (MUTE) on the remote control to ensure the soundbar is not muted.
- Press source buttons to select a different input source.
- When using either of the Digital inputs, if there is no audio:
  - Try setting the TV output to PCM or
  - Connect directly to your Blu-ray/other source, some TVs do not pass through digital audio.
- Your TV may be set to variable audio output. Confirm that the audio output setting is set to FIXED or STANDARD, not VARIABLE. Consult your TV's user manual for more detailed information.
- If using Bluetooth, ensure that the volume on your source device is turned up and that the device is not muted.

## **I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing**

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.

## **This is a 15 mins power off function, one of the ERPII standard requirement for saving power**

- When the unit's external input signal level is too low, the unit will be turned off automatically in 15 minutes. Please increase the volume level of your external device

## **The subwoofer is idle or the indicator of subwoofer do not light up.**

- Please unplug power cord from the mains socket, and plug it in again after 4 minutes to reset the subwoofer.

# Soecifications

|                                     |   |
|-------------------------------------|---|
| Model Name                          | SB2133                                      |
| Soundbar                            |   |
| Power Supply                        | AC100-240V~50/60Hz 15V/2A                   |
| Power Consumption                   | Max. 60W                                    |
| Standby Power                       | ≤ 0.5 W                                     |
| Dimension (WxDxH)                   | 16.1 x 3.9 x 2.8 inches (410 x 100 x 70mm ) |
| Net weight                          | 3.1 lbs (1.4kg)                             |
| Audio input sensitivity             | 500mV                                       |
| Frequency Response                  | 210Hz - 20KHz                               |
| Wireless Specification              |   |
| Bluetooth Version                   | V 5.0                                       |
| Bluetooth Maximum power transmitted | 10dBm                                       |
| Frequency bands                     | 2402-2480MHz                                |
| Subwoofer                           |   |
| Power Supply                        | AC100-240V~50/60Hz 20.5V/3A                 |
| Power Consumption                   | Max.60 W                                    |
| Standby Power                       | ≤ 0.5 W                                     |
| Dimension (WxHxD)                   | 15.7 x 4.6 x 9.4inches (400 x 116 x 240mm)  |
| Net weight                          | 7.99 lbs (3.6kg)                            |
| Frequency Response                  | 40Hz -90Hz                                  |
| Amplifier (Outputpower)             |   |
| Sound bar                           | 56W, Test Mode@THD=1%                       |
| Subwoofer                           | 60W, Test Mode@THD=1%                       |
| Total                               | 116W  |
| Remote Control                      |   |
| Distance/Angle                      | 6m / 30°                                    |
| Battery type                        | AAA (1.5V X 2)                              |

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

Company name: YICHENG LIMITED

Address:18121 E HAMPDEN AVE

UNIT C--661 AURORA, CO 80013

Tel: 1-800-829-4933

E-mail: marketing@sakobs.com



UK Authorized Representative  
Company name: E2UK LONDON LTD  
Address: 13 Quad Road , East Lane  
Business Park, Wembley HA9 7NE  
Email: e2ukltd@gmail.com  
Tel: +44 7429848355

**Manufacturer:**

Shenzhen Yicheng Technology Co., Ltd  
Room 406, Floor 4, No.9, Zone 2,  
Fuhai Industrial Zone, Fuyong  
Community, Fuyong Street,  
Baoan District, Shenzhen

**US: service@sakobs.cc**  
**EU: deservice@sakobs.cc**  
**JP: jp-service@sakobs.cc**

