



## WIRELESS EARBUDS Model: 160478

### Warnings

- Permanent hearing loss may occur if earbuds are used at high volume. Set the volume to a safe level. You can adapt over time to a high volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:
- Limit the amount of time you use the earbuds at high volume.
  - Avoid turning up the volume to block out noisy surroundings.
  - Turn down the volume if you can't hear people speak near you.

### Battery warning!

- "Caution" – The battery used in the product may present a risk of fire or chemical burn if mistreated. Batteries may explode if damaged.
- Only recharge your battery with the provided approved cable designated for the product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose the battery as household waste or in a fire as it may explode.
- The battery in your product can not be removed or replaced by the user. Any attempt to do so is unsafe and may result in damage of the product.

### Important Safety Precautions

Read all instructions before using your earbuds.

**Important:** Use of earbuds while operating a vehicle, motorcycle, watercraft or bicycle is not recommended and is illegal in some areas. Check and obey applicable laws and regulations on the use of earbuds while your operating a vehicle. Be careful and attentive while driving. Stop listening to your audio device if you find it disruptive or distracting while operating any of vehicle or performing another activity that requires your full attention.

 
 
- Never expose your earbuds to high temperatures, extreme cold or submerge in water.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- In order to avoid the risk of electric shock, never attempt to open your earbuds or repair them, consult a certified professional.
- Your earbuds are not to be used by children without adult supervision.
- Do not clean the earbuds with harmful chemicals or detergents.

### Built-in Battery Care:

- Your product is powered by a rechargeable battery. The optimal performance of a new battery is achieved only after two or three complete charge and discharge cycles. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery.
- Always try to keep the battery between 32°F and 113°F. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged.

### Product Overview


**Note:** The earbuds are NOT waterproof or water resistant and should not be used while sweating, showering or submerged in water.

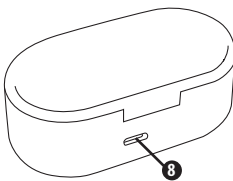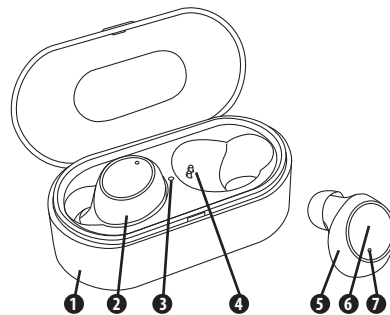

- |                            |                                |
|----------------------------|--------------------------------|
| 1 Earbud Charging Case     | 5 Right Earbud                 |
| 2 Left Earbud              | 6 Earbud Multi-Function Button |
| 3 Case Power Indicator     | 7 Microphone/Indicator Light   |
| 4 Earbud Charging Contacts | 8 Micro-USB Charging Port      |

### Removing the Earbuds

 
Grasp the earbud as shown and pull out the earbud.

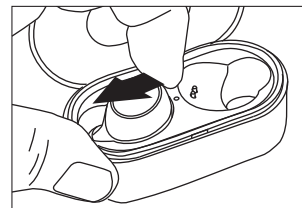

### Turning On/Off the Earbuds

**Turning On:** Press and hold "⦿" button on the earbud for 3 seconds until you hear "Power On" from the earbud.

 **Turning Off:** Press and hold "⦿" button on the earbud for 3 seconds until you hear "Power Off" from the earbud.

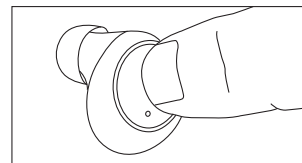

### Bluetooth® Connection (Pairing)

1. Turn on the earbuds by pressing and holding the "⦿" button on the Left and Right earbud at the same time for 3 seconds. The indicator lights will flash red and blue and you will hear "Power On" through the earbuds.
2. Place the earbuds and the Bluetooth device (phone) so that they are no further than 3ft apart.
3. Activate the Bluetooth function on your Bluetooth device. (Refer to the manufacturer's instruction manual to enable Bluetooth on your device).
4. Select "24/7 Life BT Earbuds" from the list of available Bluetooth devices. If your device requires a password enter "0000". If "24/7 Life BT Earbuds" does not appear in your device turn off the Bluetooth function on your device then turn it back on.
5. Once paired successfully, you will hear a confirmation "Connected".

Note 1: The earbuds can be used as a mono earbud. In step one above only power on one of the earbuds then follow the remaining steps above.

Note 2: Placing the earbuds in the charging case will automatically power off the earbuds. Removing the earbuds from the charging case the earbuds will power on automatically.

Note 3: Once you have paired the earbuds with a device, the earbuds will remember this device and will pair automatically when the device's Bluetooth is activated and in range.

Note 4: The earbuds will attempt to automatically connect to the last device it was paired with when you remove the earbuds from the charging case. If you want to pair it with a new device, unpair the earbuds from the present device then follow the steps outlined above for the new device.

### Bluetooth® Connection Trouble Shooting

**Why won't the earbuds connect to my device?**

- a. The Bluetooth setting on your device may have been turned off. Turn on the Bluetooth function and search for the earbuds.
- b. The earbuds may have been connected to another device. Disconnect (unpair) the earbuds from the previous device before connecting them to your device.
- c. The earbuds may not have been recognized by your device. Turn off the earbuds then turn them back on. Search your Bluetooth settings on your device and connect the earbuds.
- d. The earbuds may be too far away from the device to connect. Make sure there are no obstacles between the devices and reconnect the earbuds.

**Why aren't the earbuds playing music?**

- a. The volume level is set at the minimum. Adjust the volume on the device to the desired level.
- b. Make sure the earbuds are connect to the Bluetooth device.

**Why won't the earbuds power on?**

- a. The earbud's batteries need to be charged using the charging case.

"The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SRP Companies is under license. Other trademarks and trade names are those of their respective owners."

## Hands Free Operation

You can control phone calls from the Bluetooth device by using the button on the earbuds. Use the Bluetooth device to control the volume. Use the chart to control your calls:

| Function*          | Operation   |
|--------------------|---|
| Answer a Call      | Short press “⊙” button once                                     |
| End a Call         | Short press “⊙” button once                                     |
| Reject a Call      | Long press “⊙” button for about 2 seconds until you hear a tone |
| Last Number Redial | Quickly press “⊙” button 3 times                                |

\* Note: Not all functions work with all devices or programs.

## Music Operation

You can control your music from the Bluetooth device by using the button on the earbuds. Use the Bluetooth device to control the volume. Use the chart to control your music:

| Function*      | Operation  |
|----------------|--|
| Pause          | Short press “⊙” button once  |
| Play           | Short press “⊙” button once  |
| Next Track     | Press and hold the <b>Right</b> “⊙” button for about 2 seconds until you hear a tone |
| Previous Track | Press and hold the <b>Left</b> “⊙” button for about 2 seconds until you hear a tone  |

\* Note: Not all functions work with all devices or programs.

## Siri and Google Assistant Voice Commands

You can control your Siri or Google Assistant by using the button on the earbuds.

| Function*                | Operation                        |
|--------------------------|----------------------------------|
| Siri or Google Assistant | Quickly press “⊙” button 2 times |

 
\* Note: Not all functions work with all devices or programs.

## Charging the Earbud Case


The earbud case has a built-in rechargeable battery. It is recommended to fully charge the case before using.

1. Use the enclosed micro-USB cable to charge the case from a computer's USB port or from a car/wall charger.

### Charging via Computer's USB Port:

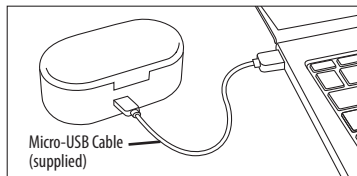

### Charging via USB Wall Charger:

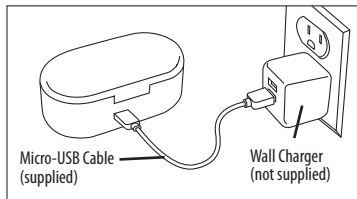 


2. Check the earbud case power indicator.
  - Light flashing red = Case is charging
  - Light solid red = Case is fully recharged

Note 1: It takes approximately 2 hours to fully recharge the case.

Note 2: The earbud case must be connected to a power source to view the case's power indicator light.

## Charging the Earbud Case (continued)

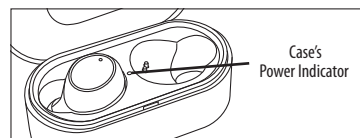 

### Trouble Shooting:

1. Case's power indicator not lit.
  - Micro-USB cable is not fully inserted.
  - Make sure the micro-USB cable is receiving power from connected charger.
2. Case's power indicator is blue when an earbud is inserted.
  - Micro-USB cable is not fully inserted.
  - Make sure the micro-USB cable is receiving power from connected charger.

## Charging the Earbuds

Place the earbuds into the earbud case. The earbuds will immediately power off and start charging.

- Earbud's power indicator light is red = Earbud is charging.
- Earbud's power indicator light is blue for a short period of time = Finishing charging and charging will stop soon.
- Earbud's power indicator is off = Fully recharged.



## Charging the Earbuds (continued)

Note 1: The earbuds can be charged without the earbud case connected to a charger. The case's power indicator light will be blue which indicates the case has power to charge the earbuds. When the blue power indicator light goes out on the earbud case, the earbud case needs to be recharged.

Note 2: The earbuds can be charged at the same time the earbud case is being charged. The earbud case's power indicator light will be red.

### Trouble Shooting:

1. Earbud's power indicator does not appear when pressed.
  - Earbuds need to be charged.
  - Earbuds needs to be turned on.
2. Earbud is placed into the earbud case and earbud's power indicator light does not come on.
  - Earbud case needs to be recharged.

## Specifications

Frequency Response: 20Hz-20KHz  
Sensitivity: 102db ± 5dB  
Driver Unit: Diameter: 6.0mm, height: 4.9mm  
Battery in Charging Case: 300mAh  
Battery in Earbud: 50mAh  
Earbud Battery Charge Method: Earbud Case  
Battery Charge Time: Earphone: 1-1.5 hours. Charging Station: 1-2.0 hours.  
Battery Life Earphone: 2.5 hours  
Supplied Accessories: Earbud Case and 25cm Micro-USB Cable  
Bluetooth® Technology: 5.0 with A2DP Audio Processing  
Effective Range: Straight-line distance 10m under no obstacle  
Certification Type: FCC, Bluetooth  
Specifications are subject to change without notice.

## FCC Information

FCC ID: 2ATF51604781

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Unique Identifier: M-67722

Responsible Party – U.S. Contact Information

SRP Companies: 85 Rio Grande Drive, Second Floor

Castle Rock, CO, 80104 USA

Tel: 1-800-208-0070

### FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.