 


**CRAZVIEW**

**PROVIDE YOU  
A NEW VISION**

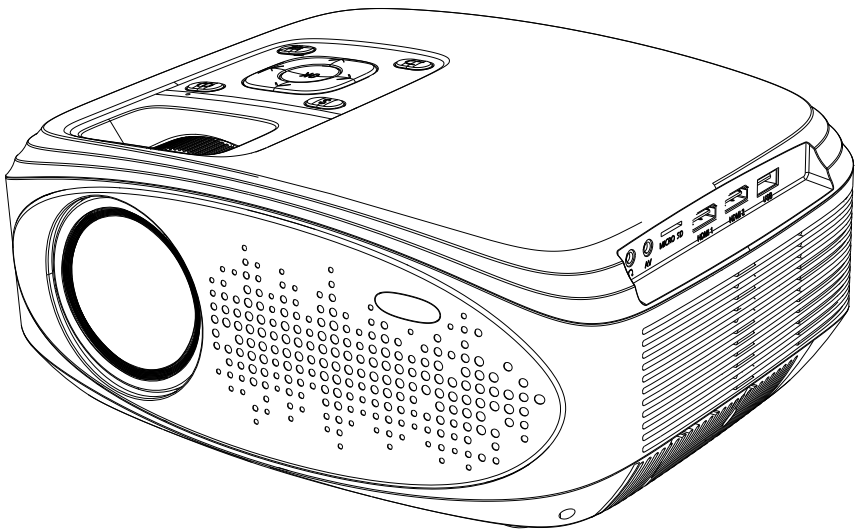

Model NO: JQ901A

**User Manual**

 
 
 
 
 
# LANGUAGE

English Manual .....	1
Deutsch Handbuch .....	15
Manuel en français .....	30
Manuel Italiano .....	45
Manual en español .....	60
日本語取扱説明書 .....	73

## **ADDITIONAL WARNINGS AND PRECAUTIONS**



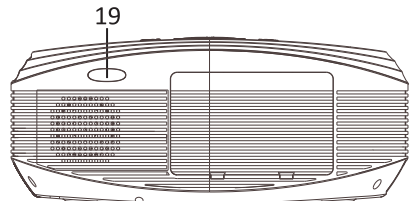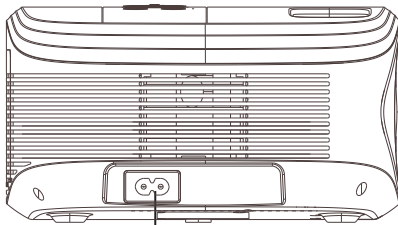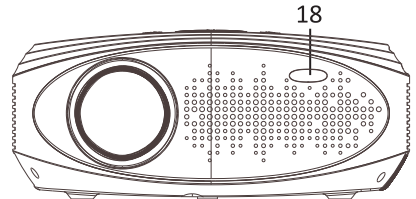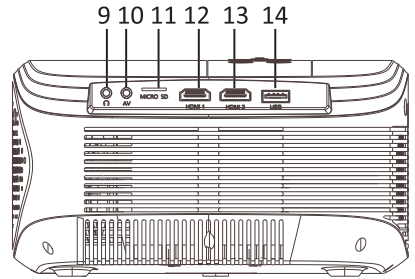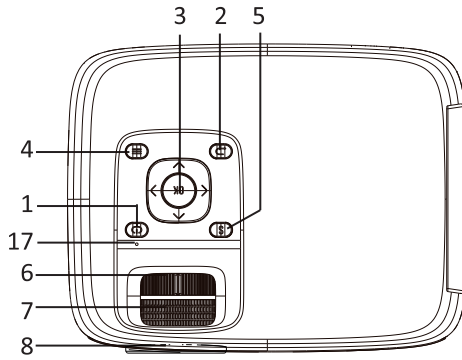


1. Do not look directly into the projector light.
2. Don't touch the projector lens.
3. Mains adapter is used as a disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
4. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
5. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
6. Use of this unit near fluorescent lighting may cause interference regarding the use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
7. Shock hazard - Do Not Open.
8. Caution and marking information is located at the rear or bottom of the apparatus.
9. To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
10. Objects filled with liquids, such as vases, shall not be placed on the apparatus.

# PRODUCT OVERVIEW



 
15

16

1. POWER  Button
2. RETURN  Button
3. NAVIGATION  Button
4. MENU  Button
5. SOURCE  Button
6. Keystone Correction
7. Focusing Ring
8. LENS
9. Headphone Jack
10. AV


11. Micro SD Card
12. HDMI Port 1
13. HDMI Port 2
14. USB Port
15. POWER INPUT
16. Adjusting Knob
17. POWER on Indicator
18. IR Window (Front side)
19. IR window (Rear side)

# CONTROL

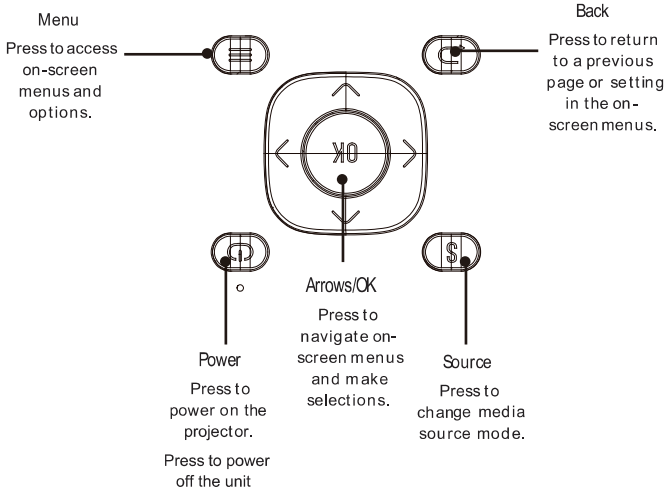


## Install Power Adapter

 As shown in Picture ①, connect the projector and the power source with the include AC Power cable.

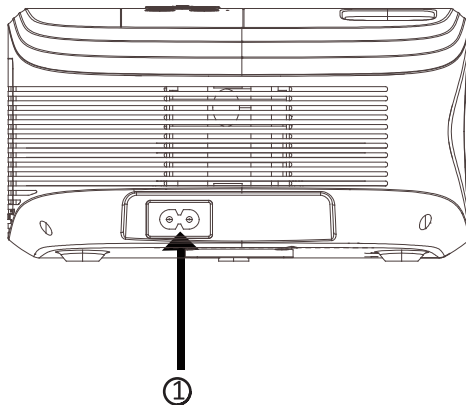


# CONTROLS OF REMOTE

 - Power**  
Press to power ON.  
Press to power OFF.
- ◀◀ Previous / Next ▶▶**  
Press to skip between chapters or tracks.
- Flip**  
Press to flip display image 180°.
- ▶▶ Play/Pause**  
Press to play or pause an individual chapter or track.
- Arrows/OK**  
Press to navigate and confirm selections in Settings and other menus.
- Menu**  
Press to access projector Settings.
- Go To/Number Keypad**  
Press to enter specific chapter or track numbers. Use Play button to begin playing.
- PIC**  
Press to access picture settings.

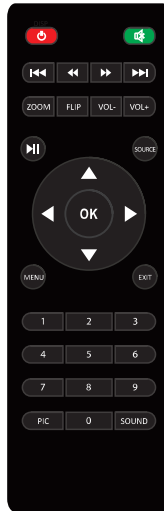

- Mute**  
Press to mute volume.
- ◀◀ Back / Fwd ▶▶**  
Press to search through an individual chapter or track.
- VOL+ / VOL-**  
Press to adjust audio level.
- Source**  
Press to select media source (AV, PC, HDMI, MEDIA).
- Exit**  
Press to exit menus.
- Zoom**  
Press to zoom display image in or out.
- SOUND**  
Press to access sound settings.

## Install / Remove Battery Of Remote

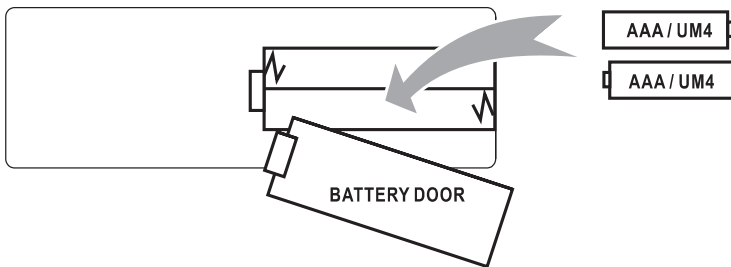 

Remove the battery compartment cover on the back of your remote by carefully sliding to open. The battery cover can then be lifted away. Fit the correct batteries (2 X AAA batteries not included), referring to the polarity markings. Finally, replace the cover.


### NOTES:

 - Batteries shall not be exposed to excessive heat such as sunshine, fire
- Be sure that the batteries are installed polarity correctly.
- Only same or equivalent type batteries as recommend are to be used.
- Do not dispose of batteries in fire, battery may explode or leak. Do not try to recharge a battery
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries

## TO REDUCE IMAGE DISTORTION

It is recommended to move the projector as close to center of screen.

Square /Rectangle

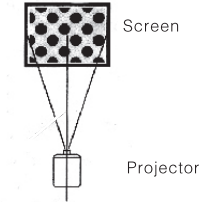


## PLACING YOUR PROJECTOR ON CEILING

When installing the projector in the ceiling, please purchase a projector mount recommended by an installation professional and follow the instructions that come with the mount.


Before installing the projector in the ceiling, please check to make sure the ceiling structure can support the weight of the projector and the mount. If in doubt, please ask the advice from an installation professional.

 **NOTE:** Projector mount and screw(s) not included

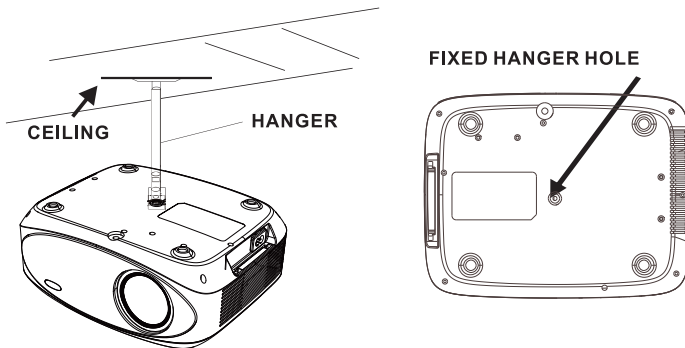

## ADJUST THE VERTICAL LOCATION

 Follow below picture to adjust the vertical location.

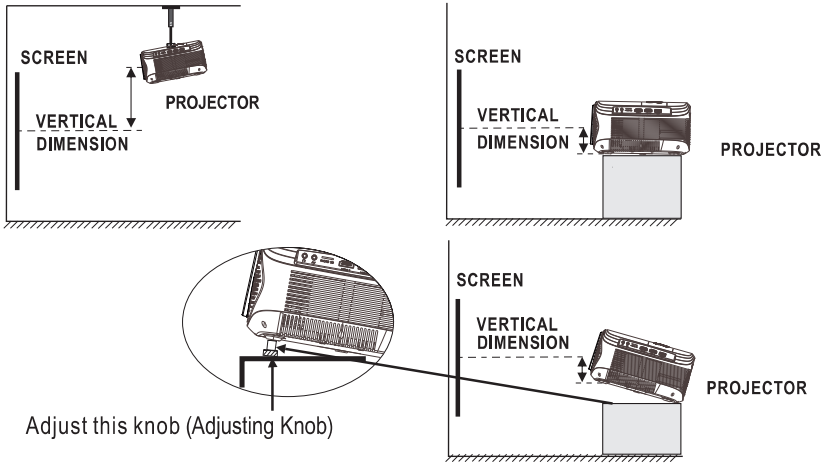


## TO REDUCE IMAGE DISTORTION

It is recommended to move the projector as close to center of screen.


Adjust the focus by turning the knob while observing the image pixels near the center of the screen. Optimal focus is obtained when the pixels are clearly visible. Depending on the projected screen size, the focus near the screen edges may be less sharp than the screen center.

 FOCUSING RING  
Then sharpen the image  
by rotating focus knob

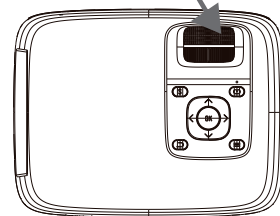

KEYSTONE CORRECTION

 Keystone image is created when the projector beam is projected to the screen in an angle. Keystone correction will restore the distorted image to a rectangular or square shape.

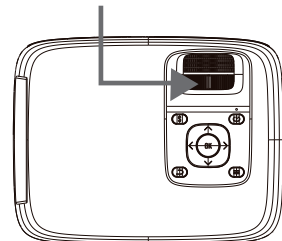



# CONNECTION

## Wired Screen Mirroring Connection

### CONNECT AN IPHONE/PAD

1. Press the signal source key "s" of the projector or the remote control and select "Miracast". Then select IOS Miracast.
2. Plug an original USB charging cable into the USB port of this projector.
3. Please select "Trust this device" when the iPhone asks "Trust" or "Don't trust", and enter the Your iPhone password to connect.

## Wireless Screen Mirroring Connection - Connection Method 1

### WIRELESS WIFI CONNECTION-WIFI TRANSFER CONNECT AN IPHONE/IPAD

1. Press the key "s" of the projector or the [source] button on the remote control and select "Miracast".
2. Select Setting, click wifi setting, select your home wireless network in the projector display interface, enter the password. ( or long press "menu" button on the remote control or on the project to set wifi )
3. Open the phone WiFi settings, connect to your home wireless network .Make sure the projector and phone are connected to the same WiFi.
4. Comeback to IOS Miracast .Slide the phone interface from the bottom up to enter the control central (Full-screen phones slide down from above, - those with home button slide up from below), then open "Screen Mirroring". Then search and select the projector device, (Note: the name of the projector device is Dualcast-\*\*\*\*\*), click to connect.

# CONNECTION

## CONNECT AN ANDROID PHONE/TABLET

1. Press the key "s" of the projector or the [source] button on the remote control and select "Miracast".
2. Select Setting, click wifi setting, select your home wireless network in the projector display interface, enter the password. ( or long press "menu" button on the remote control or on the project to set wifi )
3. Comeback to Android Miracast. Since different brands of Android phones have different settings, find the screen share and connect the projector, Samsung phones find "Smart View", other phones find "Multi-screen" or "Wireless projection", Then Search and select the projector device (Note: The name of the projector device is Dualcast-\*\*\*\*), click to connect.

## Wireless Screen Mirroring Connection - Connection Method 2

### CONNECT AN IPHONE/IPAD

Requires Cellular Data Traffic Transfer

1. Press the signal source key "s" of the projector or the remote control and select "Miracast". Then select IOS Miracast.
2. Open the wifi in the Phone settings, search and select projector hotspot Dualcast-\*\*\*, enter password to connect (Note: The hotspot name is on the projector screen "SSID : Dualcast-\*\*\*\*", the password is "PSK: "12345678").
3. Slide the phone interface from the bottom up to enter the control central. (Full screen phones slide down from above, those with home button slide up from below), then open "Screen Mirroring ". Then Search and select the projector device (Note: The name of the projector device is Dualcast-\*\*\*\*), click to connect.

# CONNECTION

## CONNECT AN ANDROID PHONE/TABLET

1. Press the signal source key "s" of the projector or the remote control and select "Miracast". Then select Android Miracast .
2. Since different brands of Android phones have different settings, find the screen share and connect the projector. Samsung phones find "Smart View", Huawei phones find "Multi-screen". Then Search and select the projector device (Note: The name of the projector device is Dualcast-\*\*\*), click to connect.

## CONNECT A WINDOWS DEVICE

1. Press the signal source key "s" of the projector or the remote control and select "Miracast". Then select Windows Miracast .
2. Open the windows device settings interface and find the "Connections" icon.
3. Search and select the projector device: Dualcast-\*\*- and click Connect."

### More Tips about Netflix, Prime video, Hulu, etc

It works with youtube, chrome, safari, facetime when you connect it to a smartphone directly.



And it doesn't support play protected video when you connect it to your smartphone directly. (Netflix, Prime video, Hulu, etc) Due to these video have an encryption protocol, the projector has no right to recognized when it is connected directly to the phone via the USB interface.

But it works with Netflix, Amazon prime video or any other copyright videos when connecting this projector to a laptop, fire tv stick, Roku or Chrome cast. The reason why the fire stick or other HDMI device can play Netflix is because the HDMI interface encryption protocol includes Netflix's.

 
# CONNECTION

## Connect HDMI Show The Image On Projector Screen

Follow below picture to connect HDMI cable and device.

1. Turn off the unit before connect HDMI cable.
2. After connect, press the  button to turn on unit and power indicator will light GREEN
3. Press the “S” / **SOURCE** button to HDMI mode and the video of HDMI device will show on projector screen. There are 2 HDMI input, HDMI1 interface corresponds to HDMI 1 in SOURCE mode , and HDMI2 interface corresponds to HDMI 2 in SOURCE mode.
4. Press the  button to turn off unit power.

## HDMI HD Signal Input : This Interface Can Be Input With HD Player HDMI Output At The Connection

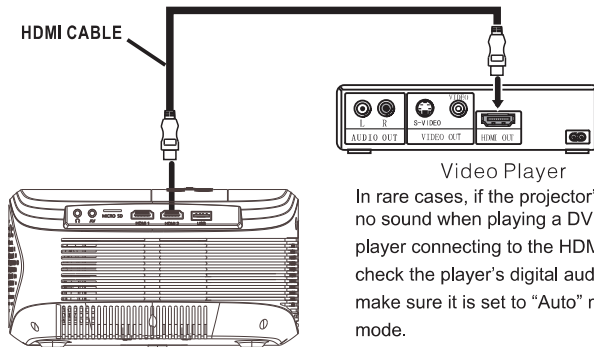



### Video Player

 
In rare cases, if the projector's speaker has no sound when playing a DVD movie in a player connecting to the HDMI input, please check the player's digital audio settings and make sure it is set to "Auto" mode or "PCM" mode.

# CONNECTION

## Connect AV Show The Image On Projector Screen

Follow below picture to connect AV cable and device.


1. Turn off the unit before connect AV cable.
2. Use AV cable to connect follow below figure
3. After connect, press the  button to turn on unit and power indicator will light GREEN
4. Press the “S”/ **SOURCE** button to AV mode and the video of AV device will show on projector screen
5. Press the  button to turn off unit power.

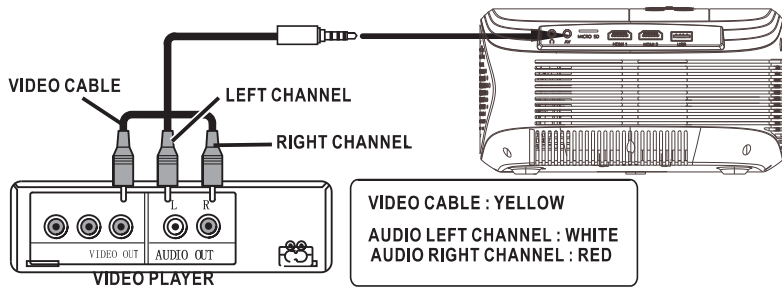


# CONNECTION

## Connect Audio Output (Aux Out / Line Out / Earphones)

Follow the below picture to connect the audio cable and device.

1. Press the  button to turn off the power of your projector before the connection.
2. Use an audio cable to connect follow the below figure.
3. After connect and turn on both units. Your projector sound from an external device now.
4. After using , turn off both unit.

 
### Station Amplifier

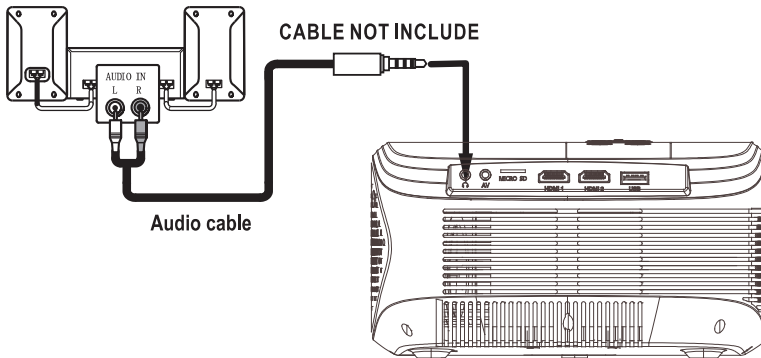

## Install USB Device And Micro SD Card

 Follow the below picture to install the USB and microSD Card.



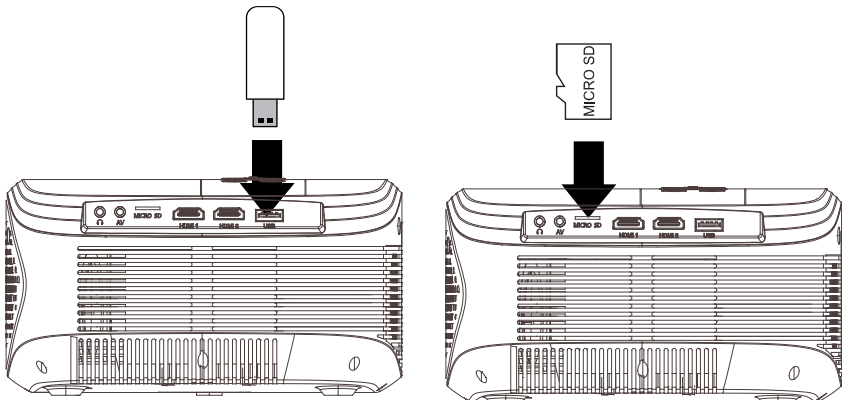













Turn off the unit before installing the USB / microSD Card.




## CONNECTION
 
### Using microSD Card And USB Playback (Media Player)

Install USB / Micro SD device:

1. Turn off the unit before install USB / microSD Card.
2. Install the USB device into USB port.
3. After connect, press the  button to turn on unit and the power indicator light GREEN.
4. Press the "S" / **SOURCE** button to enter and use  buttons to search the MEDIAPLAYER mode.
5. After selection, use  buttons to search the MUSIC / PHOTO / MOVIE icon and press the  button to enter. If necessary, use the  /  button to select microSD card or USB and press the  button to enter.
6. Use  buttons to search the correct file and press the  button to preview playback file and press the  button of unit or  button of remote to start playback.
7. Press  /  button to fast search forward and rewind.
8. Press  /  button to search next or previous file.
9. During playback, press the  button to pause and press again to resume.

**NOTE:** Remove USB / microSD device, press the  button to turn power **FIRST**.

## USING BLUETOOTH PLAYBACK

 
### Pairing to Bluetooth Wireless Speakers or Sound Bar

**NOTE: Bluetooth is OFF by default when the projector powers ON. Bluetooth can be turned ON or OFF from the OPTIONS Menu.**

1. Enable Bluetooth on the receiver (external speakers, sound bar, etc.) to which you wish to connect. Devices such as smartphones, tablets, or computers are not Bluetooth receivers and will not connect to the projector. To eliminate confusion, you should disable Bluetooth on all receivers to which you do not wish to connect.

The bluetooth pairing list is not acceptable, it needs show what is the step to turn on the projector and show the picture on the manual.

2. Power on the projector and make sure the projector's Bluetooth is on and in pairing mode (see note above). Press the menu key from the remote>>>select BlueTooth>>>press the navigation >/< to turn on the bluetooth>>>Select the bluetooth on, press the OK key from the remote, when the Scan shows on the screen, press the OK key again>>>When the screen shows 'Searching, pl...' >>>the bluetooth devices name will be shown on the screen, select it and press the OK key to connect it.

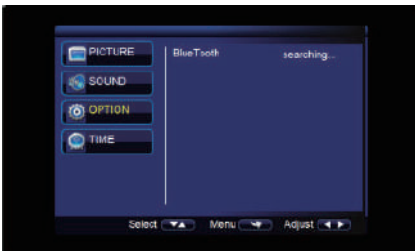

3. When successfully paired, it will show ' Bluetooth Connected' on the menu. Exit the menu, the sound will come out from the bluetooth speaker.


4. It can connect last bluetooth speaker automatically when the unit is powered on again.

Note: It needs power on the last connected bluetooth speaker first, then turned on the projector. If it can't connect last devices automatically, please repeat step 2~3.

After initial pairing, the projector and the Bluetooth speakers will stay paired unless unpaired manually by the user, or erased due to a reset of either device. If this occurs, or you find either unit is unable to connect, repeat the above steps.



 @CRAZVIEW

 1-888-965-5888

 US: [service@crazviewtec.com](mailto:service@crazviewtec.com)

 UK: [service.uk@crazviewtec.com](mailto:service.uk@crazviewtec.com)

 EU: [service.eu@crazviewtec.com](mailto:service.eu@crazviewtec.com)

 
 
 
 
 
 JP: [service.jp@crazviewtec.com](mailto:service.jp@crazviewtec.com)




 

 [www.crazviewtec.com](http://www.crazviewtec.com)

## **ZUSÄTZLICHE WARNHINWEISE UND VORSICHTSMASSNAHMEN**

1. Schauen Sie nicht direkt in die Projektorleuchte.
2. Berühren Sie nicht das Projektorobjektiv
3. Der Netzadapter wird als Trennvorrichtung verwendet und sollte während des beabsichtigten Gebrauchs leicht funktionsfähig bleiben. Um das Gerät vollständig vom Stromnetz zu trennen, muss der Netzstecker vollständig von der Steckdose getrennt werden.
4. Die Verwendung von Kontrollen oder Einstellungen oder die Durchführung anderer als der angegebenen Verfahren kann zu einer gefährlichen Strahlenexposition führen.
5. Änderungen oder Modifikationen an diesem Gerät, die nicht ausdrücklich von der für die Einhaltung verantwortlichen Partei genehmigt wurden, können zum Erlöschen der Berechtigung des Benutzers zum Betrieb des Geräts führen.
6. Die Verwendung dieses Geräts in der Nähe von Leuchtstofflampen kann zu Störungen bei der Verwendung der Fernbedienung führen. Wenn das Gerät ein unregelmäßiges Verhalten zeigt, entfernen Sie sich von fluoreszierenden Lichtquellen, da dies die Ursache sein kann.
7. Stromschlaggefahr - Nicht öffnen.
8. Warn- und Kennzeichnungsinformationen befinden sich auf der Rückseite oder Unterseite des Geräts.
9. Um die Gefahr von Feuer oder Stromschlag zu verringern, setzen Sie dieses Gerät nicht Regen, Feuchtigkeit, Tropfen oder Spritzern aus.
10. Mit Flüssigkeiten gefüllte Gegenstände wie Vasen dürfen nicht auf das Gerät gestellt werden.

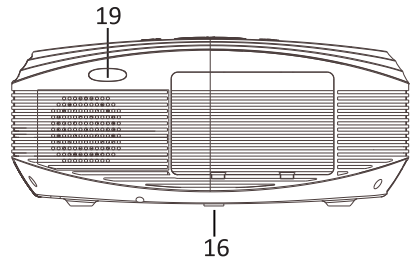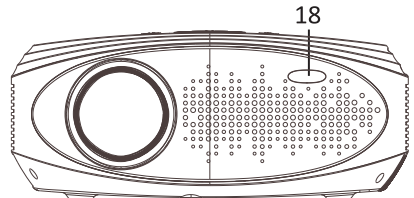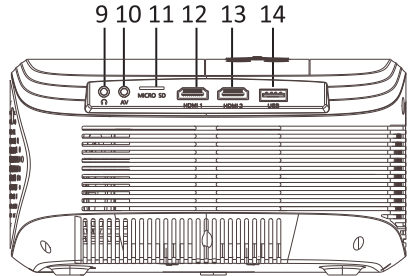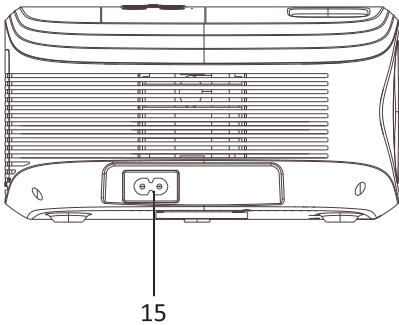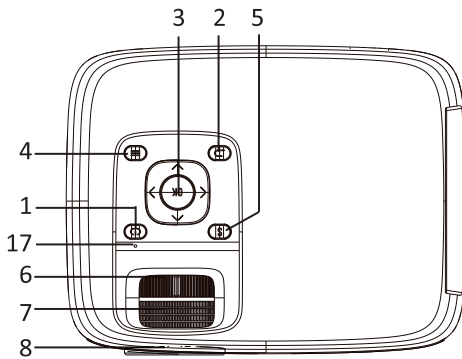 
# PRODUKTÜBERSICHT



1. POWER  Taste
2. RÜCKKEHR  Taste
3. NAVIGATION  Taste
4. MENU  Taste
5. SOURCE  Taste
6. Keystone-Korrektur
7. Fokussiering
8. LINSE


9. Kopfhörerbuchse
10. Av
11. Micro SD-Karte
12. HDMI-Anschluss 1
13. HDMI-Anschluss 2
14. USB Port
15. Leistungsaufnahme
16. Einstellknopf
17. POWER on-Anzeige
18. IR-Fenster (Vorderseite)
19. IR-Fenster (Rückseite)

# KONTROLLE

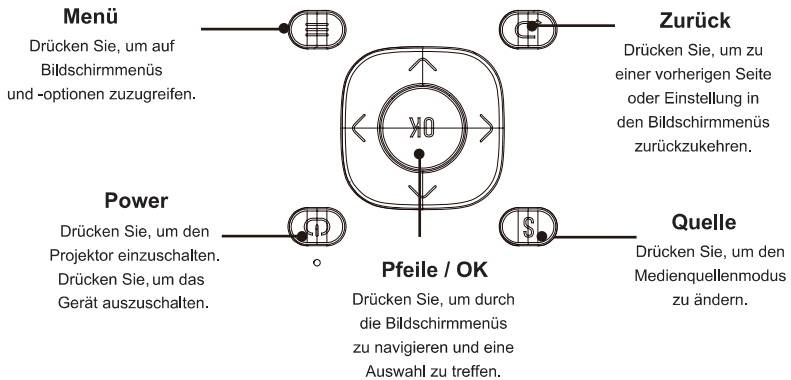

## Installieren Sie das Netzteil

 Verbinden Sie den Projektor und die Stromquelle wie in Abbildung ① gezeigt mit dem mitgelieferten Netzkabel.

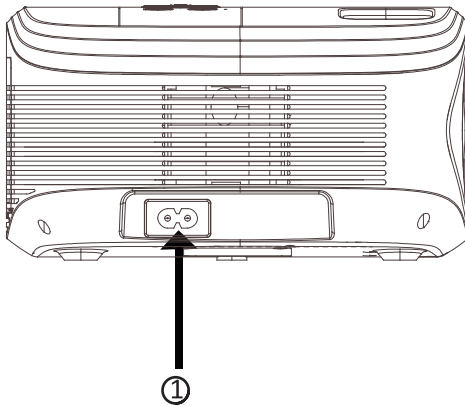

# KONTROLLEN DER FERNBEDIENUNG

## Power

Zum Einschalten drücken.  
Zum Ausschalten drücken.

## ◀◀ Vorherige Nächste ▶▶

Drücken Sie, um zwischen Kapiteln oder Titeln zu wechseln.

## Flip

Drücken Sie, um das Anzeigebild um 180 ° zu drehen.

## ▶|| Spielpause

Drücken Sie, um ein einzelnes Kapitel oder einen Titel abzuspielen oder anzuhalten.

## Pfeile / OK

Drücken Sie, um in den Einstellungen und anderen Menüs zu navigieren und die Auswahl zu bestätigen.

## Speisekarte

 
Drücken Sie, um auf die Projektoreinstellungen zuzugreifen.

## Gehe zu / Zifferntastatur

Drücken Sie, um bestimmte Kapitel- oder Titelnummern einzugeben. Verwenden Sie die Wiedergabetaste, um mit dem Spielen zu beginnen.

## PIC

Drücken Sie, um auf die Bildeinstellungen zuzugreifen.

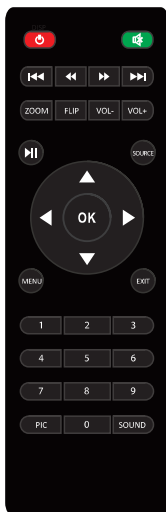

## Stumm 🔇

Drücken Sie, um die Lautstärke stummzuschalten.

## ◀◀ Zurück / Vorwärts ▶▶

Drücken Sie, um ein einzelnes Kapitel oder einen Titel zu durchsuchen.

## VOL + / VOL-

Drücken Sie, um den Audiopegel anzupassen.

## Quelle

Drücken Sie, um die Medienquelle (AV, PC, HDMI, MEDIA) auszuwählen.

## Ausgang

Drücken Sie, um die Menüs zu verlassen.

 
## Zoomen

Drücken Sie, um das Anzeigebild zu vergrößern oder zu verkleinern.

## KLANG

Drücken Sie, um auf die Toneinstellungen zuzugreifen.

## Installieren / Entfernen Sie den Akku der Fernbedienung

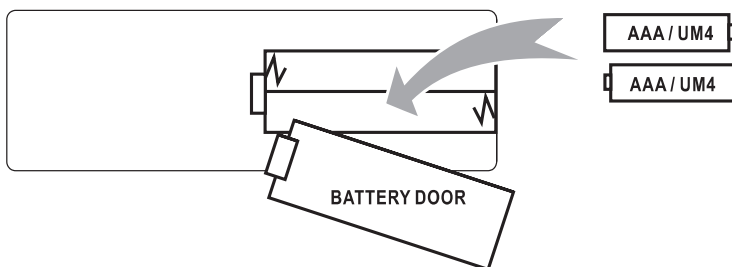

Entfernen Sie die Batteriefachabdeckung auf der Rückseite Ihrer Fernbedienung, indem Sie sie vorsichtig zum Öffnen schieben. Die Batterieabdeckung kann dann abgehoben werden. Legen Sie die richtigen Batterien ein (2 x AAA-Batterien nicht im Lieferumfang enthalten), und beachten Sie dabei die Polaritätsmarkierungen. Zum Schluss setzen Sie die Abdeckung wieder auf.


### ANMERKUNGEN:

 - Batterien dürfen keiner übermäßigen Hitze wie Sonnenschein oder Feuer ausgesetzt werden.
- Stellen Sie sicher, dass die Batterien richtig eingelegt sind.
- Es dürfen nur die gleichen oder gleichwertigen Batterien wie empfohlen verwendet werden.
- Batterien nicht im Feuer entsorgen, da sie explodieren oder auslaufen können. Versuchen Sie nicht, einen Akku aufzuladen.
- Mischen Sie keine alten und neuen Batterien.
- Mischen Sie keine alkalischen, Standardbatterien (Kohlenstoff-Zink) oder wiederaufladbaren Batterien (Ni-Cad, Ni-Mh usw.)

## BILDVERZERRUNG REDUZIEREN

Es wird empfohlen, den Projektor so nahe wie möglich an die Bildschirmmitte zu bringen.

Squadrat / Rechteck

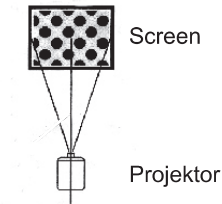

## SETZEN IHRES PROJEKTORS AUF DECKEN

Wenn Sie den Projektor in der Decke installieren, kaufen Sie bitte eine von einem Installationsfachmann empfohlene Projektorhalterung und befolgen Sie die mit der Halterung gelieferten Anweisungen.

Überprüfen Sie vor dem Einbau des Projektors in die Decke, ob die Deckenstruktur das Gewicht des Projektors und der Halterung tragen kann. Im Zweifelsfall wenden Sie sich bitte an einen Installationsprofessor.

**HINWEIS:** Projektorhalterung und Schraube (n) nicht enthalten.

