

KA215 Pro 美国说明书

尺寸：100*130CM

封面157G铜板纸，彩色印刷，封2封3留白

内页：80G书纸，黑白印刷

BIGASUO

Karaoke Machine

User Manual



Model: KJM-215

CATALOG

OPERATING INSTRUCTIONS.....	1
PRODUCT CONTENTS.....	2
SPEAKER DESCRIPTION.....	3
MICROPHONE DESCRIPTION.....	5
DETAILED USAGE GUIDE.....	7
PRODUCT ATTRIBUTES.....	9
FQA.....	10
FCC WARNING STATEMENT.....	11

Thank you for purchasing our products! This manual provides important information that will help you safely operate this karaoke machine.

Please read this user manual carefully before using this product. Thank you!

If you have any problem with the product, please don't hesitate to email us at:

us-karaoke-215@eitack.com

We will reply to you within 24 hours and give you the best solution.

OPERATING INSTRUCTIONS

All the instructions should be read carefully before operation and follow the instructions.

- * The speaker should be situated away from heat sources such as radiators, and not exposed to moist air or water.
- * Place the machine in a stable place to prevent it from falling down.
- * Do not use the machine with attachments not approved by the manufacturer.
- * Check the machine for damage before each use. Please don't attempt to repair the machine if you are not professional.
- * Disconnect the power cable from the outlet and switch it off before cleaning the machine. Please only use a soft cloth, with no harsh abrasives or chemicals to clean, as they will damage the appearance.
- * The power cable of the speaker should be unplugged from the socket, and the power switch should be turned off when not in use for a long time.
- * Please don't leave the speaker and the microphones in a state of exhaustion for a long time, otherwise the battery will be seriously depleted.
- * When the microphone is turned on, Do not point the microphone to the machine straightly to avoid howling.

 
PRODUCT CONTENTS




1 x Karaoke Machine




2 x Wireless Microphones



1 x 3.5 mm AUX Cable

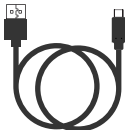 

1 x Charging Cable for Karaoke Machine

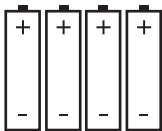 


4 x AA Battery



1 x User Manual

Note: Please check the product packaging carefully, if any accessories are missing, please contact the after-sales service personnel by email at us-karaoke-215@eitack.com

 SPEAKER DESCRIPTION

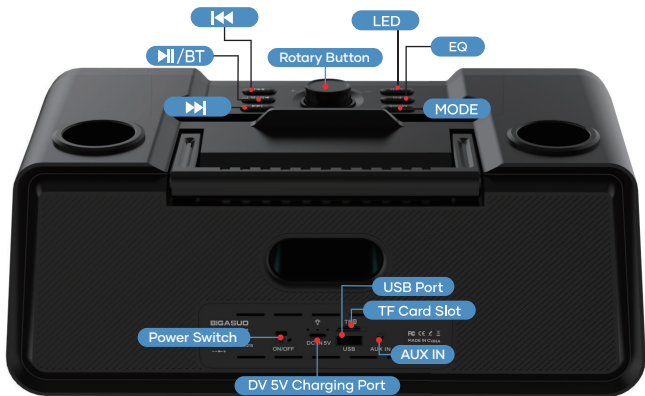

Mode: Short press to switch playback mode: Bluetooth/SD/AUX/USB

EQ:

① Short press to switch between outdoor or indoor mode (default indoor mode)

② Long press to switch between music and accompaniment.

LED: Short press to turn on/off the light and switch the light color.

⏮: Short press to switch to the previous song

⏸/BT:

① Short press to pause/play

② Long press to forcibly disconnect the connected Bluetooth

⏭: Short press to switch to the next song

Rotary Button: Rotate to adjust the volume of the karaoke speaker.

Note:

The volume of the speaker can be adjusted by the volume rotatable button. At the same time, the sound key of the connected playback device (mobile phone/iPad/TV) can also control the volume of the speaker.


When you adjust the volume rotatable button to the maximum, if the sound is still low, please increase the volume via the sound key of your playback device (mobile phone/iPad/TV).

Instructions for use

As you power on, Bluetooth mode is the default. You could search for the Bluetooth device named "BIGASUO KA215 Pro" on your phone/iPad for connection.

It will be converted to TF card mode when you insert the TF card. It will be converted to USB mode when you insert the USB. It will be converted to AUX mode when you insert the AUX cable. When inserting the TF card, USB and AUX cable at the same time, press the "MODE" button to convert the mode.

Note:

- ① When Bluetooth is connected, the Bluetooth status indicator light is on; When Bluetooth is not connected, Bluetooth status indicator light.
- ② Long press /BT to forcibly disconnect the connected Bluetooth.

Singing Instructions

1. When the karaoke speaker is turned on, the wireless microphone is connected to the karaoke speaker by default after it is turned on.
2. Short press the "EQ" button to switch between outdoor or indoor mode (default indoor mode). Long press the "EQ" button to switch between music and accompaniment.
3. When using the mobile phone/tablet to play music, the volume of the karaoke speaker can also be adjusted through the mobile phone/tablet.
4. The volume is adjusted according to your personal preference to achieve the desired singing effect.

MICROPHONE DESCRIPTION



Play/Pause: Press the button to play/pause

EQ: Press to switch between outdoor or indoor mode(default indoor mode)

Music VOL-: Press the button to decrease the volume of the karaoke speaker

Music VOL+: Press the button to increase the volume of the karaoke speaker

MIC VOL-:

- ① Short press to decrease the volume of the microphone
- ② Long press to reduce the reverb effect

MIC VOL+:

- ① Short press to increase the volume of the microphone
- ② Long press to enhance the reverb effect

Power:

- ① Short press to change frequency (If you have two Karaoke speakers, when the frequency bands of the microphones are the same, you can change the frequency bands of the microphones so that the microphones are in different frequency bands.)
- ② Long press to turn on/off the microphone.

DETAILED USAGE GUIDE

How to charge the machine?

Use the included charging cable to plug into the DC 5V charging port on the back of the karaoke speaker to charge.

How to install the batteries to the microphones?

- ① Hold the microphone and rotate the lower part of the microphone counterclockwise;
- ② Put in the included 2 AA batteries.
- ③ Twist the bottom of the microphone clockwise to tighten.



How to connect to Bluetooth?

Short press the "MODE" button to switch playback options to Bluetooth, open the Bluetooth connection setting of your playback device, and simply search for the karaoke machine name "BIGASUO KA215 Pro" and click to connect.

How to use SD mode?

Plug your TF card into the TF card slot on the back of the karaoke machine. Playback will begin immediately.

How to start AUX mode?(Playing music from an AUX-compatible device like MP3 Player, Phone, or TV)

Plug the AUX Cable into the designated slot on the back of the karaoke machine to activate AUX mode. Then, plug the other end of the adapter into the designated inputs on your device and play music.

How to use USB mode(Playing music from a USB drive)

Plug a USB stick into the USB port on the back of the machine and your music will begin playing automatically.

How to clean?

Turn the machine off and unplug it from the charging adapter. Gently wipe the outside of the machine using a clean dry cloth. Keep all vents, buttons, and openings free of lint and dirt. Do not immerse the machine in water and do not use any harsh cleaners.

How to store?

Charge the machine so that it is ready for next use. Make sure that the machine is clean and dry. Store the machine in a cool dry place away from damaging machine parts.

PRODUCT ATTRIBUTES

Speaker Power	2*15W
Power input	TYPE-C 5V /2A
Bluetooth transmission distance	10 meters
Support interface	TYPE-C charging port, USB multimedia interface, TF card multimedia interface, AUX audiointerface.
Materials	Plastic and Stainless Steel

FQA

Questions	Solution
The battery icon on the microphone screen is blinking.	The microphone battery is low, replace the battery in time.
The microphone will not turn on.	The microphone is powered by 2 AA batteries, please install the batteries before use and check if the battery is installed correctly. Or check if the AA battery's power is exhausted.
The machine will not turn on.	Check if the machine is out of power. Please use it after charging, and be sure to charge the karaoke speaker after each use.
The karaoke speaker volume is too low.	You can increase the volume of your music with the karaoke speaker's volume button. In addition, the volume of the device connected to the karaoke speaker will also affect the volume of the music. You can increase the volume of the playback device to achieve the effect of improving the sound. If the situation can not be resolved after trying, please contact us in time.

- * If any of these issues persist or if any part of the machine becomes damaged, discontinue use and consult a licensed electrician for repair.
- * Do not attempt to modify or repair the machine yourself. If you have any problem with the product, please don't hesitate to email us at:

us-karaoke-215@eitack.com

We will reply to you within 24 hours and give you the best solution.

FCC WARNING STATEMENT

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

BIGASUO

KARAOKE MACHINE USER MANUAL

Model: KJM-215