


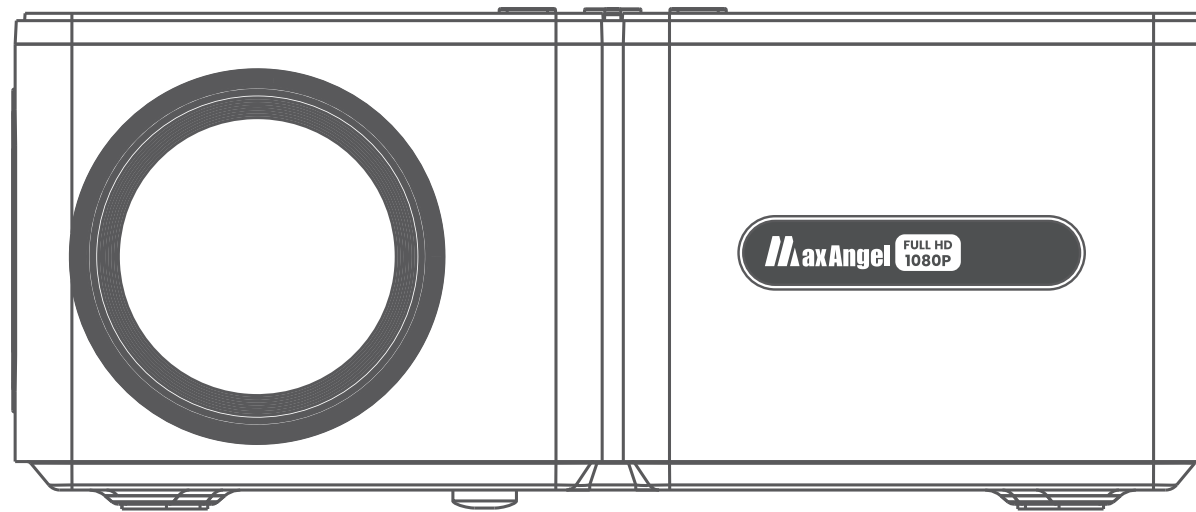

HOME THEATER PROJECTOR



M-508A USER MANUAL

REV1.0

Content

FCC WARNING STATEMENT	02
PACKING LIST	03
NOTICE	03
FUNCTION OVERVIEW	04
REMOTE CONTROL	05
QUICK START	06
PROJECTION DISTANCE & SIZE	07
PROJECTION MODE	07
INPUT SOURCE	08
OUTPUT SOURCE	09
WIFI CONNECTION & SCREEN MIRRORING	10
DIGITAL ZOOM	14
SPECIFICATION	15
TROUBLE SHOOTING	16
WARRANTY	18

FCC WARNING STATEMENT

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- (3) The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Warning:

The device has been evaluated to meet general RF exposure requirements.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

PACKING LIST

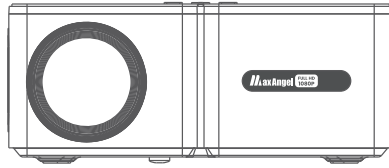


M-508A Projector




LENS Cover




Remote control

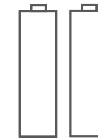


AAA Battery*2

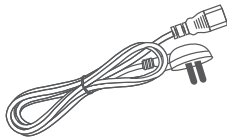

Power Cable

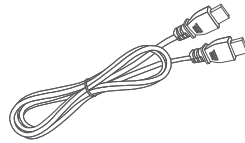

HDMI Cable

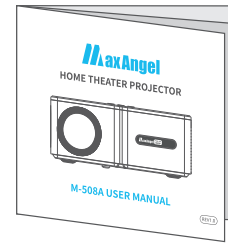


User Manual




Carry Bag

NOTICE


Recommended

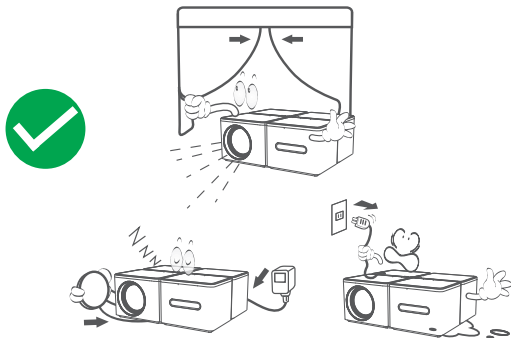

NOT Recommended

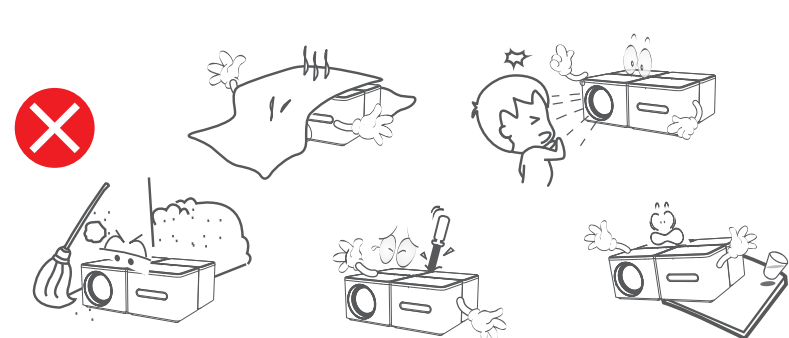


FUNCTION OVERVIEW

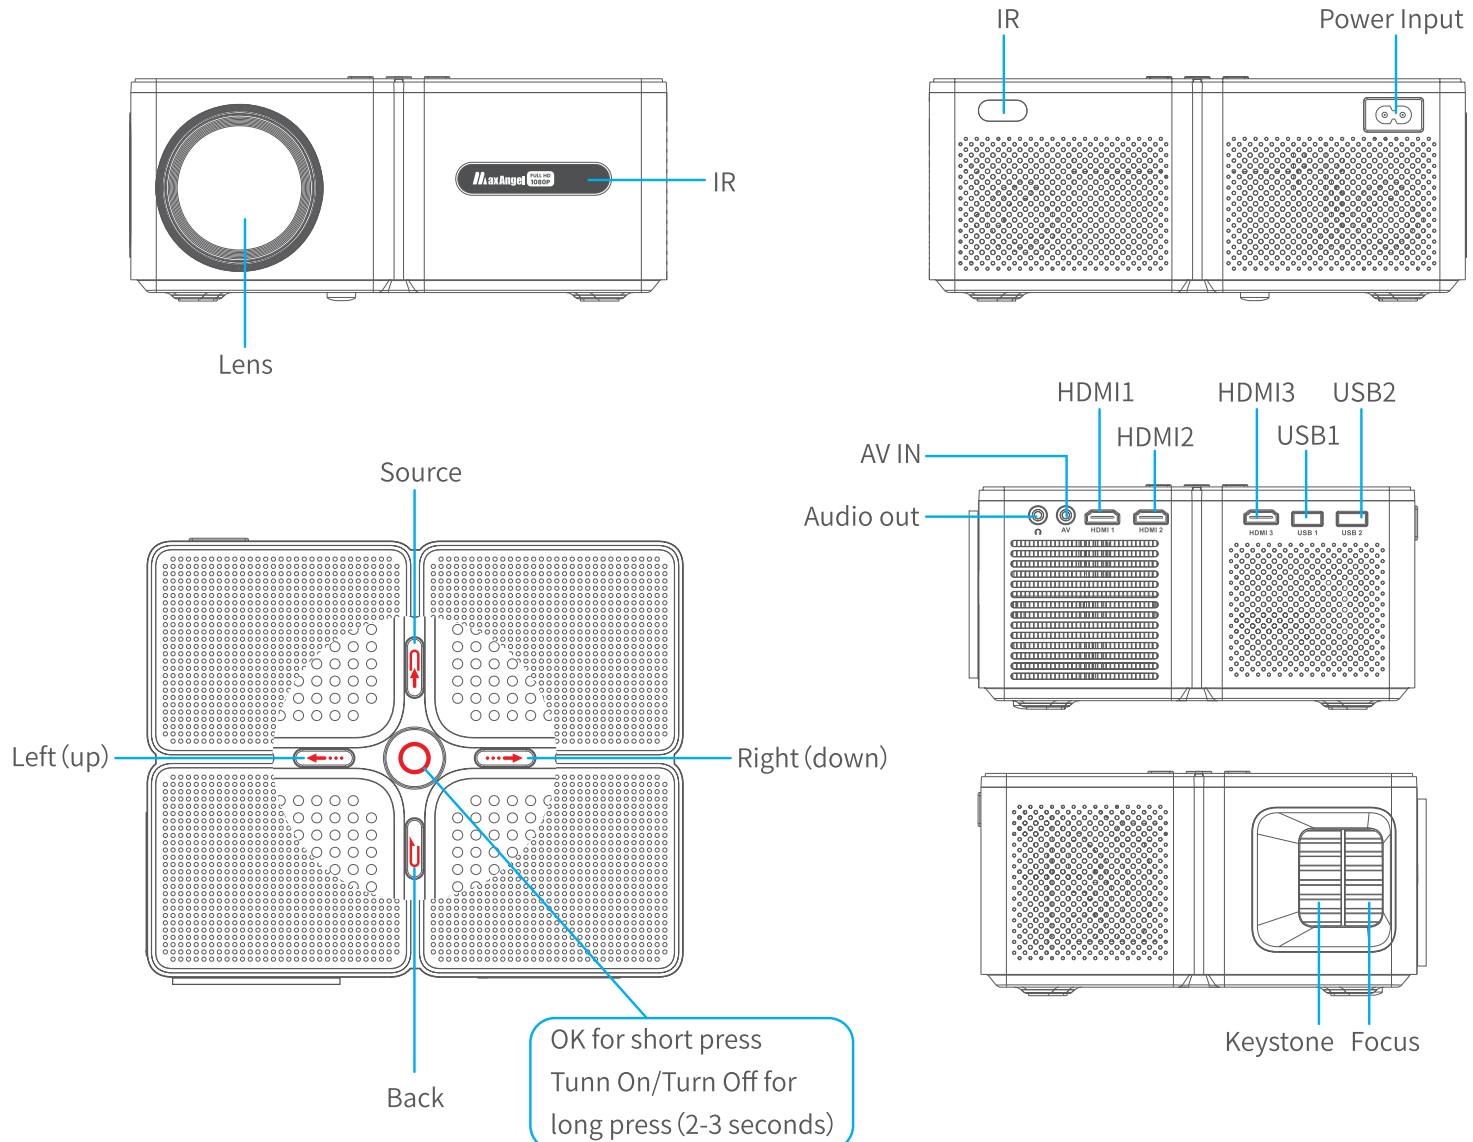

Tips:

Back to Home Page, Path
 Enter "Source"---Select "Home"---Confirm and click "OK"

REMOTE CONTROL

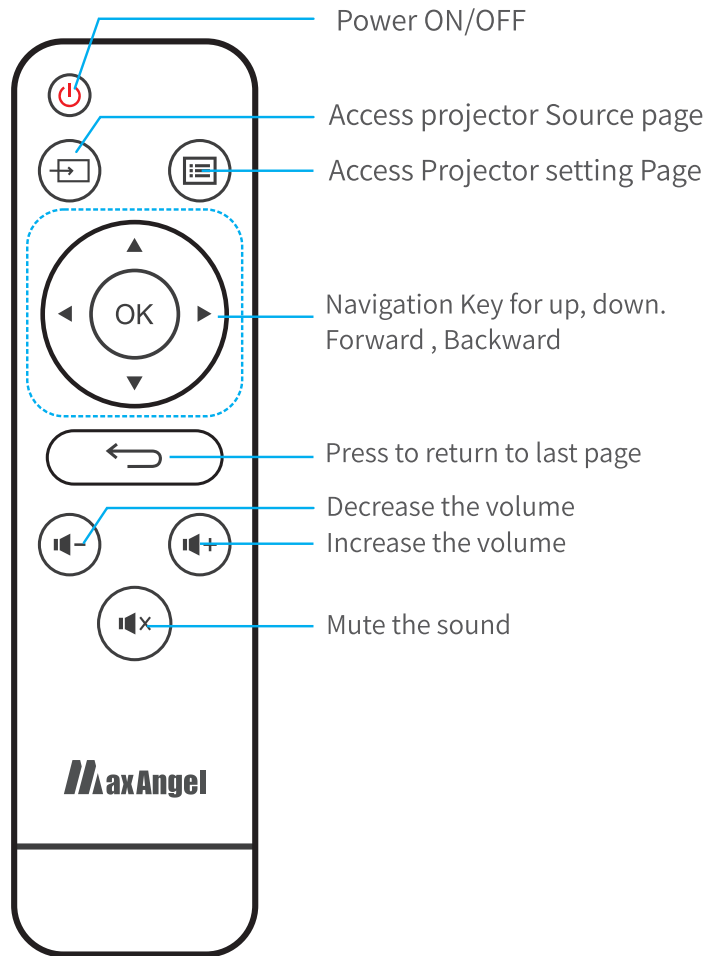


BATTERIES STATEMENT AND NOTICES


Remove the battery compartment cover on the back of your remote by carefully sliding to open. The battery cover can then be lifted away. Fit the correct batteries, referring to the polarity markings. Finally, replace the cover.

NOTE:


- When you receive the product and find that the batteries of the remote control is swollen or softened, please do not use it before you change it.
- Batteries shall not be exposed to excessive heat such as sunshine, fire.
- Make sure that the batteries are installed polarity correctly.
- Only same or equivalent type batteries as recommend are to be used.
- Do not dispose of batteries in fire, battery may explode or leak. Do not try to recharge a battery.
- Do not mix old and new batteries.
- Do not mix alkaline, standard(carbon-zinc), or rechargeable (ni-cad,ni-mh,etc) batteries.

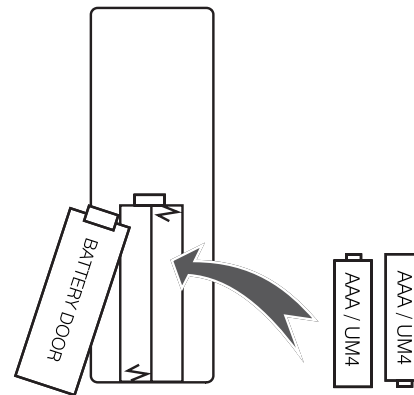


QUICK START

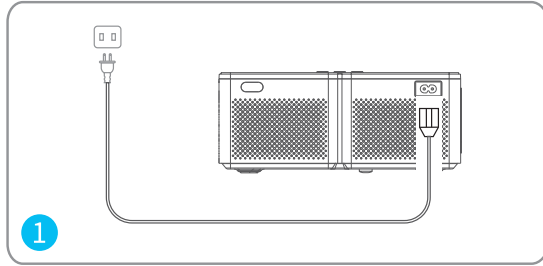

Plug the power cord into an outlet.

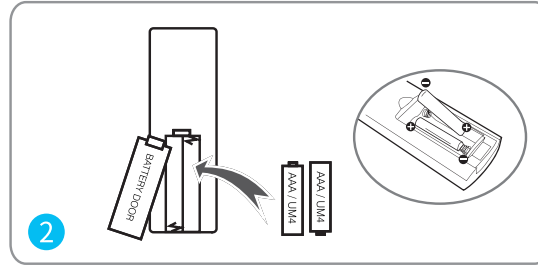


Install batteries in the remote control

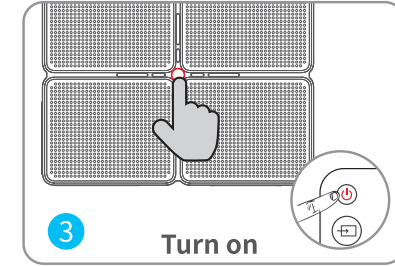


Turn on


- ① Power Button on remote control
- ② Press the "OK" Button for 2-3 seconds

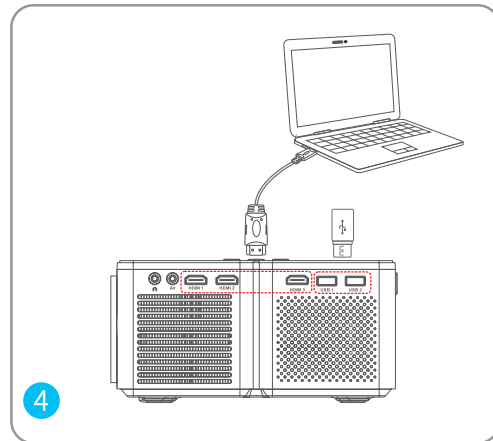


Connect your device to the projector correctly.

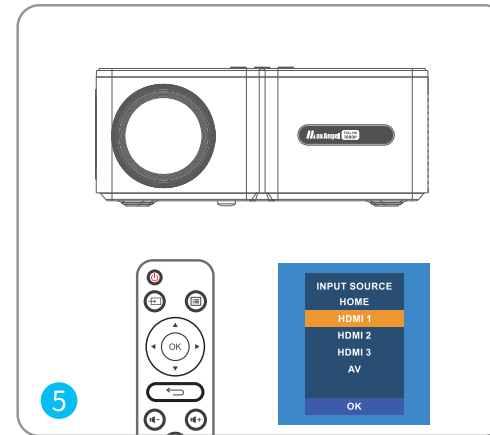


Use the remote control to select the correct input source.

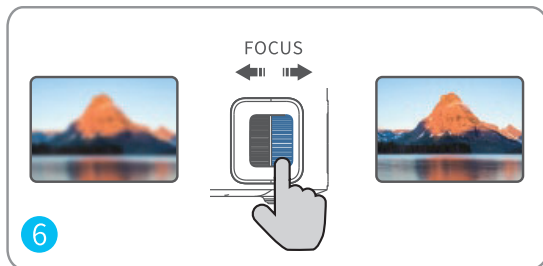

Adjust the focus ring to get the best image performance.

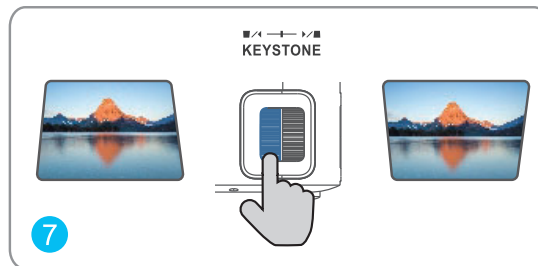

Adjust the keystone to get the suitable size

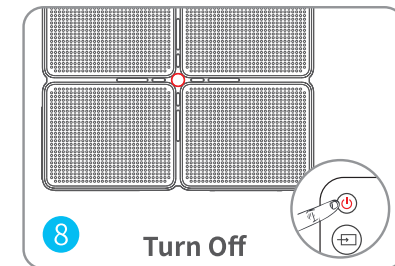


Turn Off

- ① Power Button on remote control
- ② Press the "OK" Button for 2-3 seconds

PROJECTION DISTANCE & SIZE


The recommended projection screen is around 80 inches with a distance of around 9.7 ft. Ambient darkness will improve the clarity of the projected images.

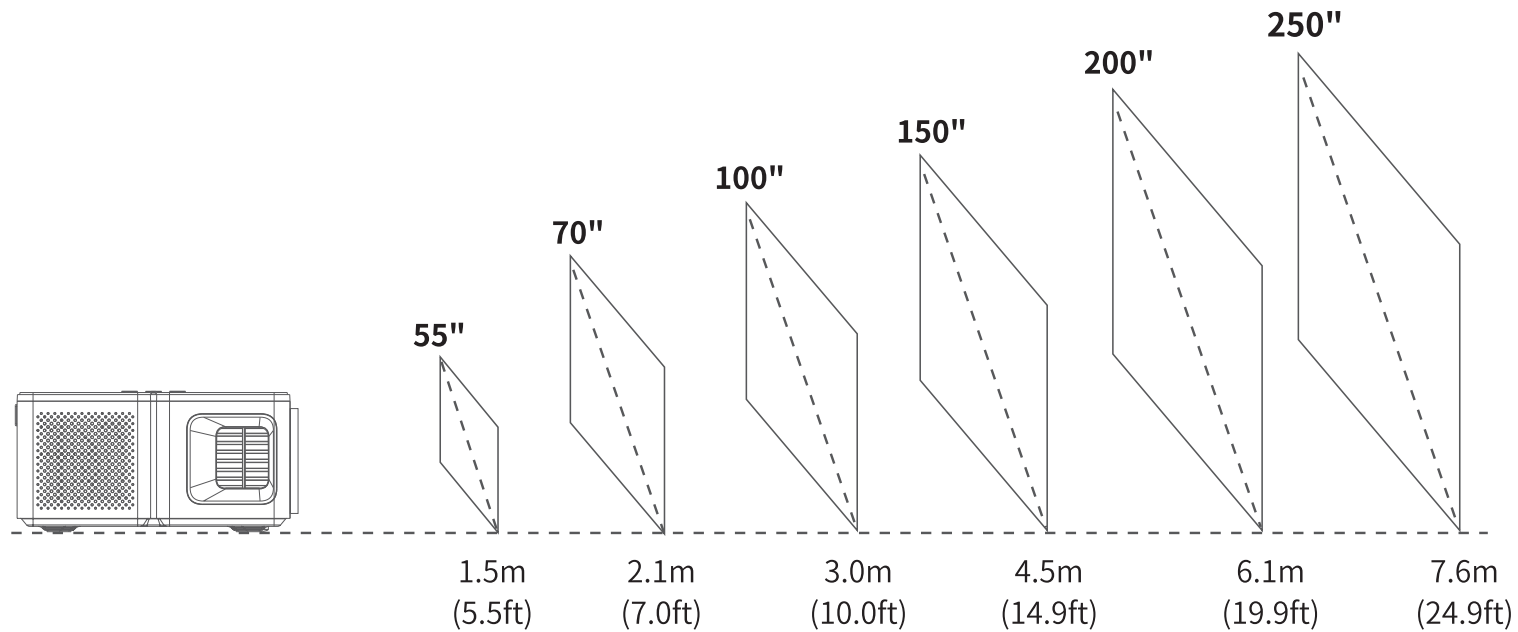


PROJECTION MODE

If you want to hang the projector to the ceiling, a projector mount will be needed.


If you want to project in different way, please select corresponding mode in the setting page.

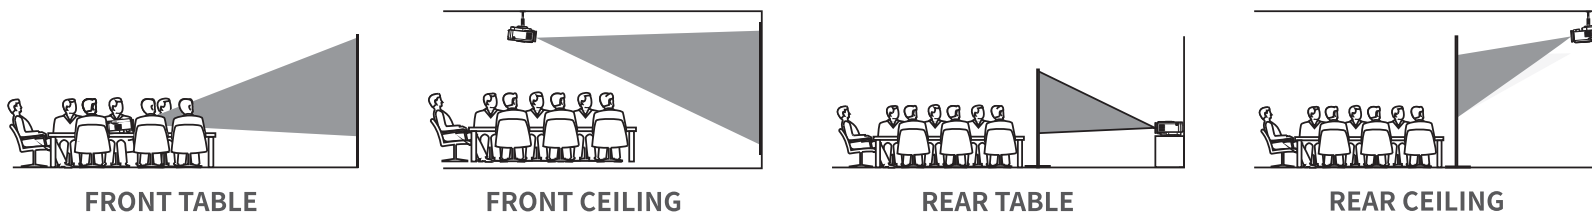


INPUT SOURCE

Press  on the remote to enter the interface of the **Input Source**.


A. HDMI Connection

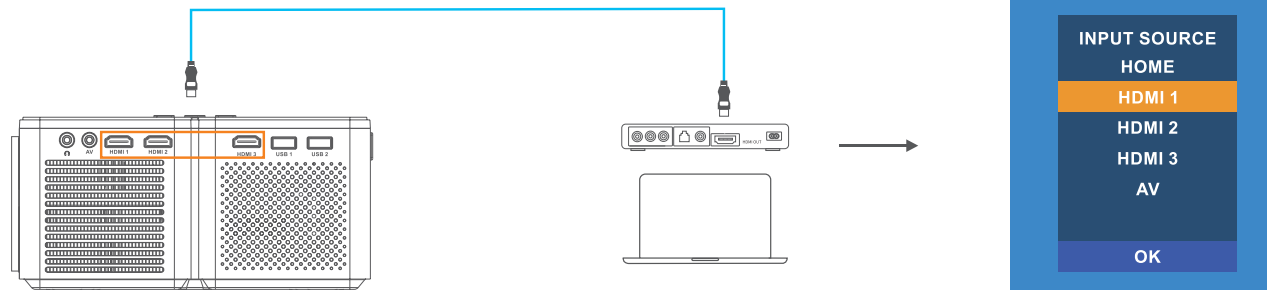

B. AV Connection

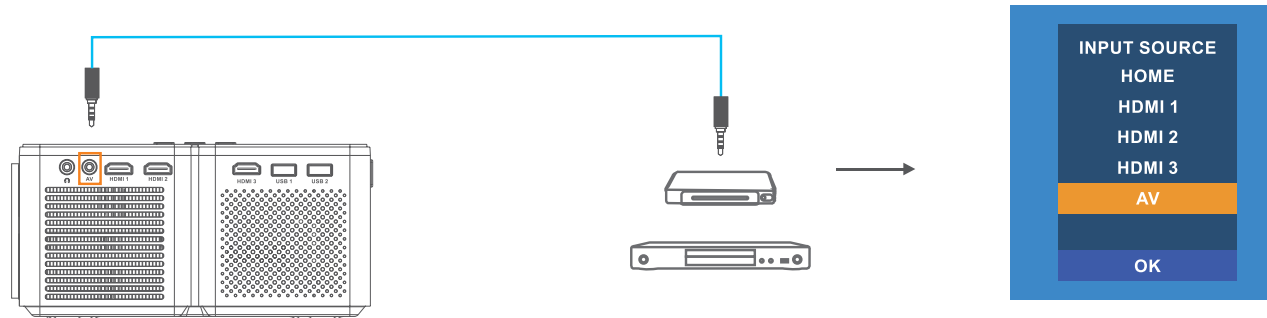


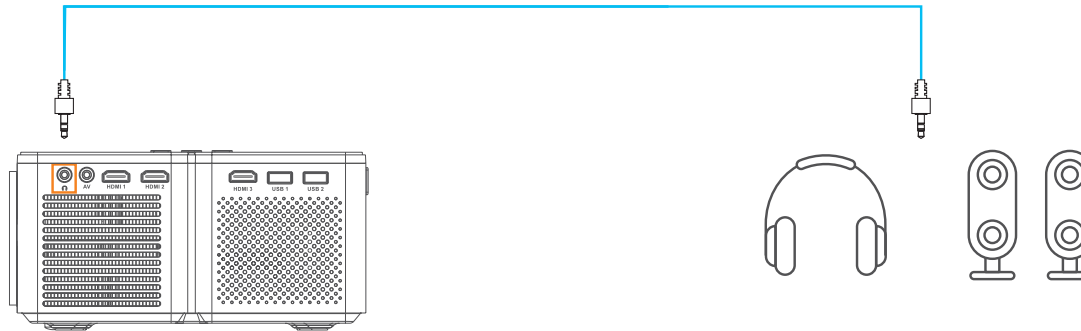
C. USB Connection

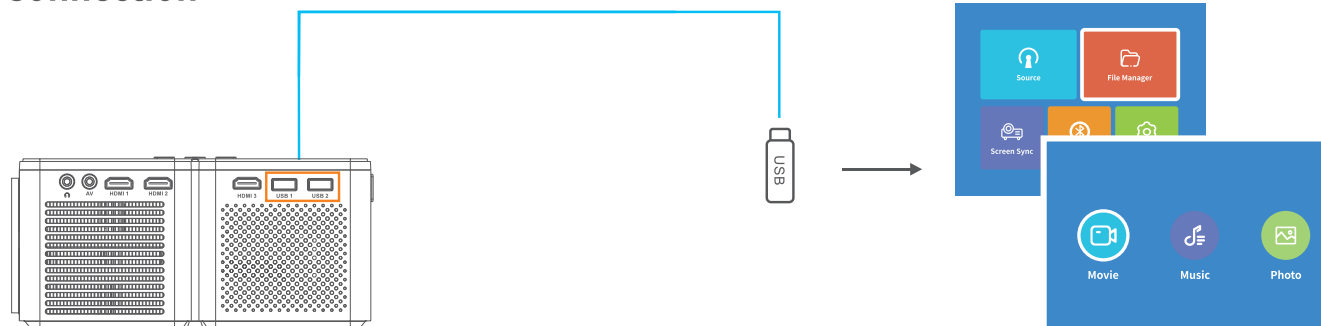

OUTPUT SOURCE

A. Audio Devices Connection

 
Press  on the remote to enter the interface of the input.



B. Bluetooth Setting

Bluetooth Connecting

1. Go to **Home Page** > **Bluetooth Settings**
2. Turn the Bluetooth function **ON** and search for nearby Bluetooth devices.
3. Choose correct Bluetooth device to connect.

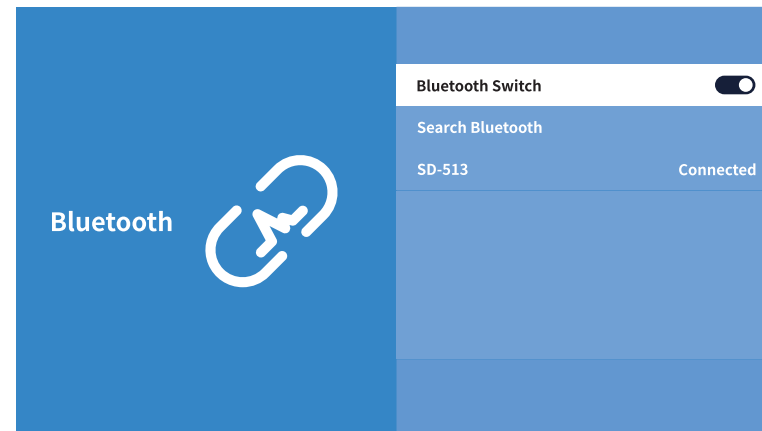



NOTE:

1. Bluetooth function is **ONLY** for audio transfer with audio devices, like Bluetooth speaker/headset/soundbar, NOT support video/audio sync with smartphone/Pad.
2. Due to compatibility issues with the Bluetooth protocol, some brands of Bluetooth speakers may not support connection to **MAXANGEL** projectors.
3. Control the Bluetooth switch by the **left/ right** buttons on controller

WIFI CONNECTION & SCREEN MIRRORING

WIFI CONNECTION

  1. Go to **Homepage** > **Setting** > **Network** > **WiFi Settings**
2. Scan and Choose your WiFi, then enter password to connect.

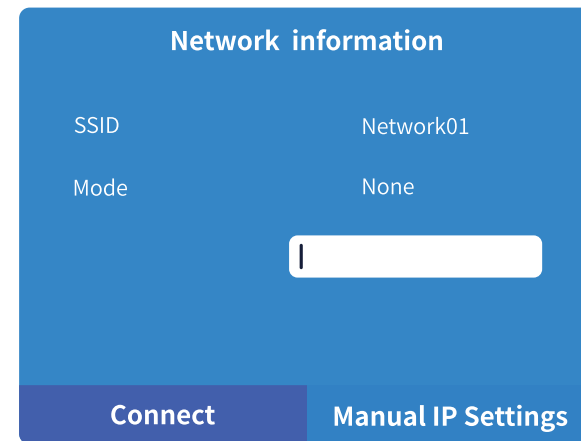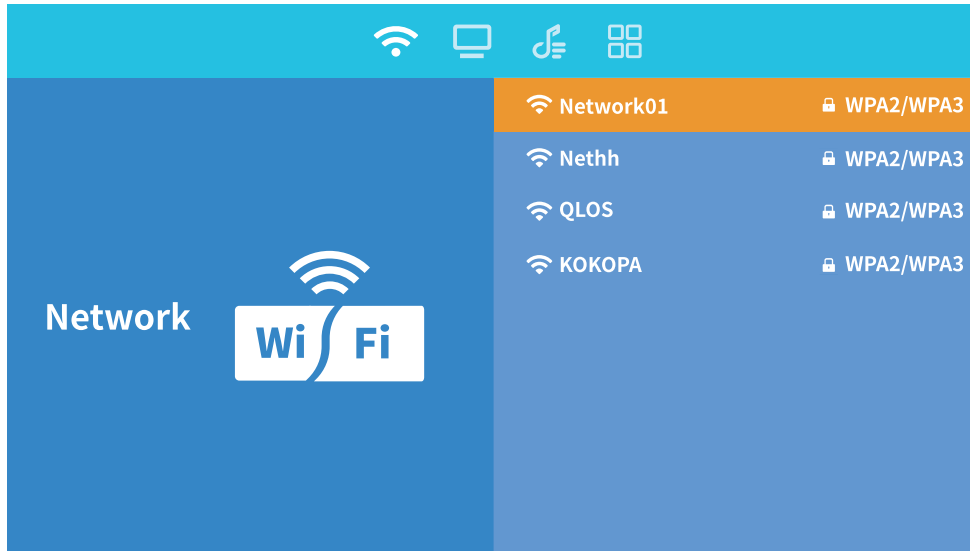

SCREEN MIRRORING

MIRACAST (For Android System)

1. Go to **Home Page** > **Multi Screen** > **MIRACAST**
2. On your Android device launch the Multiscreen/Wireless Display/Screen Mirroring/Smart View Function.
3. Looking for device that can be mirrored.
4. Select your Miracast receiver from the list to connect.



NOTE:


Make sure that your IOS device is connected to the same network as your projector!

iOS CAST (For iOS System)

1. Go to **Home Page** > **Multi Screen** > **iOS CAST**
2. On your iOS device open control center and tap Screen Mirroring.
3. Looking for device that can be mirrored.
4. Select your iOS Cast receiver from the list to connect.



IOS CAST

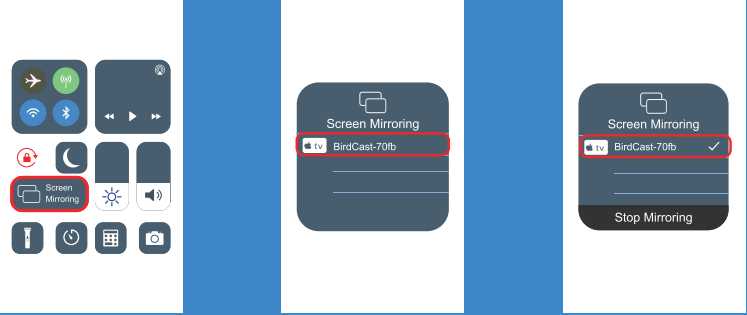Make sure that your IOS device is connected to the same network as your projector




The first screenshot shows the iOS Control Center with the 'Screen Mirroring' option highlighted. The second screenshot shows the 'Screen Mirroring' menu with 'BirdCast-70fb' selected. The third screenshot shows the 'Screen Mirroring' menu with 'BirdCast-70fb' selected and a checkmark next to it.

1. On your IOS device, open Control Center and tap Screen Mirroring.
2. Looking for devices that can be mirrored on.
3. Select BirdCast-70fb from the list.

 Network error  BirdCast-70fb

DLNA (For Android and iOS Device)

 1. Make sure that your device is connected to the same network as your projector.
2. Open your video player software
3. Click the **TV** icon and select the projector name BirdCast-XXXX to connect

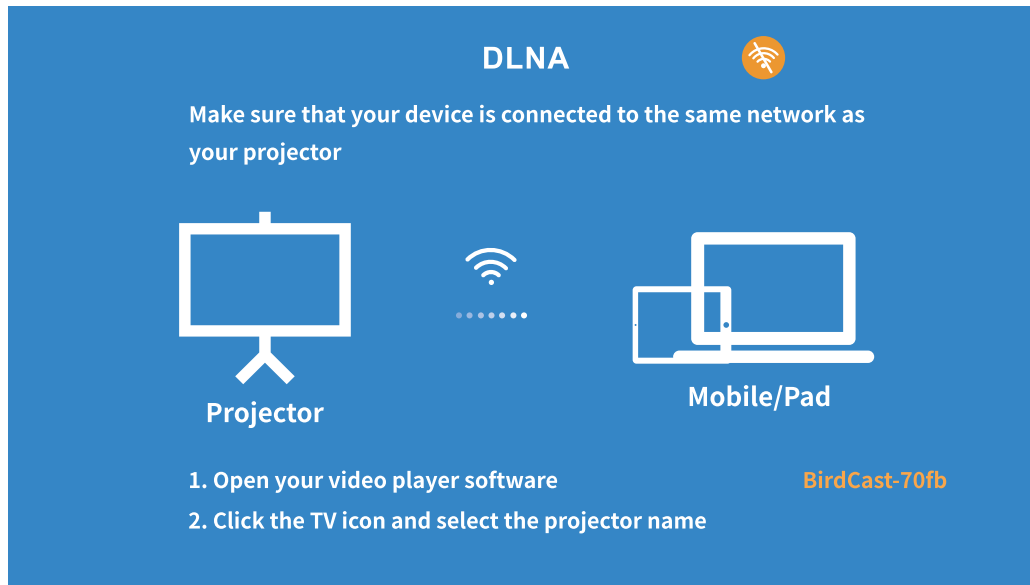


NOTE:

1. The DLNA connection can be operated in any page of the projector.
2. Through the DLNA connection, the mobile phone can continue to be used normally, and the projected video/image will continue to be played, but the mobile phone interface will not be displayed synchronously.

DIGITAL ZOOM

 1. Go to **Homepage** > **Setting** > **Option** , then choose the **Digital Zoom** function, Adjust the screen size from 100% to 75% through the parameters.

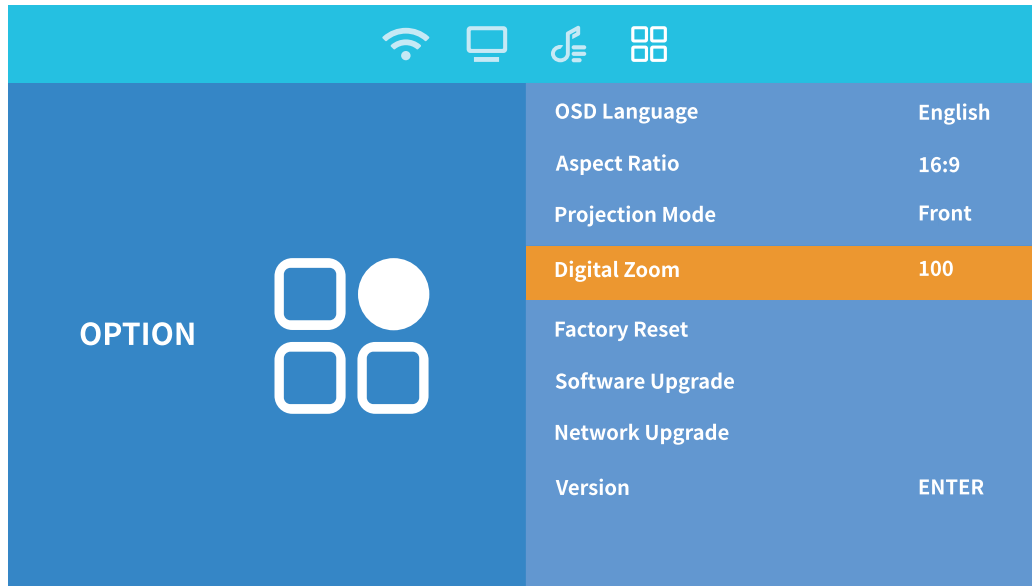

NOTE:

Digital Zoom could be set on this interface or through **MENU button** on controller.

SPECIFICATION

Display Technology	LCD	Light Source	LED
Resolution	1920*1080	Input Signal	HDMI / USB / AV
Aspect Ratio	Auto / 16:9 / 4:3	Focus	Manual
Keystone	Manual	Speaker	5W
Bluetooth	Version 5.0	Power Input	AC 100-240V 50/60Hz
Power Output	150W	Photo Format Supported	jpg. Bmp. Jpeg. png. ipeg
Audio Format Supported	wav .wma .asf .aac .ac3 .mp1 .mp2 .mpa .mp3 .mp4 .m4a .ra .ram .flac	Video Format Supported	avi .mpg .mpeg .vob .dat .m1v .m2v .mp4 .mpeg4 .m4v .wmv .rm rmvb .mov .qt .3gp .3g2 .asf .mkv divx .ts .tp .trp .msts .MTS
Operating Temperature	32°F-104°F	Storage Temperature	-50°F-131°F
Temperature Protection	Over temp auto-shutdown	Ports	HDMI / AV / USB / DC IN / AUDIO 3.5MM
Unit Dimension	9.84*7.99*3.94inch (25.1*20.3*10.2cm)	Unit Net Weight	4.3lb (1.96kg)

TROUBLE SHOOTING

Q

Remote control not work?

- Make sure the batteries are effective and installed in the correct way.
- Please contact our after-sales team to get a new remote control.

A

Q

Upside down image?

- Press “Flip” button on the remote control.
- Enter “Projection Settings” to change the Projection Mode.

A

Q

Blurry Image?

- Adjust focus ring/keystone to get the best image.
- The quality of the projection screen will also affect the image quality. Recommended to use it on a white wall or a better quality screen. Not suggest to use it on a thin white gauze screen, which will reduce the image quality.

A

Q

No Sound?

- Turn off the Dolby Audio in external device;
- Mute mode is running, press the Mute button on remote control can restore the sound
- External Bluetooth Headphone/Earbuds was connected with the projector

A

Q

Missing accessories?

--If the device is damaged or any accessories missing, please contact our after-sales department for help.

A

Q

The content form HULU, Netflix, and similar services can not be mirrored or cast?

--This is not the Projector or phone issue. Due to those video are restricted from mirroring screen directly by phone with the copyrighted issue.

--Connect a TV stick, Roku or chromecast to the projector can playback those video perfectly anytime.

A

Q

Automatic shut-down?

– Self-Protection mechanism is activated. Please use it under a cool or ventilated environment will be best.

-- Please unplug the power adapter from outlet each time to prolong the service life after turned off the device.

A

WARRANTY

MAXANGEL provides the following service for each customer:

- 30-days full refund or free replacement
- 1-year Technical Support
- Lifetime professional consult

If you need any help or want to extend the warranty time for your order, please email us:

✉ us-projector-508@eitack.com



MAXANGEL Service



HOME THEATER PROJECTOR
M-508A USER MANUAL