

# XOPPOX

## Video Projector X-901 USER MANUAL



User Manual ..... English 1--16

取扱説明書 .....日本語 17-40

## Contents

Safety Instructions & FCC Warning .....	02
Package Listing .....	03
Remove & Close The Lens Cover .....	03
Boot Operation Guide .....	04
Distance Between The Projector And Screen .....	04
Viewing Options .....	05
Placing Your Projector On Ceiling .....	05
Adjust the Vertical Location .....	06
Adjust the Focus and Keystone .....	06
Functional Overview .....	07
Controls of Remote .....	08
Install Remove Battery Of Remote .....	09
Connection Instructions .....	09
--Select an input source .....	09
--Multimedia connection .....	10
--HDMI device connection .....	11
--AV video device connection .....	12
--Audio devices connection .....	12
Using Bluetooth playback .....	13
FAQ .....	14
Specifications .....	16

## Safety Instructions & FCC Warning

### Important Safety Instructions

- Please use the included AC power cable to power the machine. Only use the included accessories specified by the manufacturer.
- It is normal for the machine to generate heat during operation. To prevent overheating, do not block the ventilation openings.
- CAUTION: Do not look straight into the projector lens while on, as it may cause serious eye damage. Do not touch the lens.
- Clean only with a dry cloth.
- To reduce the risk of fire or electric shock, do not expose the device to rain or moisture. Objects filled with liquids, such as vases, should not be placed on these devices, as it may lead to potential accidents that damage the device.
- Protect this device from overexposure to direct sunlight, heat, big temperature fluctuations, and moisture. Avoid extreme temperatures. The suitable operations and storage temperature for this device and its accessories are 0°C to 35°C / 0°F to 95°F.
- Avoid any type of impact, as it may damage the internal components.
- Do not make any repairs to this device by yourself. Our company will not cover the warranty if self-repair efforts were undertaken.
- Please contact the seller for technical support when the product has any type of problem, Contact details are revealed at the end of this manual.



### FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

### Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.


### Package Listing

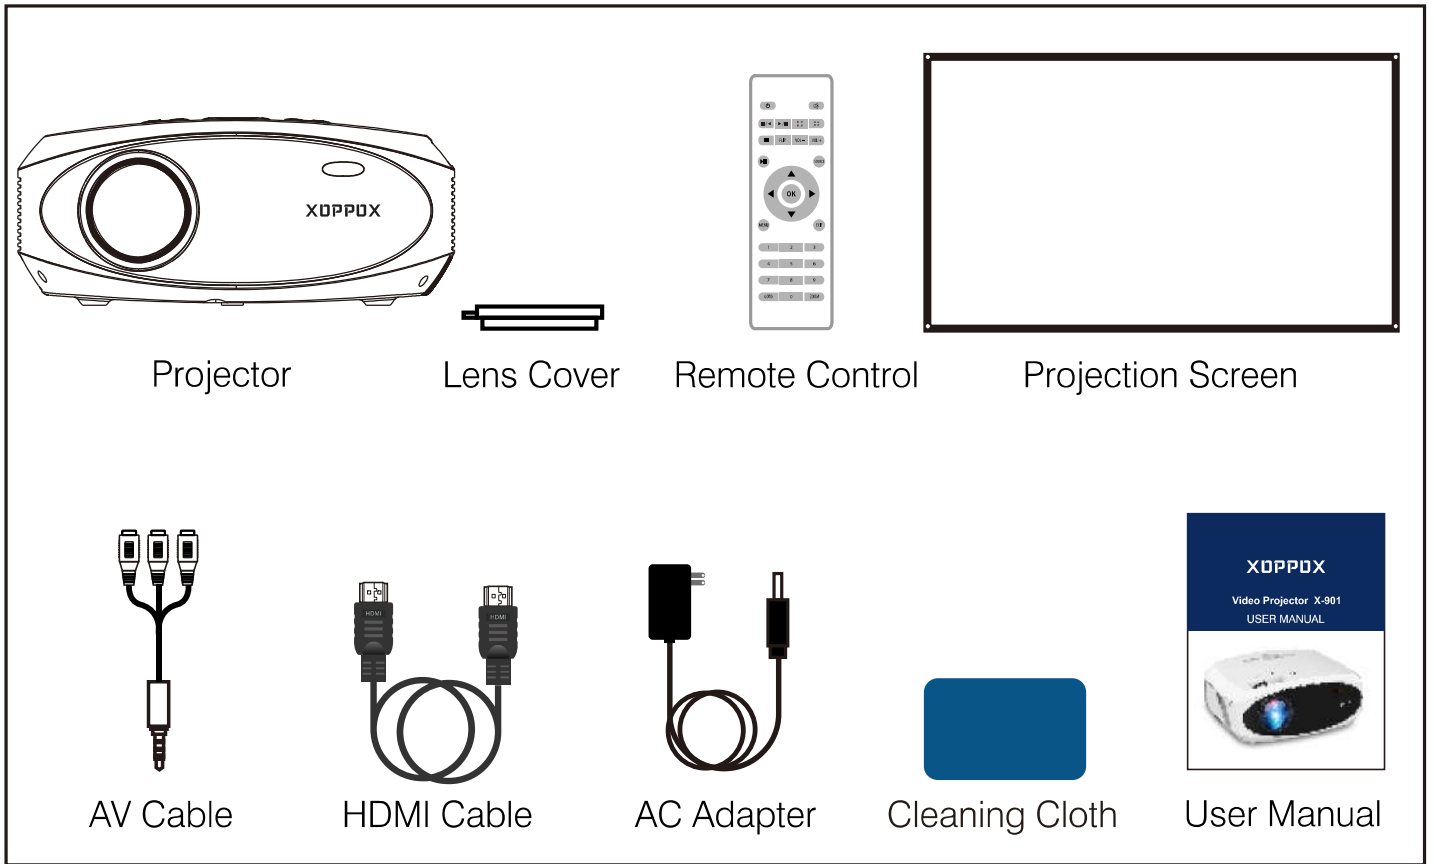




### Remove & Close The Lens Cover

Remove the lens cover before using

Close the lens cover when unit not using

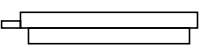
Lens Cover  Remove

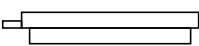Lens Cover  Close

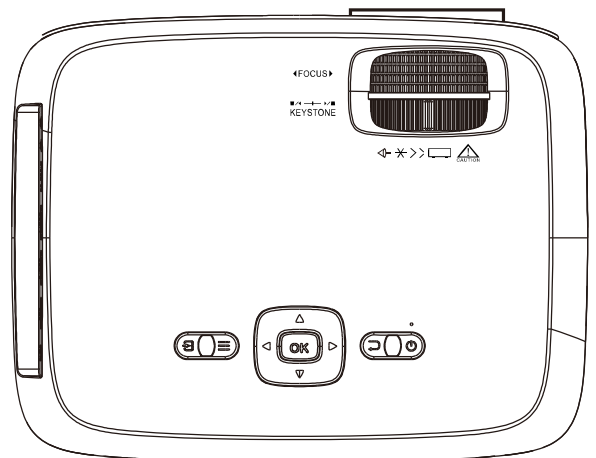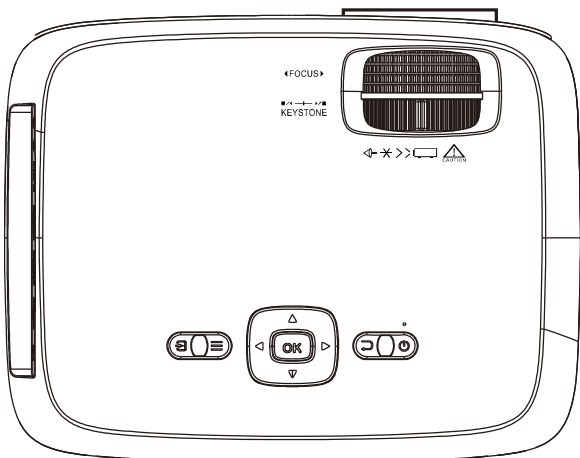  


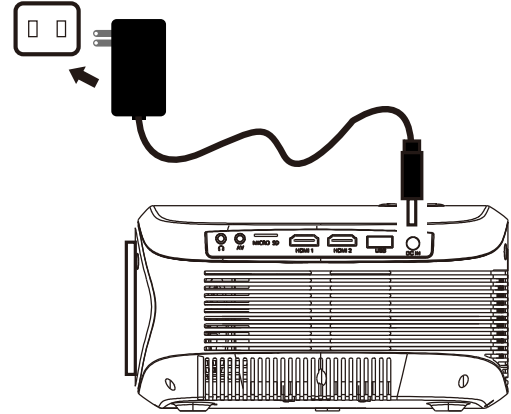 
## Boot Operation Guide

### TURN ON

- 1) Press the power button .
- 2) The projector turned on after 5 seconds.

### TURN OFF

- 1: Turn off the power button .
- 2: Unplug the power switch.

 


### Note:

Please turn off the projector before unplugging the power source , so as not to affect the operation of the projector.

## Distance Between The Projector And Screen

Projection Distance	1m	2m	3m	4m	6m
Projection Size	30 inch	68 inch	98 inch	120 inch	200 inch
Light, brightness, etc. will affect the projection distance, this data is for reference only.					
Projection Position					
It is recommended to place the projector in front of the center of the screen.					

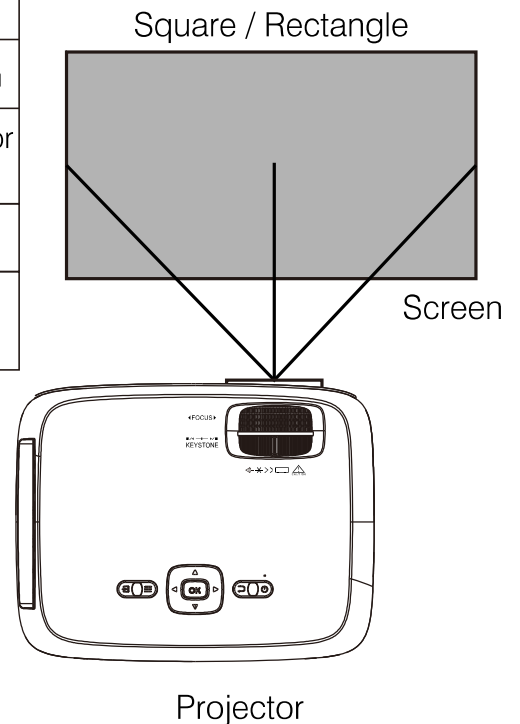


## Viewing Options


The projector can be used to project onto a wall or screen, mounted from the ceiling or on a table. When projecting from the rear position, a special screen will be needed (not included) to display the image. Be sure to aim the remote at the sensor on the front or rear of the projector.



 
Front Table

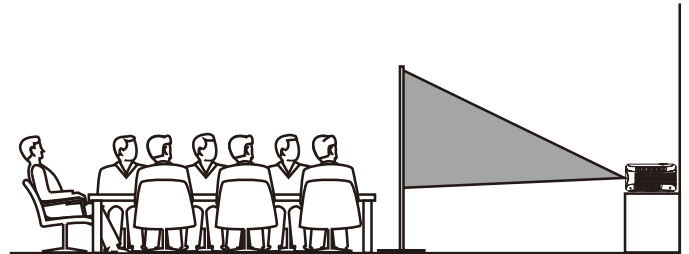

Rear Ceiling

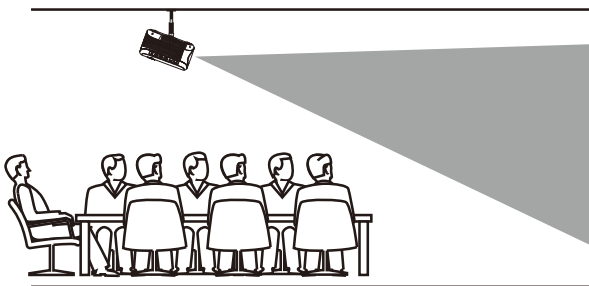 

Front Ceiling

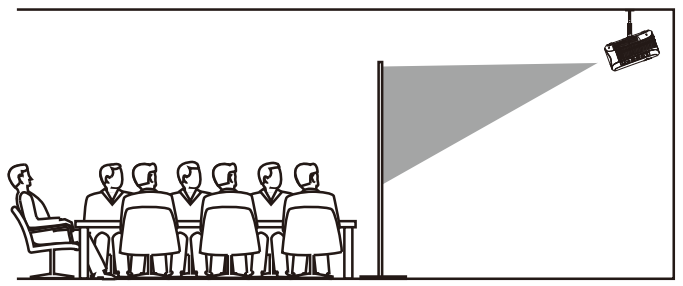 



Rear Ceiling

## Placing Your Projector On Ceiling

  When installing the projector in the ceiling, please purchase a projector mount recommended by an installation professional and follow the instructions that come with the mount.


Before installing the projector in the ceiling, please check to make sure the ceiling structure can support the weight of the projector and the mount. If in doubt, please ask the advice from an installation professional.

NOTE: Projector mount and screw(s) not included

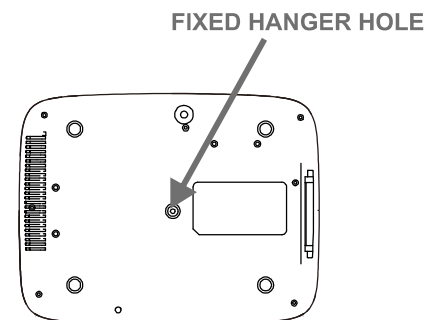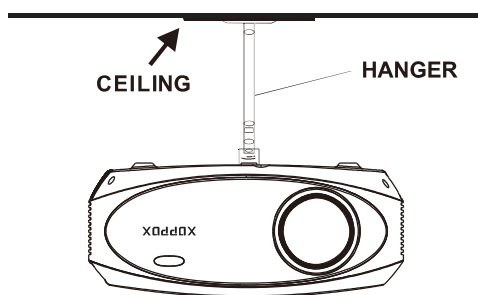


## Adjust the Vertical Location

 Follow below picture to adjust the vertical location

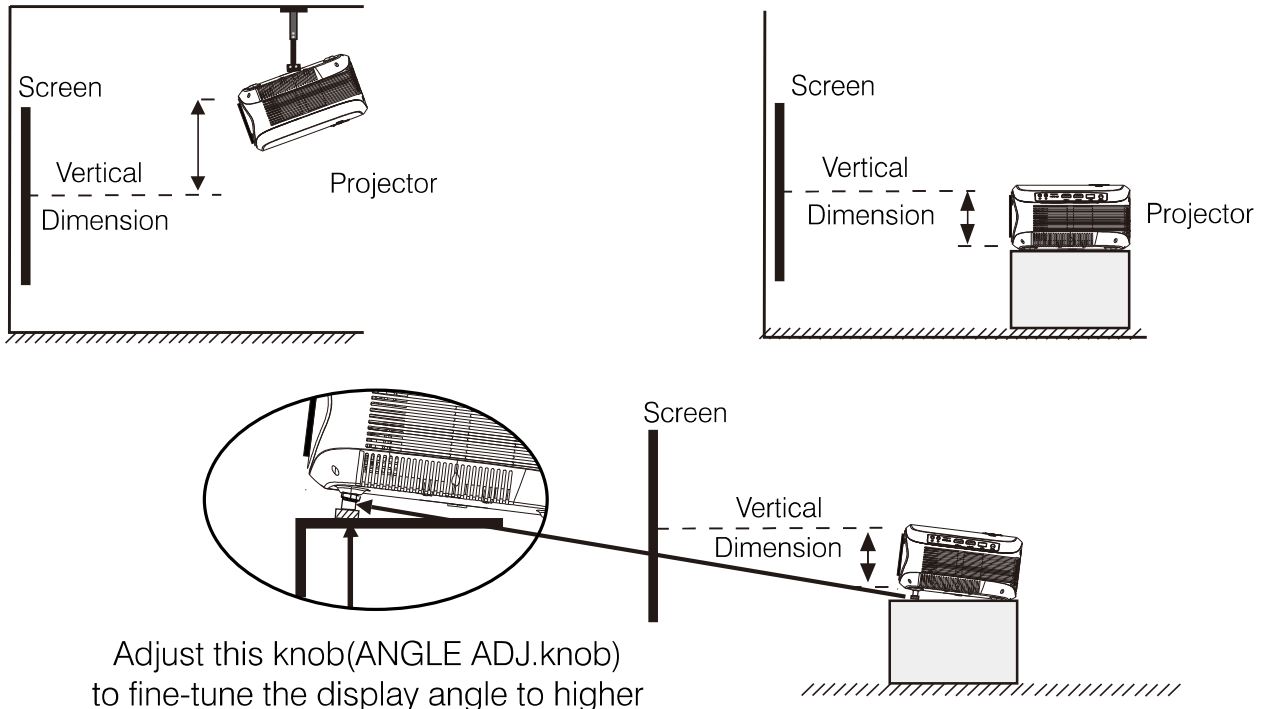

## Adjust the Focus and Keystone

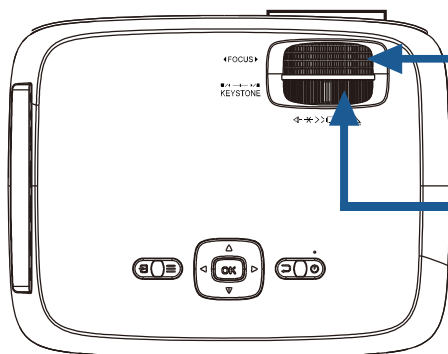 

### FOCUS

As shown in the Picture , adjust the lens focus wheel until you get a clear picture

### KEystone





As shown in Picture, Keystone correction to facilitate horizontal angles.

### Electric Keystone Correction on Remote Control

Path1: On the remote control, press or .

Path2: Click "SETUP" -select "Option"-click "Keystone Correction"-Adjust by Up and down keys on remote control.

    
## Functional Overview

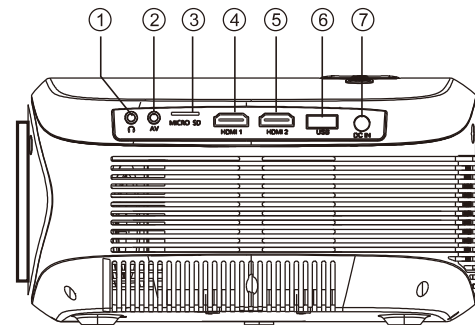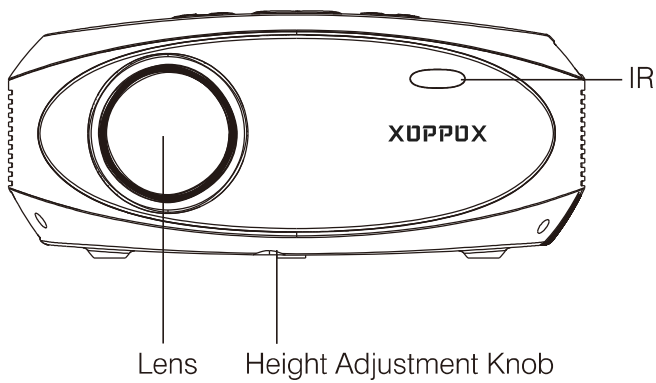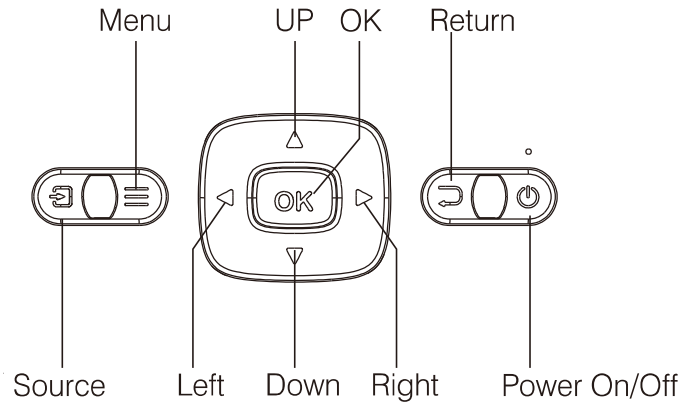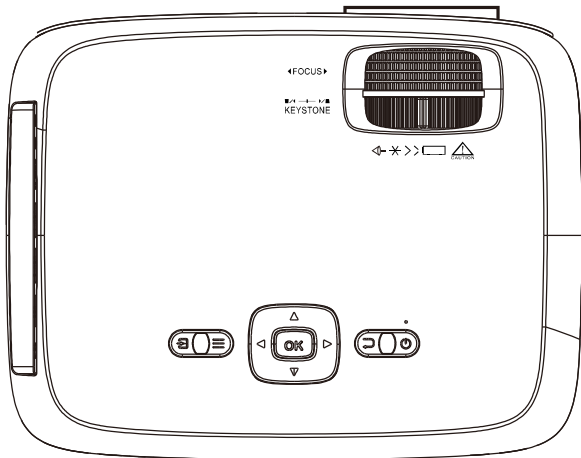

- ① Audio Out Port
- ② AV IN Port
- ③ Micro SD(TF) Port
- ④ HDMI Port 1
- ⑤ HDMI Port 2
- ⑥ USB Port
- ⑦ DC Input Port



## Controls of Remote

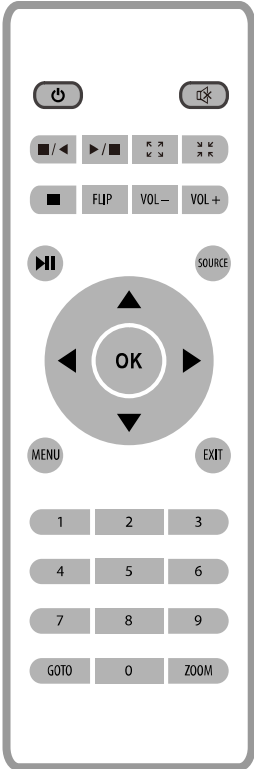 


Power	Press to power ON. Press and hold to power OFF.
	Press for keystone correction. 0° to ± 22°
	Press for digital zoom “ 0-10 ”
Play/Pause	Press to play or pause an individual chapter or track
<b>Arrows/OK</b>	Press to navigate and confirm selections in Settings and other menus
MENU	Press to access projector Settings
<b>GoTo Number Keypad</b>	Press to enter specific chapter or track numbers. Use play button to begin playing
<b>MUTE</b>	Press to mute volume
back/fwd	Press to reverse or fast forward during playing video/music
<b>VOL+/VOL-</b>	Press to adjust audio level.
<b>SOURCE</b>	Press to select media source (AV, PC, HDMI, MEDIA).
<b>EXIT</b>	Press to exit menus.
<b>ZOOM</b>	Press to adjust the aspect ratio during playing video (Auto/16:9/4:3).

## Install Remove Battery Of Remote

 Remove the battery compartment cover on the back of your remote by carefully sliding to open. The battery cover can then be lifted away. Fit the correct batteries (2XAAA batteries not included), referring to the polarity markings. Finally, replace the cover.

**NOTE:**

- Batteries shall not be exposed to excessive heat such as sunshine, fire.
- Make sure that the batteries are installed polarity correctly.
- Only same or equivalent type batteries as recommend are to be used.
- Do not dispose of batteries in fire, battery may explode or leak. Do not try to recharge a battery.
- Do not mix old and new batteries.
- Do not mix alkaline, standard(carbon-zinc), or rechargeable (ni-cad,ni-mh,etc) batteries.

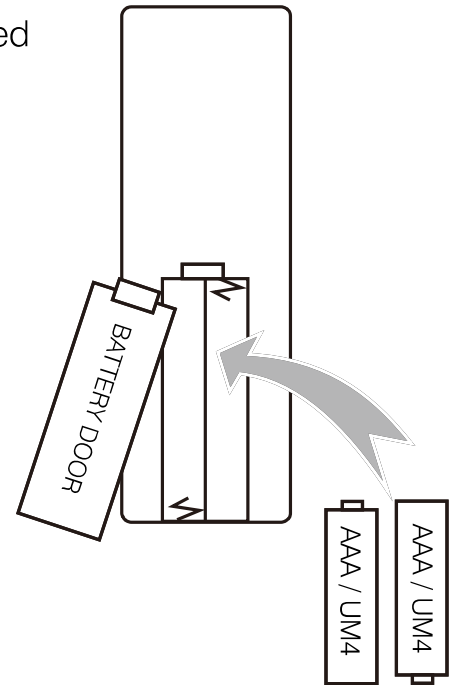


## Connection Instructions


### Select an input source

You will see the picture below when the projector is turned on. You can choose between the different input sources ( AV / HDMI1 / HDMI2 / Screen Mirroring/ Media Player) by pressing the " Source " button at the projector touch panel, or remote controller.

 You can connect different devices with the projector, according to the following connection instructions.

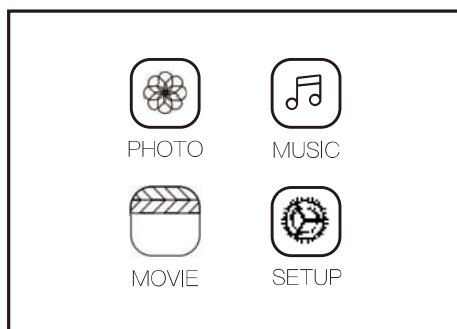




Interface

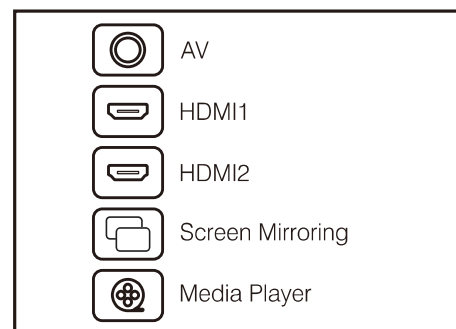 

Source

### Multimedia connection

   Insert USB / Micro SD card ( TF card ) into the corresponding slots (as shown in the picture). Choose Media source, Select " Video ", " Music ", " Picture " to enter the content you want to play.

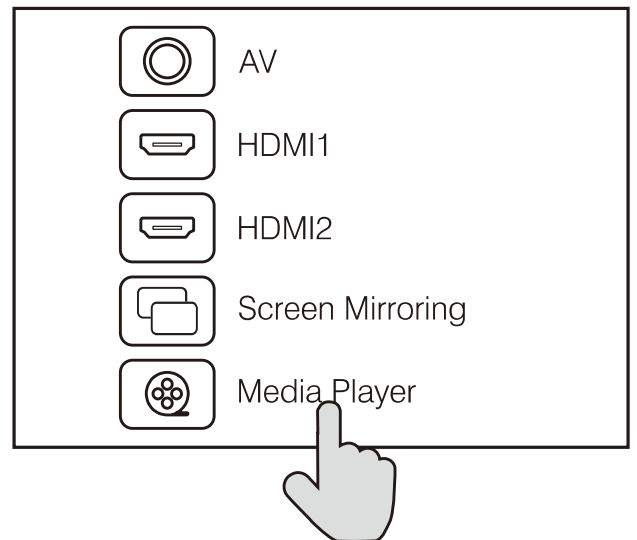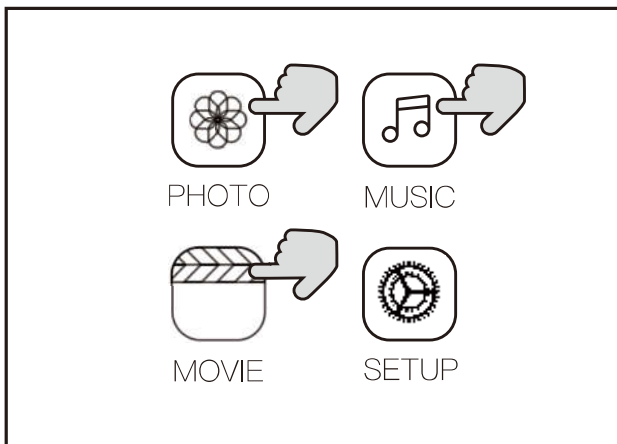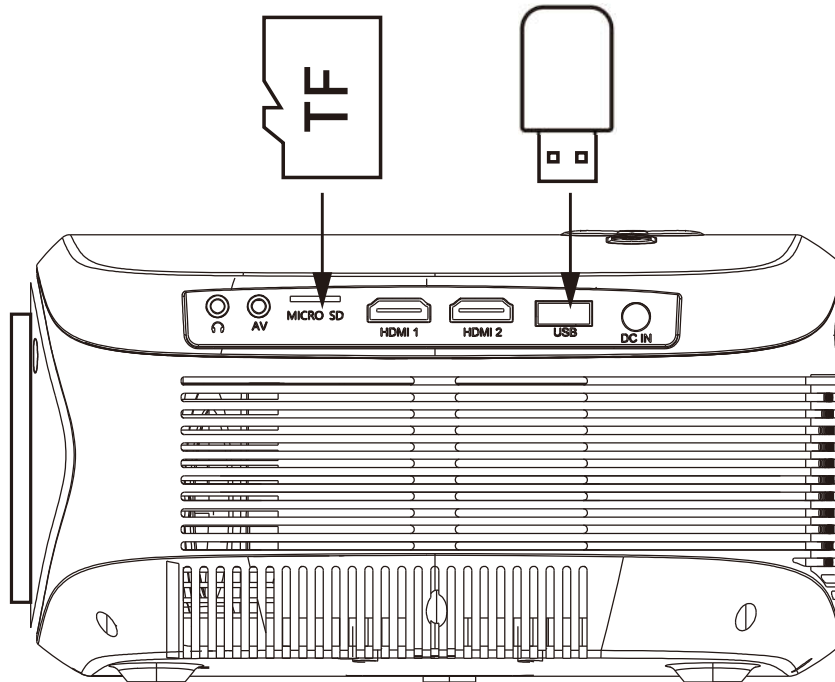





### HDMI device connection

The projector can connect to devices with HDMI input function. It is compatible with laptops, DVD players, Blu-ray players, Chromecast, TV Stick, etc. An HDMI cable is included.

The F-601 projector is equipped with 2 HDMI input ports,


①If you connect your devices to the projector via "HDM 1" port, please choose "HDMI 1" input source.

    ②If you connect via the " HDMI 2" port, please choose the " HDMI 2" input source.

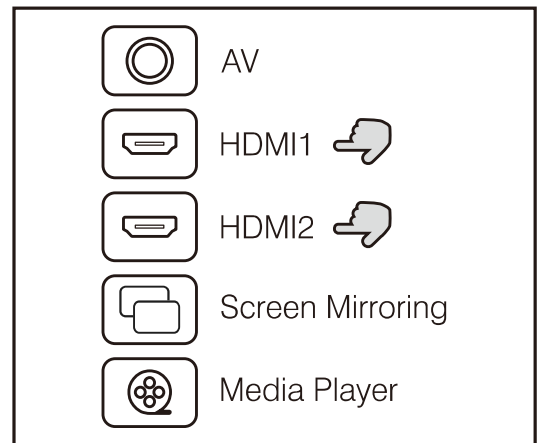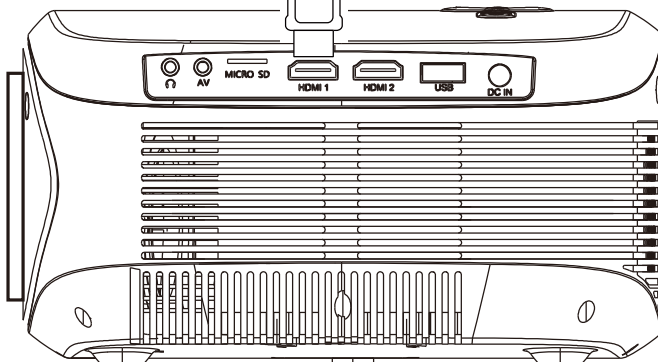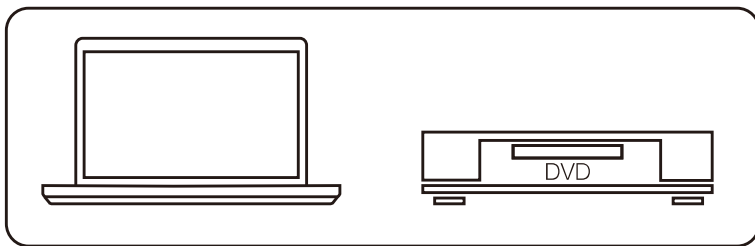


### AV video device connection

 Connect the projector AV interface with the AV cable (Not include ), as is shown in the pictures.

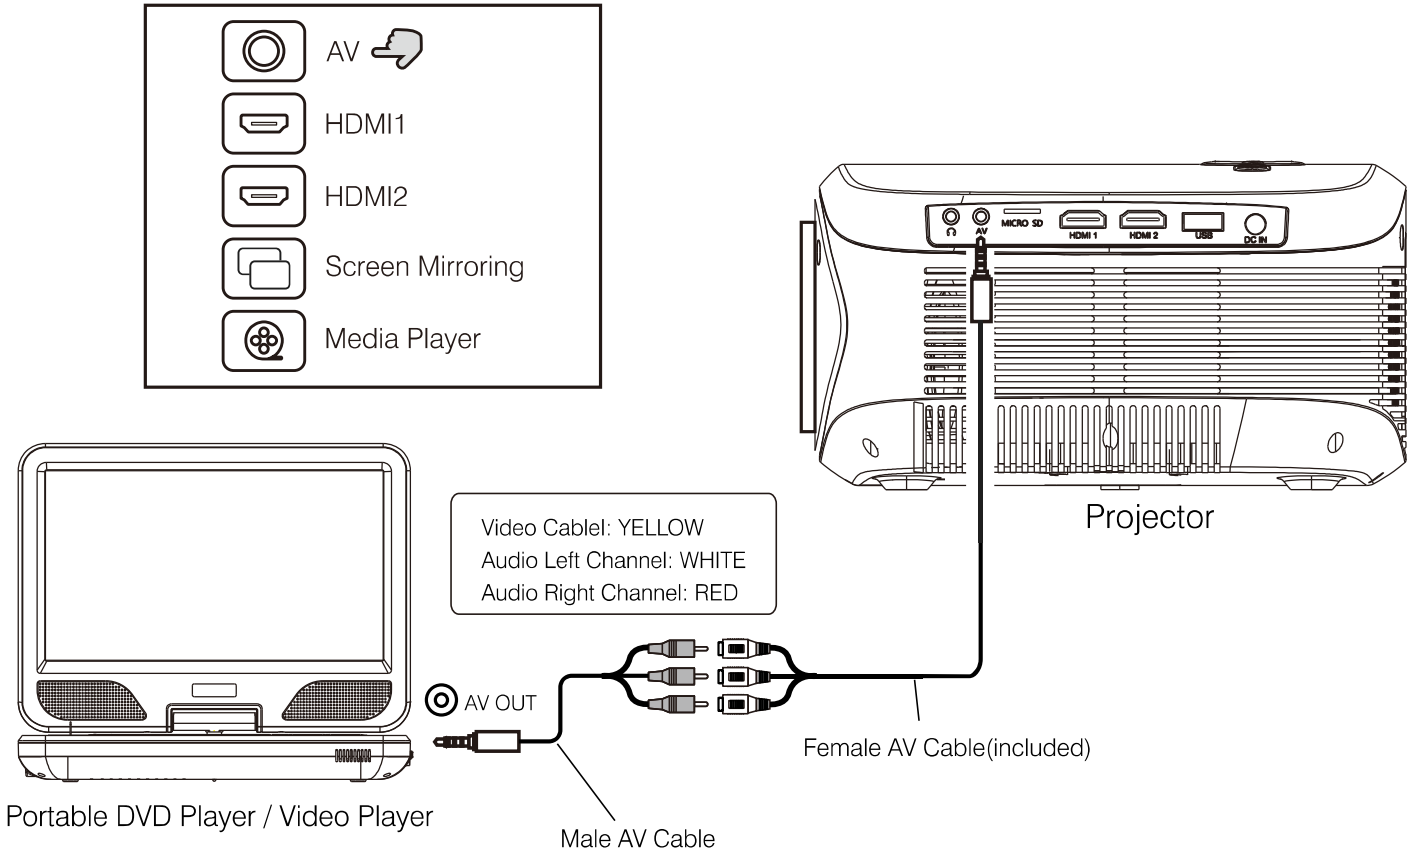


### Audio devices connection

 The projector can connect to a headphone and to a wired audio system using a 3.5mm jack ( not include )

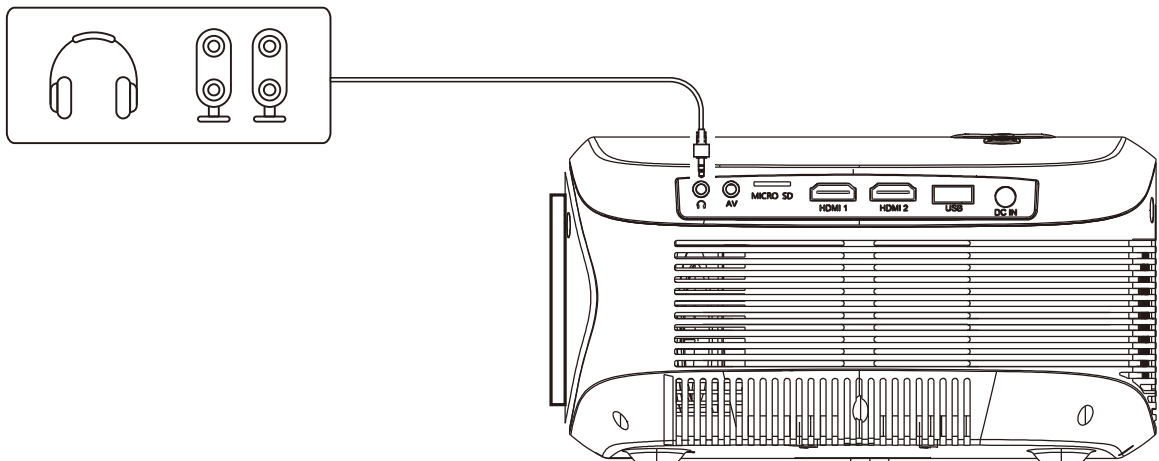

## Using Bluetooth playback

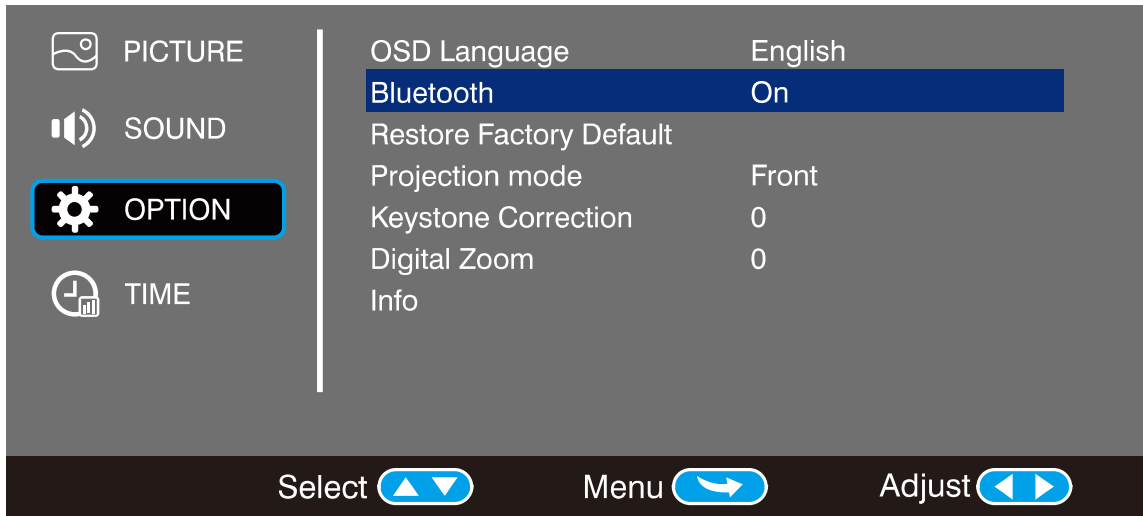 

Bluetooth On/Off	Bluetooth is OFF by default when the projector first powers ON
Pairing to Bluetooth Wireless Speaker	Turn on Bluetooth. The projector will begin searching for a nearby Bluetooth device, choose one and connect successfully.
	When successfully connected, the projector will display the Bluetooth name on the top right portion of the Main Menu screen, and you will be heard through the Bluetooth receiver
<b>Attention</b>	
<b>The Bluetooth function only supports audio devices.</b>	
Smart phone, tablet, or computers can not connect to the projector! ! !	
<b>About automatically connect.</b>	
After the initial pairing, The device will keep the pairing status all the time when Bluetooth functions for both devices are opened.	
To ensure that you can hear from the projector next time, we suggest that turn off the Bluetooth function before the turn off the projector.	
<b>When you try to connect a new blue tooth speaker</b>	
please turn off the previous speaker /headphone and re-search your new Bluetooth device for connecting.	

## FAQ

**Q: Why can my projector not be turned on?**

A: Please be sure that the AC power cable is plugged in tightly, and press the power switch on the projector's panel or use the remote controller to turn it on.

**Q: The projector is turned on, but no image is displayed**

A: ①Please make sure your device is connected to the projector correctly.

②Check the lens cover has been removed.

③Check if the input signal source is correct, and then switch into projection mode, Wait for a while and operate it again.

④Please make sure that the video source is equal or under 1080P.

⑤ If it is still not working, please contact us for further support.

**Q:The Lamp ( Bulb ) switches off after a period of time.**

A:1. Leave the projector to cool for a few moments.

2. Once cooled, check if anything is blocking the ventilation vents.

3. Turn on the projector.

If the issue persists please contact us.

**Q: When playing a video, is see the image but I hear no sound**

A: If you connect to your laptop via a HDMI adapter. The audio cable of the adapter needs to be plugged into the audio output port from your laptop to the projector using a 3.5mm audio jack.

**Q: The projection is not bright enough**

A: We recommend using the projector in a relatively dark environment to bring out the best image brightness.

This project is designed for Home Entertainment and s not recommended for Power point or other business presentations.

**Q: Spots on the screen.**

Using a vacuum cleaner to dean the lens. If cleaning does not resolve things, please contact your support provider for further assistance.

**Q: I get a blurry image?**

A: The recommended projection distance is 3-9ft. Please adjust the Keystone correction to get a rectangular image first, then adjust the Focus to get a clear image.

The optimal focus is obtained when the pixels are clearly visible. If the projection size is too large, the focus near the screen edges may be less sharp than at the screen center.

**Q: My projector noise is too loud, is it broken?**

A: The projector noise comes from the fan of its cooling system . Projector generates heat during operation as the light bubble produces strong light to make a bright image. It is normal for the projector to make a loud noise. Brighter the image .louder the sound is. You can place the projector far from where you are, or you can connect a louder speaker to the projector to cover up the noise.

**Q: Bluetooth not work.**

A:Please note the Bluetooth function is not support to connect with a smartphone or pad etc.

If the Bluetooth speaker or earphone is not able to connect, please contact our customer service, we will help to solve soon.

**Q: After scanning the QR code, it prompts to upgrade the system?**

A:We will continue to improve customer experience based on market feedback (such as mobile phone system upgrades), so we will upgrade (irregularly).

**Q: Can you adjust the brightness/Sharpness of the video?**

A: Path: Set up (Click "Source")-Picture-Picture Mode(Choose "User")-Adjust via remote control .For non-professionals, we recommend using the default value.

**Need to know more.....**

Email to us : [us-projector@xoppox.net](mailto:us-projector@xoppox.net)



## Specifications

Light Source Type	LED
Display Native Resolution	1080P
Supported Video Resolution	1080p, 1080i, 720p, 576i, 480p, and 480i
Included Adapter Connect DC input of the unit	Input AC100-240V , 50/60HZ;
Display Color	7000K~8000K
Dolby Sound	Support
Connect Types	HDMI / USB / Micro USB(TF) / AV / Audio
Input	HDMI*2 / AV*1 / Micro USB(TF) *1 / USB*1
Output	Audio Out *1/Bluetooth
USB Port	Support USB device up to 64GB
SD Card	Support SD card up to 64GB
Supported image format	*.jpg*.png*.bmp
Supported audio formats	*.mp3*.wma*.ogg*.aac*.flac
Supported video formats	.avi*.flv*.rmvb*.mkv*.mp4*.3gp*.mov*.mpg*.mpeg*.ts*.tp*.vob
Dimension	254*197*110mm

### Warranty

#### Customer support

If you have any questions about this projector, please contact us.

Email: [us-projector@xoppox.net](mailto:us-projector@xoppox.net)