

# Retro Bluetooth Speaker

## NT-B804 Instruction Manual

Please read all of the instructions carefully and retain for future reference

### Safety Instructions 1

1. When using electrical units, basic safety precautions should always be followed.
2. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this unit, only if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved.
3. Children should be supervised to ensure that they do not play with unit.
4. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
5. This unit is not a toy.
6. This unit contains no user serviceable parts, if the unit and any of its accessories are malfunctioning or it has been dropped or damaged, only a qualified electrician should carry out repairs, improper repairs may place the user at risk of harm.
7. Keep the unit out of reach of children.
8. Keep the unit away from heat or sharp edges that could cause damage.
9. Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquid.
10. Keep the unit free from dust lint etc.
11. Do not immerse the unit in water or any other liquid.
12. Do not operate the unit if it has been exposed to water, moisture or any other liquid to prevent against electric shock, explosion and / or injury to yourself and damage to the unit.
13. Do not use the unit for anything other than its intended use.
14. Do not store the unit in direct sunlight or in high humidity conditions.
15. Do not put objects into any of the openings.
16. Do not play music at excessive volume levels as damage to hearing and / or the equipment may occur. It is imperative to unplug the adaptor after the unit has been used, before it is cleaned and whilst being repaired.
17. To prevent possible hearing damage, do not listen at high volume levels for long periods of time.
18. Warning: Keep the unit away from flammable materials.

### Specifications 2

Power Supply :	DC 5V
Output Power :	10W
Driver Unit :	2.5"4Ω*2
Bluetooth Version :	v5.0
Storage class:	Max Size 64Gb
FM Frequency Range :	87.5-108 MHz
AM Frequency Range :	530-1600 KHz
Frequency Response :	90Hz - 18 KHz
S/N Ratio :	≥ 65dB
Rechargeable Battery :	Lithium 3.7V 3000mAh
Product Size :	W227*H136*D126 mm


### Getting Started 3

1. Remove the unit from the box.
2. Remove any packaging from the unit.
3. Place the packaging inside the box and either store or dispose of safely.

### In The Box 4

Bluetooth Speaker	*1
USB Charging Cable	*1
3.5 mm Aux in cable	*1
Instruction Manual	*1

### Description of Parts 5

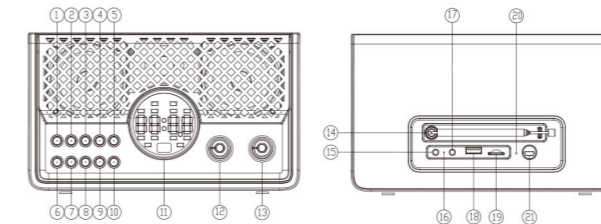

- ① Prev
- ② Play / Pause
- ③ Next
- ④ Mode
- ⑤ Time
- ⑥ EQ (Extra Bass)
- ⑦ Snooze
- ⑧ Preset
- ⑨ Alarm One
- ⑩ Alarm Two
- ⑪ LED Display
- ⑫ Dimmer
- ⑬ Power Switch / Volume Control Dial
- ⑭ Antenna
- ⑮ Aux in
- ⑯ Mic Receiver
- ⑰ Aux Out / Earbud Jack
- ⑱ USB Slot
- ⑲ TF Slot
- ⑳ Charging Indicator
- ㉑ DC Charging Input

### FCC Caution. 10

§ 15.19 Labelling requirements.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning.  
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.  
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

### Instructions for Use 6

#### LED Display

1. Bluetooth Mode: It will be showing "Blue/BT" in middle of display.
2. AUX Mode: It will be showing "AUX" in middle of display.
3. USB Mode: USB indication light on, during the USB playing, it will be showing song name in the display and change to play time after two second. When USB music paused, the display will be showing the played time for the music.
4. TF Mode: TF indication light on, during the TF card playing, it will be showing song name in the display and change to play time after two second. When TF music paused, the display will be showing the played time for the music.
5. FM Mode: It will be showing the channel frequency in mid of display when playing the radio, and the FM indication light on.
6. Alarm 1 Mode: The ALARM 1 indicate light on.
7. Alarm 2 Mode: The ALARM 2 indicate light on.
8. Snooze Mode: The "Zz" indicate light on.
9. 12-hour system : AM, PM indicate light on.
10. 24-hour system : 24H indicate light on.

#### Bluetooth Operation

1. Power on the speaker by turning the VOL knob.
2. The speaker will be default into Bluetooth mode when first turned on.
3. Turn on the Bluetooth setting of your device and search the pairing name "NT-B804".
4. Music is ready to play after paired.
5. During the play, turning the volume control switch to adjust the volume.
6. In Bluetooth mode, short press "Play/Pause" to answer the incoming call or end the calling; Long press "Play/Pause" to disconnect Bluetooth.

### Instructions for Use 7

#### USB/TF Operation

1. Insert USB/TF, then it will play the MP3 files directly.
2. Press "Play/Pause" button then pause or play the music.
3. During the play, turning the volume control switch to adjust the volume.

\*\*\* Please don't take out USB/TF card while playing, otherwise, USB/TF card will be damaged \*\*\*

#### Aux In Operation

1. Press "Mode" button to AUX-IN mode.
2. Insert AUX-IN cable and connect to your device to play music.
3. Press "Mode" button to mute for the music.

#### Radio Operation

1. Press "M" button to FM mode.
2. Press "Play / Pause" button to run auto scan.
3. Press "Prev" or "Next" change to previous and next program, turning the volume control switch to adjust the volume.
4. Pull out the FM antenna and adjust position for better receiving.
5. Press "Preset" to save the FM Channel.
6. Press "Play/Pause" button to mute for the radio.

#### EQ (Extra Bass)

1. Under the Music MODE, press EQ button to enhance the bass performance of music, press again to cancel the effect.

### Instructions for Use 8

#### Time Setting

1. Press "Time" button to set hour, the hour will start flashing on the display, press "Prev" "Next" to cycle through the hours from 1 to 12 or 24 based on the hour system setting; Then press again "Time" button to set minute, the minute will start flashing on the display, press "Prev" "Next" button to cycle through the minute from 00 to 59; Then press again "Time" button back to the time display, and there is tone to confirm the time setting finished.

#### Alarm One Setting

1. Long press "Alarm One" button, the hour will start flashing on the display, press "Prev" "Next" to cycle through the hours from 1 to 12 or 24 based on the hour system setting; Then press "Alarm One" button to set minute, press "Prev" "Next" button to cycle through the minutes from 00 to 59; press again "Alarm One" back to the clock 1 display, and there is tone to confirm Alarm 1 setting finished.
2. Press "Prev" "Next" button to shift the clock status, when it is showing "ONE" in middle of display, it means one time clock setting, while it means Alarm setting for everyday when showing "ON", and it means Alarm closed when showing "OFF", press again "Alarm One" button, there is tone to confirm the Alarm setting finished.

#### Alarm Two Setting

1. Long press "Alarm Two" button, the hour will start flashing on the display, press "Prev" "Next" to cycle through the hours from 1 to 12 or 24 based on the hour system setting; Then press "Alarm Two" button to set minute, press "Prev" "Next" button to cycle through the minutes from 00 to 59; press again "Alarm Two" back to the clock 2 display, and there is tone to confirm Alarm 2 setting finished.
2. Press "Prev" "Next" button to shift the clock status, when it is showing "ONE" in middle of display, it means one time clock setting, while it means Alarm setting for everyday when showing "ON", and it means Alarm closed when showing "OFF", press again "Alarm Two" button, there is tone to confirm the Alarm setting finished.

### Instructions for Use 9

#### 12-hour system setting

1. Press the "Alarm one" button and then press the "Time" button to enter the time setting, the hour will be flashing in the display; Press "Prev" "Next" to cycle through the hours from 1 to 12; Then press "Time" button to set minute, press "Prev" "Next" button to cycle through the minutes from 00 to 59; Press again "Time" button back to the time display, and there is tone to confirm the setting finished.

#### 24-hour system setting

1. Press the "Alarm Two" button and then press the "Time" button to enter the time setting, the hour will be flashing in the display; Press "Prev" "Next" to cycle through the hours from 1 to 24; Then press "Time" button to set minute, press "Prev" "Next" button to cycle through the minutes from 00 to 59; Press again "Time" button back to the time display, and there is tone to confirm the setting finished.

#### Snooze Time Setting

1. Press the "Snooze" button to set the snooze time on and off. When the alarm is not ringing, long press the "Snooze" button to enter the snooze time setting: (1-29 minutes setting) Press "Prev" "Next" to adjust and set the snooze time, then press again the "Snooze" button with a tone to confirm the setting finished.

Remark: The default snooze time is set as 9 minutes. When the alarm is ringing, press the "Snooze" button to cancel the snooze setting, while press any other button can enter into snooze mode, except for pressing the "M" button, press the "M" button is to switch the mode.

#### Supplement:

1. Mode Switch Sequence: BT-->TF-->USB-->FM-->AUX