 
 


05/ MODEL AND SPECIFICATION

Control Panel



Power key

It is used for Power ON or Power OFF. Press it once and the machine will switch between three two states: when the machine is started, it remains the working state of the last time, and the power indicator would light up.

Comfort Mode key

In the startup status, press the Comfort key, its indicator light will be on, and the machine will enter the status of comfortable dehumidification (dehumidification humidity will be controlled automatically between 50% and 55%). Press this key again, its indicator light will be off, and every time it is pressed, the buzzer will sound once.

Humidistat key

The corresponding status indicator light and humidity symbol "H" is turned on, and the left and right Adjustment keys light up and flash. At this time, the required target humidity can be set through the left and right adjustment keys. The humidity range is between 40% and 80% with the initial value being "50". The value increases or decreases by 5% every time this key is pressed. When it is set to "60", it means that the target humidity is set, and there is no signal showing that the Left and Right Adjustment keys are pressed in more than 3 seconds, the setting will be considered valid; meanwhile, the Left and Right Adjustment keys will be closed synchronously and resume the normal display state.

Left and Right Adjustment keys

This key is only effective when either the Custom Dehumidification key or the Timer key is valid. When this key takes effect, the left and Right Adjustment keys flash three times and light up on by one, and finally both of them are on (the vehicle proceeds takes about 3 seconds), at this time, corresponding settings can be made. For detailed setting methods, please refer to the corresponding key descriptions in points (3) and (4) above. Indicator Light Description.

Child Lock Button

Child lock setting button: keep pressing the button for three seconds. Child lock function will be opened or closed. And it's indicator light will be on or off.

Network light code value is a white light highlight field; its display functions are as follows:

1. The status of the current measured ambient relative humidity are displayed as follows:
In the startup state, the number is not displayed.
The normal range of ambient humidity is 40-80; LD is shown when it is below 40, and H1 is shown when it is above 80.

2. Set humidity display: You can start after pressing the humidistat key" and "left and right adjustment keys. See "Description of humidistat key" for details.
3. Fault display: When the "Timer" key and the "humidistat key are pressed for 2 seconds at the same time, the coil temperature value will be displayed in slow flash on the digital tube. The normal display can be resumed after the same operation.

Note:
If it is the coil temperature value ≤ 9 , the display mode will be "00".
If the negative value of the coil temperature exceeds the display range of "00", it will be displayed in slow flash.

Remarks: The priority of the digital tube display modes is as follows: Fault code E1 (LD coil temperature value set humidity value ambient humidity value, when a fault code is being displayed, the humidity cannot be set, as the value cannot be displayed).

WiFi Indicator light

Slow flash—Compatible networking mode to wait for networking.
Quick flash—waiting for networking.
Normally on—The network has been connected.
Normally off—the machine is in standby state, or the network is not connected, or WiFi module signal is not detected.

Wind Speed key

Fan Speed key: It is used to select wind gears, which would create among "High-Medium-Low" after the corresponding status is selected. High Mode: Three indicator lights are on.
Medium Mode: Two lights are on; Low Mode: One light is on.
After selection, the machine will be operated in the selected status first in any dehumidification mode (default continuous dehumidification, healthy dehumidification and ordinary dehumidification).

If the Full Tank signal is detected to be valid for 3 consecutive records when the tank is full, then it indicates that the tank has been full.

If the Full Tank signal is detected to be valid for 3 consecutive records when the tank is full, then it indicates that the tank has been full.

If the Full Tank signal is detected to be valid for 1 second when the tank is full, then it indicates that the tank is not full and returns to normal.

When the Full Tank signal is valid, whether the switch is closed or open depends on the specific Machine.

Action after the tank is full:
When the machine stops working, the buzzer will not sound; instead, the full tank indicator light will normally or fall other indicator lights are off, and not press other keys except the On/Off key. Press the Power On/Off key can turn off the machine instead of just Full Tank symbol, or its Indicator light. After shutdown, it is the same as normal situation. If the machine is not started off, after the tank is emptied and reset, the indicator light goes out, the buzzer does not sound, the machine returns to the state before the tank is full and continues to work, and the compressor still provides 2-minute delay protection.

If you want to change the original setting, you can press the Timer key again to reset the timing.

This key can be also used as a WiFi key

When the machine is turned on, press this key for about 5 seconds, then the WiFi indicator light will display the current WiFi status. If the WiFi has been connected earlier, the WiFi light will be on after starting the machine, making it unnecessary to press this key for 5 seconds. In this state, press this key for about 5 seconds, the buzzer will sound once, and the network can be reset in the program.

Alarm key

Negative on key (with negative ion function, this button) is used to turn on and off the negative ion function, corresponding indicator light on or off. This button is also the child lock key, long press 3s to open/close the child lock, the corresponding indicator light on or off.

Drainage Instructions: (Including water tank drainage and continuous drainage)

Timer key

When the machine is on, every time this key is pressed, the buzzer would sound once. The desired timing can be realized by pressing the Timer key and then pressing the Left and Right Adjustment keys. The timing falls into the range of 0-24h, when the set time is up, the machine would be shut down and enter the standby state.

Note:
1. If you press the On/Off key to turn off the machine before the timing is done, then the timing setting will be cancelled.
2. If the working mode is changed during the timing process, the original setting will be maintained.
3. When the ambient temperature is 0°C-40°C, the timing accuracy is $\pm 0.7\%$, which is normal.

If you want to change the original setting, you can press the Timer key again to reset the timing.

This key can be also used as a WiFi key

When the machine is turned on, press this key for about 5 seconds, then the WiFi indicator light will display the current WiFi status. If the WiFi has been connected earlier, the WiFi light will be on after starting the machine, making it unnecessary to press this key for 5 seconds. In this state, press this key for about 5 seconds, the buzzer will sound once, and the network can be reset in the program.

Alarm key

Negative on key (with negative ion function, this button) is used to turn on and off the negative ion function, corresponding indicator light on or off. This button is also the child lock key, long press 3s to open/close the child lock, the corresponding indicator light on or off.

Drainage Instructions: (Including water tank drainage and continuous drainage)

Water Tank Drainage

When the Full Tank alarm goes off, the Full Tank indicator light is on, and the water quantity can be viewed through the Tank window. Gently pull out the tank with your hand hooking the buckle at the bottom of the tank. You can carry the tank (there is a handle in the side) to the drainage area, then lift the drainage lid at the corner of the tank lid, and slowly tilt the tank to empty the water.



Continuous drainage

Open the soft water plug at the rear shell. Take out the PVC water pipe and insert one end of it into the continuous drainage hole of the machine with the upper end in the drainage area.



06/ CLEANING AND MAINTENANCE

Note: Before cleaning and maintaining the machine, please turn off the machine and unplug the power plug in case of electric shock.

Before cleaning or maintaining the machine in any mode, the machine must be shut down, the power plug must be unplugged, and water cannot be sprinkled on the machine; Clean the casing with a soft wet cloth, and chemical solvents such as benzene, alcohol and gasoline are not allowed to use, otherwise, the machine casing will be damaged or even deformed.

Cleaning of the filter

This machine is equipped with a washable filter, which should be cleaned every 2 weeks, as the machine will be less efficient if the filter is blocked by dust.

The filter can be removed for cleaning from the buckle on the left side plate, and can be easily installed by inserting the buckle to the slot.



07 / TROUBLESHOOTING

The following list contains the common problems, but none of them are faults caused by imperfect manufacturing process or material defects.

Before cleaning or maintaining the machine in any mode, the machine must be shut down, the power plug must be unplugged, and water cannot be sprinkled on the machine; Clean the casing with a soft wet cloth, and chemical solvents such as benzene, alcohol and gasoline are not allowed to use, otherwise, the machine casing will be damaged or even deformed.

Conditions for the machine compressor to start and stop:
1. When the ambient temperature is 5°C-35°C, or when the temperature sensor fails, the compressor does not work.
2. When ambient temperature is still, the compressor makes automatic defrosting at regular intervals.
3. During defrosting, the compressor does not work, but the fan still works.

In case of any of the following conditions, please confirm which fault it is according to the following list before consulting customer service:

Fault description	Troubleshooting	Notes
Machine does not start	1. Check power supply 2. Check whether the power plug is inserted correctly	Power supply
Machine does not work	1. Check whether the power plug is inserted correctly 2. Check whether the power plug is inserted correctly	Power supply
Machine does not work	1. Check whether the power plug is inserted correctly 2. Check whether the power plug is inserted correctly	Power supply
Machine does not work	1. Check whether the power plug is inserted correctly 2. Check whether the power plug is inserted correctly	Power supply

Note: If there are other faults, please contact the manufacturer at the point of purchase for inspection and repair. Do not disassemble the machine by yourself.

08 / AFTER-SALES SERVICE

The warranty (repair for free) of the commodity under warranty shall take effect from the date of purchase.

If the quality disappoints you in any way, the commodity under warranty can be returned to our company for handling. The following issues should be paid particular attention to:
This warranty card will not be resused if lost, so please keep it well.

This warranty card is only valid in the People's Republic of China (Temporary not available in Hong Kong, Macao and Taiwan).

2. Within the following period from the date of purchase, the warranty is valid in case of any damage caused by Chinese manufacturing processes or components and parts under normal use.

Whole machine (except the filter screen and consumable parts): 3 years; Compressor: 5 years.

Accessories: The filter screen and consumable parts can be repaired at a cost (they are not covered by warranty).

3. In case of any one of the following circumstances, free warranty cannot be provided even if the machine is under warranty, but paid repairs are still available.

Please note

The product is beyond the scope of warranty.
The product is not used as required in the Operation Manual.
This warranty card and valid purchase invoice cannot be presented.

The product has order or model on the warranty card is inconsistent with that on the product.

The product is damaged due to maloperation, abnormal power supply, accidents (such as falling or human factors).
The product is damaged due to transport, loading and unloading on the way of the customer returning it for repair.

Faults or damages caused by errors other than the design, technology, manufacturing and quality of the product.
The product has been disassembled or repaired by personnel not authorized by our company.

The information recorded on the warranty card is inconsistent with or altered from the physical signs on the commodity.

4. These clauses for free warranty are only applicable to the occasions where consumers purchase the product for living needs, instead of for operational purposes (such as for industrial and commercial purposes).

5. Special instructions
In order to safeguard the legitimate rights and interests of customers, our company implements the "Three Guarantee" policy based on national regulations, according to which consumers can return, replace or have the machine repaired within the "Three Guarantee" period.

For the machine whose warranty period has expired, the customer can contact our After-sales Department to order the required spare parts by mail.