





INSTRUCTION MANUAL 47 INCH PRE-LIT SNOWMAN ARTICLE # 217720

Thank you for purchasing the 47 inch Pre-Lit Snowman. This product it not a toy. For decorative purposes only. Please read these instructions entirely before using. **Note:** Use this product only with the transformer supplied.

Do not connect directly to a main outlet without the transformer.


LED bulbs in this set are not replaceable.



Take the snowman out of the package.
 Assemble the two half parts of the body by inserting the tubes or hook through the circle on each side as shown in the picture above (from bottom to top).



2. Now the body will be stable.

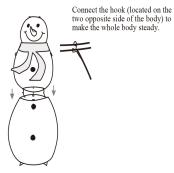

3. Put the snowman's upper body onto the bottom one.



4. Put the snowman's hat and arms on the body.



 Assembly is now complete. If using outdoors on a lawn, secure the snowman by inserting the 4 lawn stakes through the supports and into the soil.