 


Free S

User Guide

说 明 书

 
产品及配件 Products and accessories

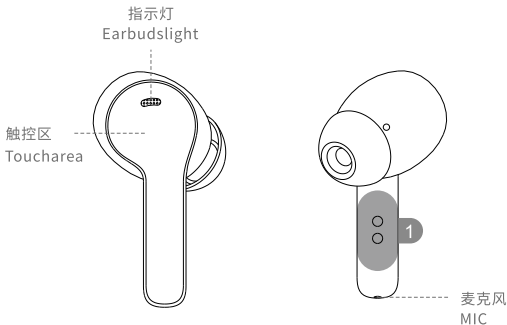

! 首次使用需将图示1位置保护膜揭下后放入充电盒, 关闭充电盒后耳机激活。

For the first time, remove the protective film of Figure 1 and put it into the charging case. After the charging case is closed, the earbuds are activated.

充电盒 Case

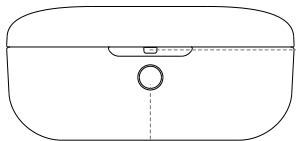

按键
Button

状态指示灯
Status light

使用状态 status of use

 
绿色:电量充足 Green:battery full

红色:电量低 Red:battery low

充电状态 status of charging

绿色:正在充电 Green:charging

熄灭:充满电 Off:fully charged

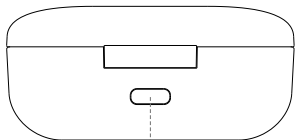

充电口
Charging ports



USB充电线
USB charging cable

1 首次连接 First connection

耳机激活后, 打开充电盒, 耳机指示灯为绿色闪烁状态, 此时打开手机蓝牙开关点击设备名称Free S进行连接。

After the earbuds is activated, open the charging case, and the earbud indicator is flashing green. At this time, turn on the Bluetooth switch of the mobile phone and click the device name Free S to connect.

2 新设备连接 New device connection

耳机在充电盒中, 并且打开充电盒, 按下充电盒内按键, 直至充电盒状态指示灯为绿色后松开手, 此时耳机指示灯为绿色闪烁, 打开手机蓝牙开关, 点击设备名称Free S进行连接。耳机有连接记录后, 打开充电盒, 耳机将自动重新连接最近连接过的一台手机。

Keep the earbuds in the charging case, and open the charging case. Press and hold the button in the charging case until the status light turns green, then release your hand. At this time, the earbuds light is flashing green. Turn on the Bluetooth switch of the mobile phone and click the device name Free S to connect. After the pairing record is available, open the case and the earbuds will automatically reconnect to the last connected mobile phone.

3 恢复出厂设置 Reset

耳机在充电盒中, 并且打开充电盒, 按下充电盒内按键, 直至充电盒状态指示灯为红色后松开手, 等待耳机指示转为绿色闪烁, 耳机恢复出厂设置完成。

Keep the earbuds in the charging case, and open the charging case. Press and hold the button in the charging case until the status light turns red, then release your hand. Wait until the earbuds light flashing green. The earbuds reset complete.

耳机触摸功能 Earbud touch function

左右耳机均能通过触控控制手机的相关功能

	左耳机	右耳机	响应场景
双击	上一首 拒绝来电	下一首 拒绝来电	音乐播放 来电电话
短按	播放/暂停 接听/挂断	播放/暂停 接听/挂断	播放/暂停 接听/挂断
长按	唤醒语音助手	唤醒语音助手	任意场景 通话除外

Tap either earbud to control them

	Earbudleft	Earbudright	Scenario
Double tap	Back to previous Call reject	Next song Call reject	Play music Incoming call
Short hold	Play/Pause Answer/Hang off	Play/Pause Answer/Hang off	Play music Incoming call
Long hold	Activate voice assistant	Activate voice assistant	Any scenario (Except phone call)

维护和保养 Care and Maintenance

- 请保持设备及其配件干燥。请勿使用微波炉或吹风机等外部加热设备对其进行干燥处理。
 - 请勿在温度过高或过低区域放置设备及其配件，否则可能导致设备故障、着火或爆炸。
 - 清洁和维护前，请停止使用本设备，关闭所有应用，并断开与其他设备的所有连接或线缆。
 - 请勿使用烈性化学制品、清洗剂或强洗涤剂清洁设备或其配件。请使用清洁、干燥的软布擦拭设备或其配件。
 - 请勿将磁条卡(例如银行卡、电话卡等)长期接触本设备，否则可能导致磁条卡被磁场损坏。
 - 请勿擅自拆卸或改装设备及其配件，否则该设备及配件将不在本公司保修范围之内，设备发生故障时请联系授权服务中心。
-
- Please keep the device and its accessories in dry environment. Do not dry the device by using heating devices such as microwaves or hair dryer.
 - Do not place the device and its accessories in the area where temperature is too high or too low, or else it may cause malfunction, fire or explosion.
 - Before cleaning and maintenance, please stop using the device, stop all operations, and disconnect cables connecting with other devices.
 - Do not use strong chemicals products, detergents or cleaning equipment to clean the device its accessories. Please use a clean, dry, and soft cloth to wipe the device or its accessories.
 - Do not put magnetic stripe cards (such as bank cards, SIM cards, etc.) together with the device for a long time, because magnetic stripe cards may be damaged by magnetic field.
 - Do not disassemble or modify the device and its accessories, otherwise the warranty will not be applicable. If malfunction of the device happens, please contact the authorized service centers.

Safety information and warranty card

安全信息与保修卡

安全資訊與保修卡

Safety and handing

Important safety information

Handle this device with care. They contain sensitive electronic components, including batteries, and can be damaged or cause injury if dropped, burned, punctured, crushed, disassembled, or if exposed to excessive heat or liquid. Don't use damaged device.

Electronic devices

Where there is a prohibition on the use of wireless devices, please do not use this device, otherwise it will interfere with other electronic devices or cause other hazards.

Hearing protection

Listening to sound at high volumes may permanently damage your hearing. Background noise, as well as continued exposure to high volume levels, can make sounds seem quieter than they actually are. Check the volume before inserting earbuds in your ear.

Medical device interference

Earbuds and charging case contain components and radios that emit electromagnetic fields. Earbuds and charging case also contain magnets. These electromagnetic fields and magnets may interfere with pacemakers, defibrillators, or other medical devices. Maintain a safe distance of separation between your medical device and earbuds and charging case. Consult your physician and medical device manufacturer for information specific to your medical device. Stop using earbuds and charging case if you suspect they are interfering with your pacemaker, defibrillator, or any other medical device.

Skin irritation

Earbuds can lead to ear infections if not properly cleaned. Clean earbuds regularly with a soft lint-free cloth. Don't get moisture in any openings, or use aerosol sprays, solvents, or abrasives. If a skin problem develops, discontinue use. If the problem persists, consult a physician.

Electrostatic shock

When using earbuds in areas where the air is very dry, it is easy to build up static electricity and possible for your ears to receive a small electrostatic discharge from earbuds. To minimize the risk of electrostatic discharge, avoid using earbuds in extremely dry environments, or touch a grounded unpainted metal object before inserting earbuds.

Traffic Safety

Please comply with the relevant regulations of the country or region and do not use this product when driving.

Keep in mind that driving safety is the most important thing and do not do anything that may cause distraction.

The electronic devices of the car may malfunction due to the radio interference of the earbud. Please contact the manufacturer for detailed information.

Wireless devices may interfere with the flight system of the aircraft, please comply with the relevant regulations of the airline, do not use the device when there is a prohibition using wireless equipment.

Operation Environment

Do not use the device in wet environment or near magnetic field to avoid internal circuit malfunction of the device.

Please do not use the device in thunderstorm weather.

Thunderstorms weather may cause malfunction of the device or a risk of electric shock.

Please use the device within a temperature range of 0°C-+40°C and store the device and its accessories within a temperature range of -20°C-+60°C. Extremely high or low temperatures may cause malfunction of the device. The performance of battery maybe influenced when temperature is lower than 10°C.

Do not place the device in a position subject to direct sunlight, such as car dashboard or window sill.

Do not expose the device to hot places or ignition sources, such as electric heater, microwaves, oven, water heaters, stove, candle or any other place that may generate heat.

Do not place pins and other sharp metal items around the receivers or speakers, so as to avoid metal items being attached which may cause harm to you.

Child Safety

This device and its accessories may contain small parts, please place the device and its accessories in places that can not be reached by children. There are risks such as the device and its accessories being damaged by children unintentionally, or children may swallow small parts of the device which may cause suffocation, etc.

This device is not a toy, therefore children should use the device under adult supervision.

Accessories Requirements

Only accessories approved by the device manufacturer and compatible with the device can be used. The use of other types of accessories may violate the warranty provisions of the equipment and the relevant provisions of the country in which the equipment is in place, and may lead to incidents. For approved accessories, please contact authorized service centers.

Battery Safety

Do not disassemble or modify the battery, insert foreign matter, or immerse the battery in water or other liquids, to avoid battery leakage, overheating, fire or explosion.

Do not drop, squeeze or puncture the battery, excessive external pressure on the battery may lead to short circuit and overheating inside the battery.

This device is equipped with a built-in battery that is not removable. Do not replace the battery on your own to prevent causing damage to the battery or device. The battery can only be replaced in authorized service centers.

Care and Maintenance

Please keep the device and its accessories in dry environment. Do not dry the device by using heating devices such as microwaves or hair dryer.

Do not place the device and its accessories in the area where temperature is too high or too low, or else it may cause malfunction, fire or explosion.

Before cleaning and maintenance, please stop using the device, stop all operations, and disconnect cables connecting with other devices.

Do not use strong chemicals products, detergents or cleaning equipment to clean the device its accessories. Please use a clean, dry, and soft cloth to wipe the device or its accessories.

Do not put magnetic stripe cards (such as bank cards, SIM cards, etc.) together with the device for a long time, because magnetic stripe cards may be damaged by magnetic field.

Do not disassemble or modify the device and its accessories, otherwise the warranty will not be applicable. If malfunction of the device happens, please contact the authorized service centers.

Environmental Protection

Please do not throw away the device and its accessories as ordinary

domestic waste.

Please comply with the local regulations for handling the device and its accessories and support recycling campaigns.



WARNING: To prevent possible hearing damage, do not listen at high volume levels for long periods.



Warning: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

After-sales Service

Dear user, thank you for using this product. In case of any damage that is not due to human factor, warranty service is available for a period of one year beginning from the original purchase date.

To protect your legal interests, please read the following notes carefully:

1. A valid purchase certificate shall be issued by the sales unit at the time of purchase.
2. Consumers should retain their warranty card. The warranty card will not be re-issued if lost.
3. In case of any damage of the product that is not due to human factors, consumers are entitled to repairs at customer service centers with warranty card and purchase certificate free of charge within the warranty period.

The warranty is not applicable in the following cases that arise during product usage:

1. Exceeds the valid warranty period;
2. The product is damaged because it was accidentally dropped or immersed in water when in use.
3. Damages caused by human factors such as unauthorized disassembly, modification, etc.
4. Damages caused by usage in environments not conforming to product specifications.
5. Damages caused by force majeure (e.g. fires, earthquakes, and lightning).
6. Damages caused by improper usage that does not conform to the user guide or operation manual.
7. Information on Warranty Card or Purchase Certificate is inconsistent with the product serial number or altered.
8. SN code of the product is missing, damaged, or blurred beyond recognition.

Declaration of RoHS Compliance

Hazardous Substances	PartName				
	Cord Sets	Metal Parts	Circuit Board	Plastic Parts	Battery
Lead (Pb)	X	X	X	O	X
Mercury (Hg)	O	O	O	O	O
Cadmium (Cd)	O	O	O	O	O
Hexavalent Chromium (Cr6+)	O	O	O	O	O
Polybrominated Diphenyl Ethers (PBDE)	O	O	O	O	O
Polybrominated Biphenyls (PBB)	O	O	O	O	O
Bis(2-Ethylhexyl) Phthalate (DEHP)	O	O	O	O	O
Benzyl Butyl Phthalate (BBP)	O	O	O	O	O
Dibutyl Phthalate (DBP)	O	O	O	O	O
Diisobutyl Phthalate (DIBP)	O	O	O	O	O

This stable is compiled according to SJ/T 11364 standard.

- O Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.
- X Indicates that said hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement of GB/T 26572, but it is exempted by EU ROHS.

*Please understand that there is not always bundled all of the items because it depends on a product.

TAUCVEE Warranty Card

Product Info

Product model: _____

Product serial No.: _____

User Info

Customer name: _____ Contact number: _____

Customer address: _____

Sales Info

Purchase date: _____ Receipt number: _____

Sales unit: _____

Contact number: _____ Sales address: _____

安全与操作

重要安全性信息

请小心操作本设备。它们内含高灵敏度电子元器件（包含电池），跌落、焚烧、刺穿、挤压、拆卸或者暴露在高温或液体中均会造成其损失或导致人身伤害。请勿使用损坏的耳机或充电盒。

电子设备

有明文规定禁止使用无线设备的场所，请勿使用本设备，否则会干扰其它电子设备或导致其它危险。

听力保护

用高音量听音乐可能会对听力造成永久损伤。背景噪音和持续暴露在高音量下，会让声音听起来比实际音量小。请先检查音量大小，再将耳机放入双耳。

医疗设备干扰

耳机和充电盒包含的部分组件和无线电会发射电磁场。耳机和充电盒也含有磁体。这些电磁场和磁体可能干扰起搏器、除颤器或其他医疗设备。请使用医疗设备和您的耳机及充电盒保持安全的距离。请咨询您的医师和医疗设备制造商以获得特定于医疗设备的信息。如果您怀疑耳机和充电盒正在干扰您的起搏器、除颤器或任何其他医疗设备，请停止使用。

皮肤刺激

如果没有正确清洁耳机，可能会导致耳机感染。请定期使用柔软且不起绒

的擦拭布清洁耳机。切勿使任何开口处受潮，也不可使用气雾喷剂、溶剂或研磨剂。如果出现皮肤问题，请停止使用耳机。如果皮肤问题持续存在，请咨询医生咨询。

静电电击

在空气非常干燥的区域使用耳机时，容易聚集静电，您的耳朵可能会遭受耳机的微弱静电放电。若要将静电放电的危险降至最低，请避免在极其干燥的环境中使用耳机，或者将耳机放入双耳前触摸已接地的未上漆金属物体。

交通安全

遵守所在地区或国家的相关规定，驾车时请勿使用本产品。

谨记安全驾驶是您的首要职责，请勿从事会分散注意力的活动。

汽车的电子设备可能因设备的无线电干扰而出现故障。请联系制造商咨询详细信息。

无线设备可能干扰飞机的飞行系统，请遵守航空公司的相关规定，在禁止使用无线设备的地方，请勿使用该设备。

操作环境

请勿在潮湿或靠近磁场的地方使用设备，以免引起设备内部电路故障。

请勿在雷雨天气使用本设备。雷雨天气可能导致设备故障或点击危险。

请在温度0°C~+40°C范围内使用本设备，并在温度-20°C~+60°C范围内存放设备及其配件。当环境温度过高或过低时，可能会引起设备故障。当温度低于10°C时，电池的性能会受到限制。

请勿将设备放置在阳光直的地方，如汽车仪表盘或窗台处。

请勿将设备靠近热源或裸露的火源，如电暖器、微波炉、烤箱、热水器、炉火、蜡烛或其他可能产生高温的地方。

请勿将大头针等尖锐金属物品放置在设备听筒或者扬声器附近，以免金属物品附着，对您造成伤害。

儿童健康

本设备及其配件可能包含一些小零件，请将设备及其配件放置在儿童接触不到的地方。儿童可能在无意之中损坏本设备及其配件，或吞下小零件导致窒息或其他危险。

本设备并非玩具，儿童应在成人监护下使用设备。

配件要求

只能使用设备制造商认可且与此型号设备配套的配件。如果使用其他类型配件，可能违反本设备的保修条款以及本设备所处国家的相关规定，并可能导致安全事故。如需获取认可的配件，请与授权服务中心联系。

电池安全

请勿拆解或改装电池、插入异物、或浸入水或其他液体中，以免引起电池漏液、过热、起火或爆炸。

请勿跌落、挤压或穿刺电池。避免让电池遭受外部大的压力，从而导致电池内部短路和过热。

本设备配有不可拆卸的内置电池。请勿自行更换电池，以免损坏电池或设备。电池只能由授权服务中心更换。

维护和保养

请保持设备及其配件干燥。请勿使用微波炉或吹风机等外部加热设备对其进行干燥处理。

请勿在温度过高或过低区域放置设备及其配件，否则可能导致设备故障、着火或爆炸。

清洁和维护前，请停止使用本设备，关闭所有应用，并断开与其他设备的所有连接或线缆。

请勿使用烈性化学制品、清洗剂或强洗涤剂清洁设备或其配件。请使用清洁、干燥的软布擦拭设备或其配件。

请勿将磁条卡(例如银行卡、电话卡等)长期接触本设备，否则可能导致磁条卡被磁场损坏。

请勿擅自拆卸或改装设备及其配件，否则该设备及配件将不在本公司保修范围之内，设备发生故障时请联系授权服务中心。

环境保护

请勿将本设备及其附件作为普通的生活垃圾处理。

请遵守本设备及其附件处理的本地法令，并支持回收行动。



警告：为避免听力可能受损，请勿长时间以高音量聆听。

售后服务说明

尊敬的用户，感谢您使用本公司生产的产品。自购买之日起一年内如果出现非人为原因造成的性能故障，可以享受本公司的产品保修服务。为保障您的合法权益，请注意以下事项：

1. 购买时须由销售单位开立有效购买凭证。
2. 保修卡及购买凭证应由用户妥善保管，遗失不补。
3. 若本产品发生非人为原因造成的故障，用户可凭保修卡和购买凭证，在保修期内到客户服务中心进行免费维修。

在用户使用的过程中，符合下列情况之一者不在保修范围内：

1. 超过保修有效期。
2. 在使用过程中因产品跌落或水浸而造成损坏。
3. 由于擅自拆卸，改装等人为原因造成的故障。
4. 由于使用环境不符合产品要求而造成的故障。
5. 由于不可抗因素(如火灾、地震、雷击等)而造成的故障或损坏。
6. 未按说明书或操作手册中的要求使用而造成的损坏。
7. 保修卡或购机凭证与产品序列号不符，或者被涂改。
8. 产品SN条码被撕掉或被损坏，模糊不清无法识别。

环保说明

有害物质	部件名称				
	电线组件	金属部件	电路板	塑料部件	电池
铅 (Pb)	X	X	X	O	X
汞 (Hg)	O	O	O	O	O
镉 (Cd)	O	O	O	O	O
六价铬 (Cr6+)	O	O	O	O	O
多溴二苯醚 (PBDE)	O	O	O	O	O
多溴联苯 (PBB)	O	O	O	O	O
邻苯二甲酸二酯 (DEHP)	O	O	O	O	O
邻苯二甲酸丁苄酯 (BBP)	O	O	O	O	O
邻苯二甲酸二丁酯 (DBP)	O	O	O	O	O
邻苯二甲酸二异丁酯 (DIBP)	O	O	O	O	O

本表格依据SJ/T 11364的规定编制

O 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求,且目前业界没有成熟的替代方案,符合欧盟RoHS指令环保要求。

*因型号不同,产品可能不包括以上所有部件,请以产品实际销售配置为准。

产品保修卡

产品信息

产品型号： _____

S/N号码： _____

用户信息

用户姓名： _____ 联系电话： _____

用户地址： _____

销售信息

购买日期： _____ 发票号码： _____

销售单位： _____

联系电话： _____ 销售地址： _____