

Q-Client Builder Base Quickstart

Thank you for your purchase of the Quantum Integration Builder Base developer client. This device is designed to work with the Quantum Q-Server. See the Q-Client user guide at <http://quantumintegrate.com/> or use the QR code on the back of this box.

Package contains:

- (1) Builder Base
- (1) USB power cable

Gracias por la compra del cliente de desarrollador de Quantum Integration Builder Base. Este dispositivo está diseñado para funcionar con el Quantum Q-Server. Consulte la guía del usuario de Q-Client en <http://quantumintegrate.com/> o use el código QR en la parte posterior de este cuadro.

Merci d'avoir acheté le client développeur de Quantum Integration Builder Base. Cet appareil est conçu pour fonctionner avec le

Q-Client Builder Base Quickstart

Quantum Q-Server. Consultez le manuel d'utilisation de Q-Client à l'adresse <http://quantumintegrate.com/> ou utilisez le code QR au verso de cette zone.

Quantum Integration Builder Base開発者クライアントをお買い上げいただきありがとうございます。このデバイスは、Quantum Q-Serverと連携するように設計されています。<http://quantumintegrate.com/>でQ-Clientのユーザーガイドを参照するか、このボックスの裏側にあるQRコードを使用してください。

感谢您购买Quantum Integration Builder Base开发人员客户端。该设备旨在与Quantum Q-Server配合使用。请参阅<http://quantumintegrate.com/>上的Q-Client用户指南或使用此框背面的QR代码。

FCC Statement

15.19

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

15.21

Note: The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

15.105(b)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

RF Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

IC Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC 20cm RF

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

Cet équipement est conforme aux limites d' exposition aux rayonnements de la IC établies pour un environnement non contrôlé. Cet équipement doit être installé et fonctionner à au moins 20 cm de distance d' un radiateur ou de votre corps.