

— **HYPERSONIC** —
User Manual

True Wireless Earphones

Pairing&Connection

The HYPERSONIC's left and right earphones can be used together in stereo or used individually in mono.

Dual Mode

As soon as take out both earphones at the same time from charging box, they will power on automatically with voice prompts "Power on". Soon later, L&R earphones pair each other automatically and voice prompts "Connected", "Left channel/Right channel"; The main device (L) led indicator blinks in blue and white, sub-device led indicator blinks in blue color only, 7 seconds once.

(For the first time, connecting both earphones takes about 15-20 seconds)

Single Mode

If only take out left or right earphone from charging box ,it will power on automatically with voice prompts "Power on ", "Pairing mode" ,L/R earphone led indicator blink in blue and white color.

When you hear voice prompts "Pairing mode", it means both earphones start connecting with cell phone. Activate your cell phone bluetooth and search " HYPERSONIC ". Enter connection password "0000", voice prompts "Pairing successful", it means both earphones connected cell phone successfully. After paired, L earphone led indicator blink in blue and white color, R earphone led indicator blink in blue 7 seconds once.

Start to enjoy music after you finished above steps.

Operation

- Both earphones have one button each. While playing music, press the button on either side once to pause/play a song, press it twice to go to the next track, and press it three times to go to the previous track.
Press the either earphones's button for one second to turn on your device's speech recognition program (Such as Siri, Cortana, Google Now, etc.).



- If you receive a phone call while music is playing, the track will pause automatically. Press the button on either side once to accept the call, and press it twice to reject the call.
While in a call, press the button on either side twice to switch the speaker to your cell phone.



- Power off: press and hold either earphone's button for a few seconds until you hear a beep and the voice prompt "Power off." The other earphone will turn off automatically.
If not placed in the charging box, turning the devices on again will require pressing both earphones' buttons for a few seconds until you hear the voice prompt "Power on."



Reconnection (Last memory)

- When you take out the devices from charging box and cell phone bluetooth is activated, they reconnect automatically.
If only power on left earphone(Master device), it reconnects automatically.
If only power on right earphone (sub-device), led indicator blinks in blue & white color and switches to pairing mode.
- When the devices are out of Bluetooth connect distance,it will be disconnected automatically.
If back into the Bluetooth connect distance in 1min,it reconnects with cell phone automatically.
If more than 1min,press the button of any device(L/R device) once to reconnect with the cell phone.

Delete paired device function

- Under power off situation,long press both left and right earphone power buttons,until the blue and white led indicator blinks to clear the pairing record,after the led indicator flash the white and blue light three times quickly ,delete the pairing record successfully .This operation will take about 10s-20s.
- The function can be operated when the earbuds with pairing issue ,after the operation ,power on both of earphones at the same time , L&R earphones paired automatically .

Charging status display

- White LED indicators on earphones lights on when it is charging by the charging box ; and off when full charged .
- If take out the earphones from the charging box, White LED indicator on charging box blinks once only, it means the charging box is low power and can not recharge the earphones, please recharge the charging box as soon as possible.
- As soon as put the earphones into charging box, they power off automatically and start charging. (Stop playing music automatically).
- White LED indicator on charging box displays power status while recharging :

0%-25%	Blinks once every two seconds
25%-50%	Blinks twice every two seconds
50%-75%	Blinks three times every two seconds
75%-100%	Blinks four times every two seconds
Fully Charged	Stays on

Earphones working status and prompts

- Master device: Left channel, call, music
Sub-device: Right channel, music,call
Pair name:HYPERSONIC
Pair Password: 0000
Exceed bluetooth connection distance or not to connect within 10 minutes, earphones power off automatically.
IOS7.0, Android5.0 and above systems, left earphone(Master device) displays remaining battery power
- Earphones prompts:
Power on
Pairing mode
Connected
Left channel/Right channel
Pairing successful
Low battery
Power off

If the earphones do not connect

- Hold both buttons down until you hear "Power off".
- Hold both buttons again and you will hear "power on" but do not let go until you hear "Pairing mode", and the earphones will have flashing blue and white lights, and after a few seconds, "Pairing successful, left channel right channel" This means that the both earphones are successfully connected to each other.
- You will hear "Pairing mode" again, and that is for the earphones to connect to your device. Select "HYPERSONIC" from your device's list and enter the password "0000" (if needed) and wait for the voice prompt "Pairing successful" and the earphones are ready for use.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.