

1. Remove protective film from headphones then place headphones in the charging case

Insert the Left and Right headphones into the charging case for 5 minutes to recharge.

TIP: This will wake up the HyperSonic from sleep mode.

Notice the pulsing blue light on the headphones when properly docked. You may occasionally need to push or clean (with cotton swab) the charging pins in the charging case to dislodge any dust or debris that inhibits them from charging your earbuds.

2. Put headphones in your ear

Remove the Left and Right HyperSonic headphones from the charging case, Right headphones will flash blue and white. Place them in your ears.

You will hear:  
"HyperSonic is Connected"  
"Left Channel/Right Channel"  
"HyperSonic in Pairing Mode"

3. Pair HyperSonic to your phone (or other Bluetooth device)

Once you hear "HyperSonic in Pairing Mode", it is ready to be discovered by your Bluetooth enabled phone or device.

Turn on Bluetooth on your device. Select "LinearFlux HyperSonic" in your Bluetooth devices list. Left headphone will prompt "HyperSonic Pairing Successful".

TIP: If pairing is unsuccessful, repeat steps 1 – 3.

Congratulations! You are now ready to use your HyperSonic headphones.

HyperSonic RECHARGING

Place HyperSonic into the charging case.

As long as your case is charged, the headphones will display a pulsing blue light while charging is in progress. The blue light will turn off after the headphones are fully charged. You may need to push or clean (with cotton swab) the charging pins in the charging case to dislodge any dust or debris.

Verifying HyperSonic earbuds battery level

1. On your phone's status bar when paired.  
2. Voice prompts will indicate "Low Battery" when headphones have less than 10% charge left.

RECHARGING HYPERSONIC 360

We recommend fully recharging the HyperSonic 360 prior to use. Use the provided microUSB, or USB-C cable (sold separately) to recharge the HyperSonic 360. We recommend using a 12Watt, or higher, wall charger. Using a QC or PD type wall charger will recharge the HyperSonic 360 significantly faster. The HyperSonic 360 is fully recharged once the LED display shows 100 percent.

Simultaneously charge the HyperSonic 360 and a Qi wireless compatible smartphone.

CHARGING YOUR SMARTPHONE

You can use either the HyperSonic 360 USB-A, or USB-C, port to recharge your phone or tablet. The HyperSonic 360 USB-C port can recharge compatible smartphones at blazing fast speeds. The display will indicate "HYPER" when charging, with compatible phones, at hyper-fast speed.

HyperCharging iOS/Android devices:

Use the USB-A port for "FAST" charging, For hyper-fast charging, use the HyperSonic 360 USB-C port using a LinearFlux HyperDigital USB-C to Lightning cable (sold separately).

The HyperSonic 360 features auto-detection circuitry to optimize the charge going into your Apple or Android device. *Note: due to the HyperCharging, heat buildup may occur and we recommend that your smartphone be properly ventilated. In addition, don't be alarmed if you hear a faint noise when the HyperSonic 360 is utilizing it's exclusive HyperCharging technology.*

MAGNETIC ATTACHMENT

Remove any protective cover on the back of your phone.

Install the provided HyperSonic 360 alignment plates (quantity of 2) to the back of your phone using the provided template. See template. Align the plates so they do not interfere with any functions on your phone such as the camera(s) or finger print sensor. Before attaching the alignment plates, wipe clean the back of your phone using a damp cloth (or the provided alcohol wipe) and then wipe dry. Peel the protective backing from the alignment plates to expose the adhesive. Now use the template to adhere the plates to the back of your phone. Allow the plate adhesive to set for about 15 minutes before reinstalling your phone cover. Now you can wireless charge and magnetically attach the HyperSonic 360 to the back of your phone. To start wirelessly charging press the power button on the HyperSonic 360.

TIPS & TRICKS

To keep your HyperSonic 360 operating at its highest performance, we recommend the following:

- Keep your HyperSonic 360 dry and away from moisture and corrosive materials. When charging your smartphone, keep the HyperSonic 360 in a well ventilated area.
- Do not wash the HyperCharger 360 with harsh chemicals, soaps or detergents. Wipe the case with a soft, water-damp-ened cloth.
- Recharge your HyperSonic 360 once every three months when not in use. Charge the HyperSonic 360 to 90% if you plan on putting it away for an extended period.
- HyperSonic headphones feature an IPX6 water resistant rating and are designed to handle rain, sweat, and outdoor activities. However, they are NOT intended for swimming, showering or exposure to pool or ocean water. In case of exposure to salted or chlorinated water, rinse the headphones gently with fresh water and air dry before use. **WARNING: CHARGING CASE IS NOT WATER RESISTANT! WARRANTY WILL BE VOIDED IF MOISTURE GETS INSIDE THE CASE CIRCUITRY.**
- Fully dry off the HyperSonic headphones before placing in the charging case to avoid any damage to the case electronics.

For setup tutorials, scan the QR code or please visit Youtube.com/LinearFlux

BUTTON FUNCTIONS

LEFT

Play / Pause: 1 Tap  
Track Back: 2 Taps  
Volume Down: 3 Taps  
Answer Call: 1 Tap  
Hang up Call: 2 Taps  
Reject Call: Tap & hold 2 sec  
 Siri/Google/Alexa: Tap & hold 2 sec  
Power On: Tap & hold 2 sec  
Power Off: Tap & hold 5 sec

RIGHT

Play / Pause: 1 Tap  
Track Fwd: 2 Taps  
Volume Up: 3 Taps  
Answer Call: 1 Tap  
Hang up Call: 2 Taps  
Reject Call: Tap & hold 2 sec  
 Siri/Google/Alexa: Tap & hold 2 sec  
Power On: Tap & hold 2 sec  
Power Off: Tap & hold 5 sec

VOICE PROMPTS

"HyperSonic Powering On": Power ON  
"HyperSonic is Connected": Headphones synced to each other  
"HyperSonic in Pairing Mode": HyperSonic is ready to connect to Bluetooth device  
"HyperSonic Pairing Successful": HyperSonic is paired to device  
"Left Channel": Left headphone  
"Right Channel": Right headphone  
"Incoming Call": Incoming call  
"Call Ended": Call ended  
"Call Rejected": Call rejected  
"Disconnected": Left and Right headphones are disconnected  
"Low Battery": Headphones battery level is low  
"HyperSonic Powered Off": Power OFF

EARBUD FIT

ear tips

HyperSonic headphones are preinstalled with a large ear tip  
PRO TIP: have the largest ear-tip you can fit inside your ear canal for optimum HD sound quality.

Hold the headphone vertical to the ear.  
Twist in the ear canal to lock in the ear tip.

If the HyperSonic does not feel secure enough, please try going up or down an ear-tip size for the best fit and proper seal to optimize your Hyper Definition 3D sound experience.

TROUBLE SHOOTING

For more troubleshooting tips, please visit [www.LINEARFLUX.com](http://www.LINEARFLUX.com) and visit our LINEARFLUX Youtube page ([www.youtube.com/LinearFlux](http://www.youtube.com/LinearFlux)).

Can you hear music from one headphone but not the other? Reset and ReSync the Left and Right headphones:

1. Place both headphones into the charging case. Make sure BOTH headphones have a pulsing blue light.

2. Tap and hold on both headphones for 5 seconds while they are docked in the case until they BOTH flash blue and white.

3. Take both headphones out of the charging case at the SAME time and hold them directly touching each other to initiate Left and Right headphone connection. ALERT: If the earbuds do not touch each other they will NOT sync properly!

Note: To avoid having to reconnect the headphones. Return the headphones in the case properly and make sure the LED on each headphone pulses blue upon docking. See "Charging Headphones".

SONIC LINK BACK MEMORY: The HyperSonic can remember up to 2 of your previously paired Bluetooth devices. Insert your HyperSonic earbuds into the case. To re-pair your HyperSonic to a previously paired device, then turn OFF the bluetooth from the most recently paired device. Now, turn-ON the Bluetooth of your previously paired device. Take off the HyperSonic earbuds from the case. The earbuds will search for all the previously paired devices and will automatically pair to your device. Please note that this feature will not work whenever the HyperSonic earbuds are ReSync as previously described.

SAFETY

- The product contains small, detachable parts, which may cause choking, personal injury, or death, especially in children. Please exercise care in the use and handling of small parts, and keep them away from children under 4 years of age.
- Do not use your headphones in any environment where a failure to hear surrounding sounds may be dangerous.
- Do not use your headphones while driving or operating machinery.
- Do not modify the product. Do not disassemble or attempt to service this product.
- This is not a Children's Product and is not intended for use by children under 14 years old.
- This product is safe under normal and reasonably foreseeable operating conditions. If product is operating improperly, contact LinearFlux support. Product must be returned to LinearFlux for any service or repair.

Keep HyperSonic headphones away from devices and objects that could be damaged or impacted by magnetic fields.

HyperSonic magnets may interfere with certain medical devices.

WARRANTY

HyperSonic headphones are warranted to be free from defects in workmanship and material for one (1) full year from date of purchase. Within this period, we will repair or replace any defective product at our sole discretion. Such remedy shall be our sole and exclusive remedy for any breach of warranty. This warranty does not cover failures due to abuse, accident, unauthorized alterations or repairs, or any use that is inconsistent with the instructions furnished by LinearFlux. Any replacement product will be warranted for the remainder of the original warranty period. This warranty does not affect any statutory rights that you may be entitled to. Keep a copy of your purchase receipt as proof of purchase.

Read all instructions and warnings prior to using this product. Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which damages you ("Purchaser"), and not LinearFlux USA Incorporated ("Manufacturer") are responsible.

LEGAL

This headphone is meant for use only in conjunction with the appropriate mobile device. Please consult your device packaging to determine whether this headphone is compatible with your particular mobile device. Manufacturer is not responsible for any damages to any mobile device incurred through the use of this product.

Manufacturer shall not in any way be liable to you or to any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this headphone in conjunction with any device or accessory other than the appropriate mobile device for which this headphone is designed. Manufacturer will not be responsible for any damages you or any third party may suffer as a result of misuse of this headphone as outlined above. If you are responsible for headphone use with an unintended mobile device and damages result from such use, you agree to indemnify Manufacturer for any resulting injuries to any third parties).

US COMPLIANCE

FCC Information FCC ID: 2AT06-HYPERSONIC1

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does use harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your product. Changes or modifications not expressly by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

EU COMPLIANCE

LINEARFLUX hereby declares that this device is in compliance with the requirements.

The symbol above indicates that this product and/or battery should not be disposed of with household waste. When you decide to dispose of this product and/or its battery, do so in accordance with local environmental law and guidelines.

LICENSED UNDER FREEBIT PATENTS EP2434777, US8976995 AND CORRESPONDING INTERNATIONAL PATENTS

Headphone and headphone case Information

Please take care of your headphones/case. Do not disassemble, burn, puncture, crush or bend your headphone/case. Improper operation of the headphone/case may produce smoke. In such an event, ventilate the area. Extinguish any flames with carbon dioxide, dry-powder fire extinguisher, or cover with sand or mud. Take care to avoid conditions of excessive moisture for prolonged periods and do not immerse. Do not expose to temperature above 50°C/122°F. Charge headphone/case fully before storage or if stored for longer than three months.

Disposal

At the end of its life, please take care to dispose of this product responsibly. Electronic products and headphones contain materials that can be harmful to the environment. Please do not dispose to unsorted waste. Take your electronic waste to a designated collection recycling facility to be recycled proper ty. Your local council authority will be able to tell you where your nearest facilities are. There may be one at your local supermarket.

All rights reserved 2021. [www.LinearFlux.com](http://www.LinearFlux.com) Designed by LinearFlux in California. Assembled in China.

For setup tutorials, scan the QR code or please visit Youtube.com/LinearFlux

CONTACT US

We want you to be satisfied with your HyperSonic headphones, please contact us if you have any questions/concerns and we'll take care of you! You can contact our US-based customer support team:

Website: [www.LINEARFLUX.com](http://www.LINEARFLUX.com)  
Email: [info@linearflux.com](mailto:info@linearflux.com)  
Visit [LINEARFLUX.COM](http://LINEARFLUX.COM) for return or exchange details.

For setup tutorials, scan the QR code or please visit Youtube.com/LinearFlux

HYPERSONIC

USER MANUAL

LINEARFLUX

EDITION 360 V1