



BOOMIE INC. | NEW YORK CITY
CONFIDENTIAL PRODUCTION ARTWORK

DATE:09.04.18

MODEL# ALL MODELS
AMPMAM MANUAL

PROCESSES

- DIELINE
- DIE CUT
- DIE FOLD
- 0-100% K

PAPER I SUBSTRAIT

SCALE: 100%
SIZE: W H
PAPER STOCK: 80G Art Paper
INK: GRAYSCALE
W 31.7488 cm X H 6.985 cm

FRONT



PORTABLE-WIRELESS SPEAKER



User manual
AUX-IN

Use the included 2-in-1 micro
USB cable to connect the speaker
to your mobile phone. Press the "Power"
button to enter AUX input mode.

USB/TF Card Music Play Mode
Insert a TF card or USB flash drive
to play music. Press the Power button
to pause.

Specifications
Transmission Distance:
About 30 feet (10 meters)
Product size: 90x70x147mm



LED Indicators
Red Light
Blue Light

Status
Low Power
Full Power

Included in the box:
2-in-1 charging cable
Speaker

Compatible with: Smartphones and mobile devices,
laptops, PC's and more.
Thanks for choosing the Boomie Ampman Bluetooth Speaker!
Read this quick user guide carefully to get to know your
newest hero.

Charge the speaker
before using the speaker, charge it by connecting it to
powered device Via-the micro USB cable. The LED light will
blink while it's charging.

Turn On/Off - Press the ON/Off button to control the speaker.
Bluetooth Connection
Turn the speaker on and then search for "Ampman" in the list
of Bluetooth devices on your phone or computer. When the
speaker is successfully connected, you can play music up to
30 FT away.

Play Music
Select songs, using your mobile device or other bluetooth
device.
Press the Play and pause button to control music.
Press the Play and Pause button to control music.
Press and hold V+ or V- to control the volume.
Quickly press the V+ or V- to play the next or previous song
in your playlist.

Using the MIC
If you receive a phone call while your phone is connected to
the speaker, you can press the answer button to answer the call.
Quickly press the Answer button 2 times to end or reject a call.
Quickly press the Answer key 2 times to redial.

Please note:
The speaker will pause the music during a call and restart it
when you end the call. To change the BT-TF card -USB-AUX-in mode,
press the Power button.
*All trademarks and copyrights are the property of the respective companies.
Made in China.



BACK



HAUT-PARLEUR PORTABLE-MINI SANS FIL



MANUEL DE L'UTILISATEUR

Utilisez le câble micro USB 2-en-1
(incluse) pour connecter le haut-parleur
à votre appareil mobile. Appuyez sur
le bouton M pour basculer en mode entrée
AUX.

Mode musique via USB ou carte TF/SD
Insérez une carte TF/SD ou une clé
USB pour écouter de la musique.
Appuyez sur le bouton Power pour mettre
la musique en pause.

Specifications Techniques
Distance de transmission:
Environ 10 mètres (30 FT)
Dimension du produit: 90x70x147mm



LED Indicators
Red Light
Blue Light

Status
Low Power
Full Power

Included in the box:
2-in-1 charging cable
Speaker

Compatible avec: téléphones, intelligents, appareils mobiles, portables,
PC et plus.
Merci d'avoir choisi le haut-parleur Bluetooth Boomie Ampman! Veuillez
lire attentivement ce guide d'utilisation pour apprendre à utiliser votre nouveau
gadget électronique.

Charger le haut-parleur
Avant d'utiliser le haut-parleur, chargez-le- en le branchant au port USB
d'un ordinateur ou d'un chargeur mural et en utilisant le câble micro USB
inclus. Le voyant DEL clignotera pendant le chargement.

Allumer/Éteindre - Appuyez sur le bouton ON/OFF pour contrôler le haut-parleur.
Connexion Bluetooth
Mettez le haut-parleur sous tension et recherchez le périphérique <<amp;ampman>>
dans la liste des appareils Bluetooth disponibles sur votre appareil mobile ou
votre ordinateur. Lorsque le haut-parleur est connecté avec succès, vous pouvez
écouter de la musique sur une distance de 10 mètres

Écouter de la musique
Sélectionnez les chansons en utilisant votre appareil mobile ou un autre
périphérique Bluetooth.
Appuyez sur le bouton Play (Lecture) et Pause pour contrôler le volume sonore.
Appuyez et maintenez la pression sur les boutons V+ et V- pour contrôler
e volume sonore.
Appuyez brièvement sur les boutons V+ et V- pour passer à la chanson suivante
ou précédente de votre list d'écoute.

Utiliser le microphone
Si vous recevez un appel téléphonique alors b votre téléphone cellulaire est
connecté au haut-parleur, vous pouvez appuyer sur le bouton Answer
(Répondre) pour rappeler le dernier numéro composé.

Remarques importantes:
Le haut-parleur mettra la musique en pause automatiquement pendant un appel
téléphonique et la musique redémarrera lorsque vous mettrez fin à l'appel.
Pour basculer d'un mode à l'autre (BT, carte TF/SD, USB, AUX), appuyez sur
le bouton Power.
*Toute propriété intellectuelle, y compris mais sans limite, les marques de
commerce et les droits d'auteur, sont la propriété exclusive de leurs détenteurs
respectifs.
Made in China.



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.