 


Robot Vacuum Cleaner Instruction Manual

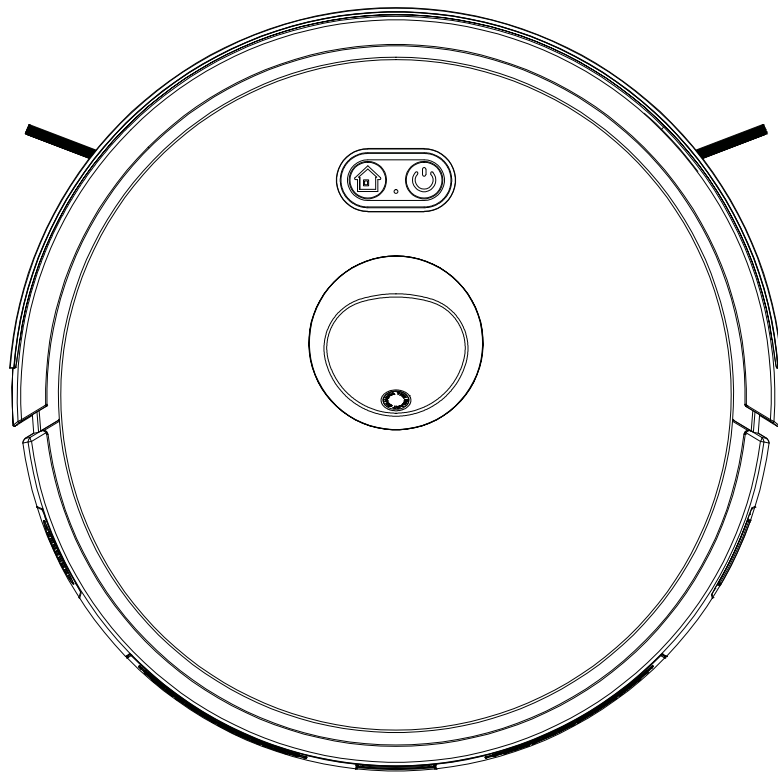

**Please read this manual carefully before
using the product and keep it safe.**

Safety Regulation

Before using this product, please read the following safety instructions and follow all the safety precautions.

Please read the instruction carefully. Please keep this instruction.

Any operation inconsistent with this instruction manual may cause damage to this product.

 
ATTENTION:

- 1、 Only authorized technicians can disassemble this product.
Users are not recommended to disassemble this product by themselves.
- 2、 Please use the original power adapter only. Other adapters may caused damage to this product.
- 3、 Do not touch wires, sockets or power adapters when your hands are wet.
- 4、 Do not use cloth curtains or body parts to roll into the product drive wheels.
- 5、 Do not place this product near cigarette butts, lighters and other smoldering fires.
- 6、 Please clean the product after charging.
- 7、 Do not bend wires excessively or place heavy objects and sharp objects on the machine.
- 8、 This product is an indoor household product. Do not use it outdoors.
- 9、 Do not sit on the product.
- 10、 Do not use this product in wet environment (e.g. bathroom).
- 11、 Before using this product, please remove all vulnerable items (e.g. glasses, lamps, etc.) on the ground as well as items (e.g. wires, paper sheets, curtains) that may entangle the side brushes, side wheels and brush brush.
- 12、 Do not put this product in a place where it is easy to fall (e.g. on desks and chairs).
- 13、 Please turn off the main power switch on the side of machine during transportation or not use for long time.
- 14、 Please carefully check whether the power adapter is connected to the socket before use.
- 15、 To prevent tripping, please inform other members of the house when this product works.
- 16、 Please empty the dust box before using this product when the dust box is full.
- 17、 The temperature used for this product is 0 to 40 degrees celsius.
- 18、 Do not use this product in high temperature environment
- 19、 Please remove the battery from the machine before the product is scrapped.
- 20、 Please make sure that this product is not powered on when removing the battery.
- 21、 Please recycle the discarded batteries safely.


Warning:

- 1、 Use only the original rechargeable battery and charging station specially equipped by the manufacturer. Non-rechargeable batteries are strictly prohibited, please refer to “product parameters” for battery specification information.
- 2、 It is forbidden to use products in environments with open flames or fragile objects.
- 3、 It is forbidden to use products in extremely hot (above 40 °C) or extremely cold (below 0 °C) weather.
- 4、 It is forbidden for human hair, clothes, fingers and other parts to approach the opening and operating parts of the product.
- 5、 It is forbidden to use products on wet or stagnant ground.
- 6、 It is forbidden for products to absorb any articles such as stones and waste paper that may clog products.
- 7、 It is prohibited for the product to absorb any inflammable substances, such as petrol, toner and toner for printers or photocopiers. It is also prohibited to use the product in clean areas with flammable items.the product in clean areas with flammable items.
- 8、 It is forbidden for products to absorb any burning articles, such as cigarettes, matches, ashes and other articles that may cause fire.
- 9、 It is forbidden to place articles at the suction port. Do not use the product when the suction port is blocked. Clean up dust, cotton wool, hair etc. at the suction port to ensure smooth air circulation at the suction port. Use the power cord carefully to avoid damage.
- 10、 It is forbidden to use the power cord to drag or pull the products and the product charging station. It is forbidden to use the power cord as a handle. It is forbidden to clamp the power cord in the crack of the door.
- 11、 It is forbidden to pull the power cord at sharp corners and corners.
- 12、 It is forbidden for the product to run on the power cord while the power cord should be far away from the heat source. Do not use damaged charging station. Even if the product has been severely damaged, burning of the product is prohibited, which may lead to explosion of the battery of the product.


Product Composition / Package Contents

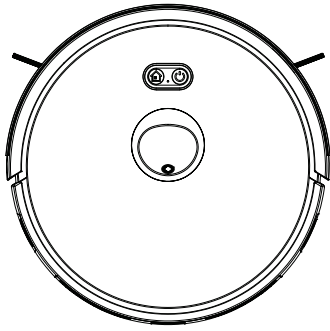


Host

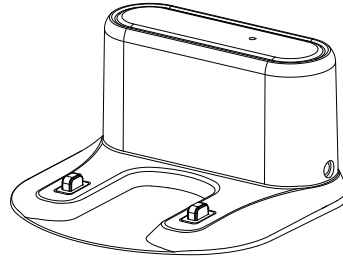 


Charging Base

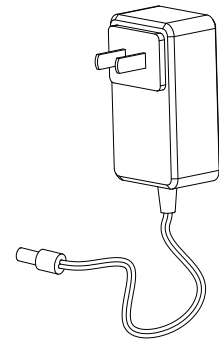 


Adaptor

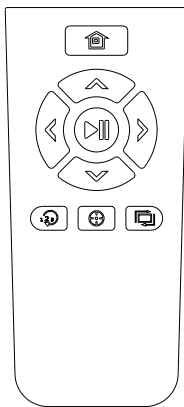 


Remote

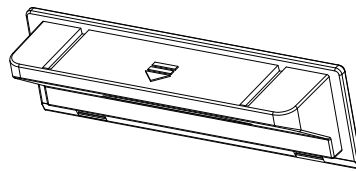 


DustBin Side Cover

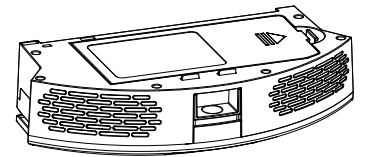 


Dust Bin

 

Cleaning Brush

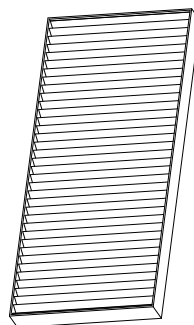 


HEPA Filter

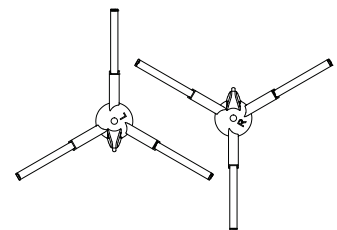 



Side Brush

Product Composition/ Part Name

 
TOP

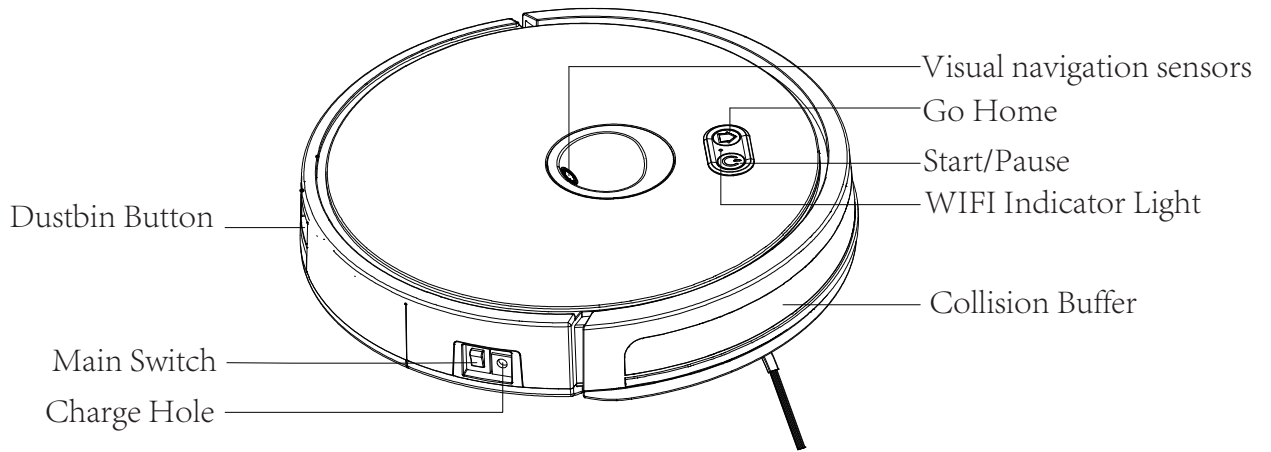


Bottom

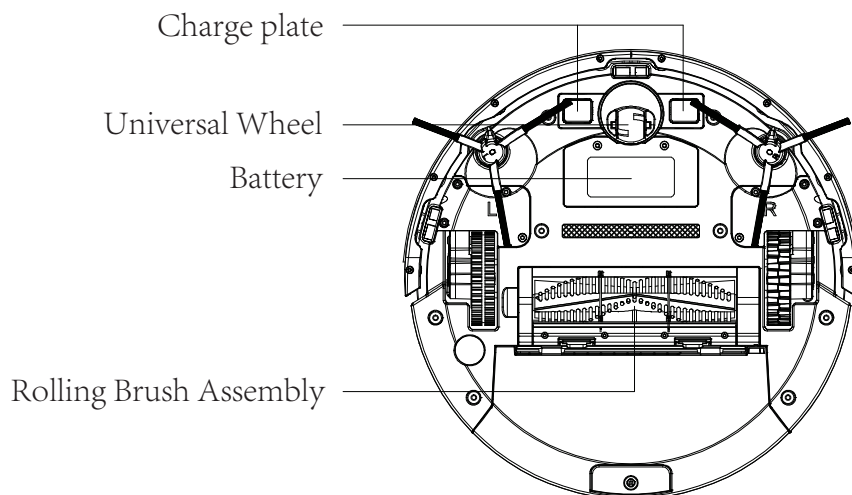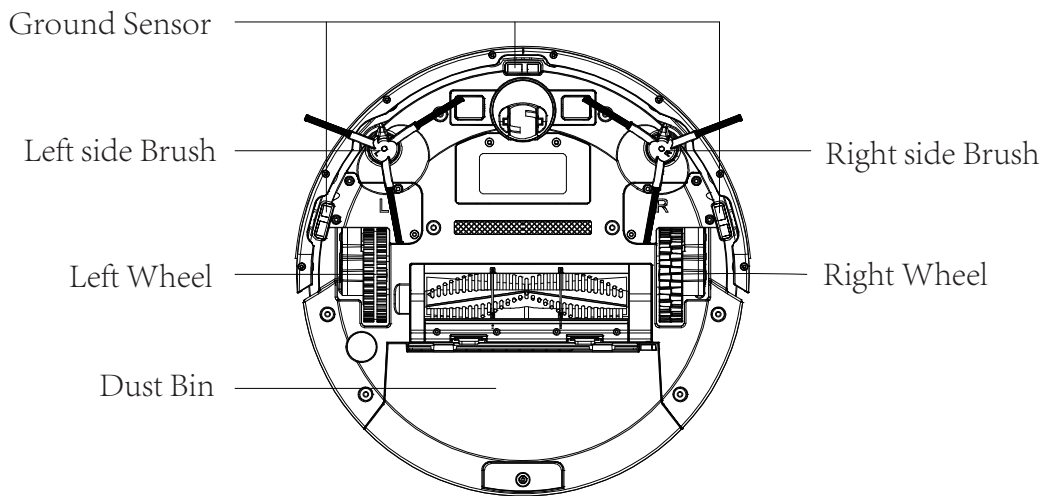  


Dust Bin

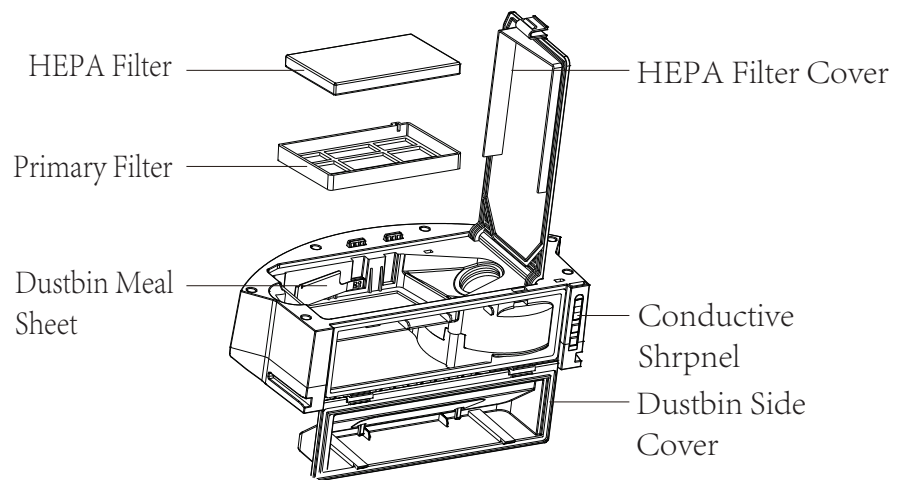 

Charging Station

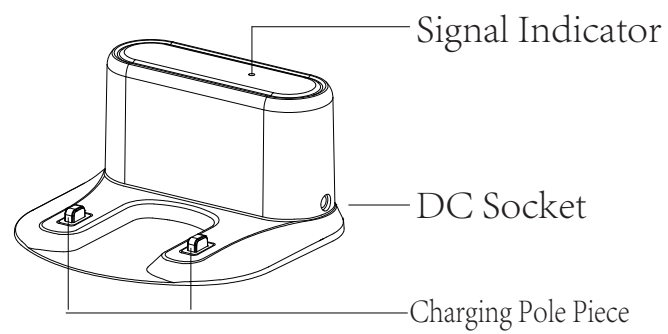 


Remote

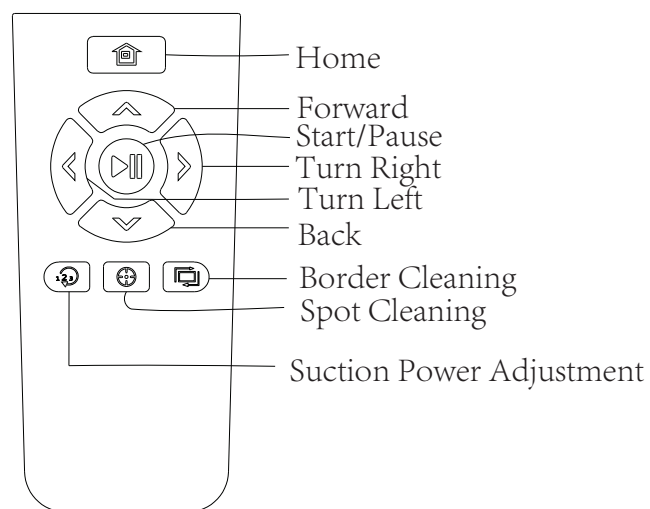 


Product Usage / Preparation

 
Assemble Dust Bin

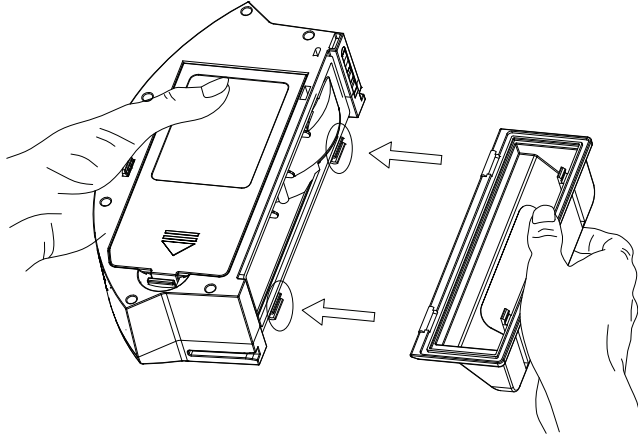

 - 1、 Assemble the dust bin side cover: Press the side cover firmly into specified position shown in above picture.

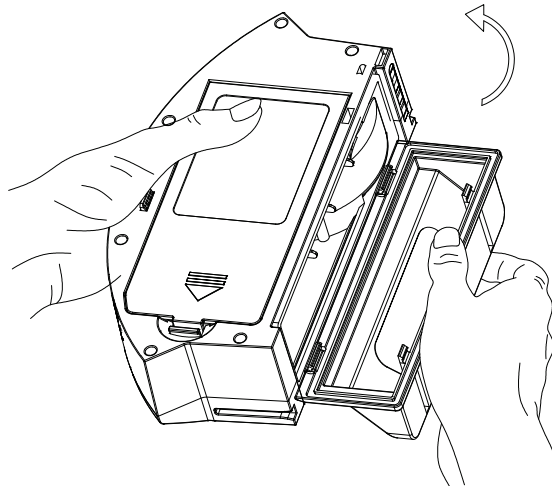

 
- 2、 Close the dust bin side cover: rotate the dust box side cover as shown by the arrow.

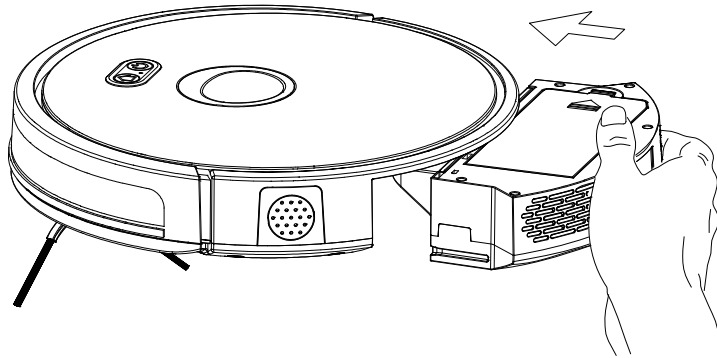

3、 Install the dust bin


Remove the Bumper Protective Strip

 Before using the robot, please remove the protective strip from the robot.

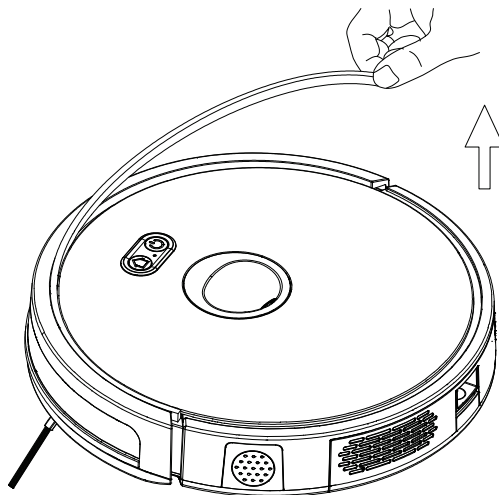


Product Use / Host Charging

 - 1、 Placing and charging: The charging station is against the wall and placed on a flat ground. Do not place articles within the range of 0.5m left and right and 1.5m ahead.

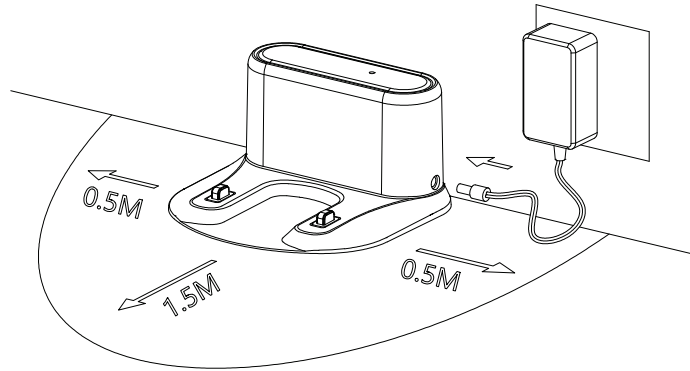


 - 2、 Connect the power supply.
- 3、 Installing side brush: Install the side brush according to the left and right (L/R).

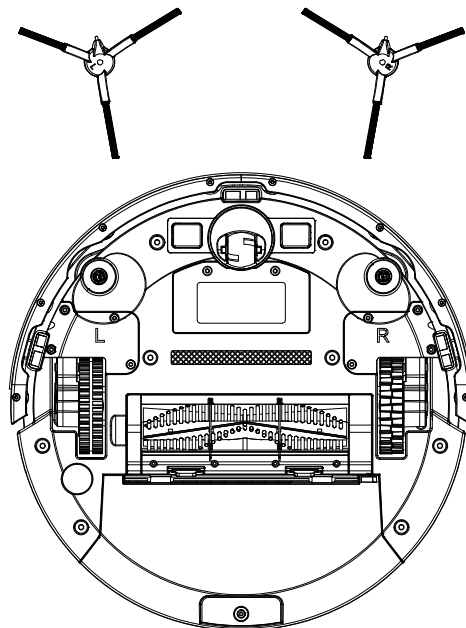

4、 Turn on Main Switch

 "I" means turn on machine "O" means turn off machine

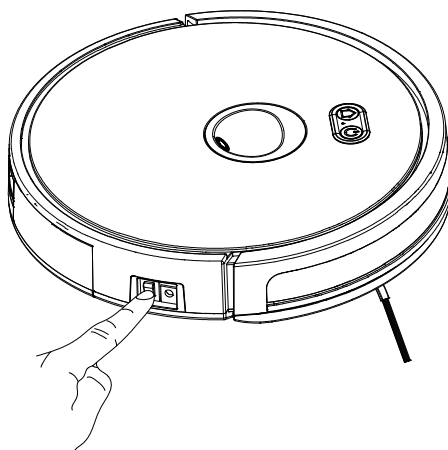


5、 Charge

Two ways to charge the robot:

1.Put the robot on charge base to charge.

2.Use power adaptor to charge

 (When charging, indication light flashes, indication light will turn to green color once charging completed.)

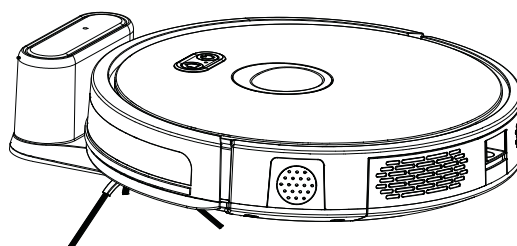

During the cleaning process, the host can sense that its power is insufficient and automatically start the recharging mode to find the charging station to recharge.

You can also command the host to start the recharging mode by the recharging button  on the remote controller, or by APP.

Charging attention:


- 1、 The charging station cannot be used in environments with strong reflection such as direct sunlight or nearby mirrors. If there is any object with strong reflection, please cover it 7cm from the bottom.
- 2、 In order to ensure the normal working hours of the host, please fully charge it before use. The charging time is about 6 hours.
- 3、 When charging, do not assemble the water tank assembly to the robot vacuum, so as to ensure the safety of charging and prevent wet mops from damaging the floor.

Product Use / Start Cleaning

According to different cleaning needs, the product has a variety of cleaning modes to choose from. You can start various cleaning modes through a host, remote control or app

Auto Cleaning

Applicable Scene: the robot makes planned cleaning according to environment surroundings then clean the whole house in a zigzag way.

Setting Method: Turn on the main switch, when the indicator light is on means the robot is powered on. Then press the button  on the robot for a short time, or press the "CLEAN" button on the remote controller, the robot starts auto cleaning.

Spot Cleaning

Applicable Scene: Suitable for the floor where garbage is concentrated, the robot cleans the floor in "spiral" route, cleaning completed, the robot will return to where it starts then stop cleaning.

Setting Method: Press the button  , on the remote to start spot cleaning.


Border Cleaning

Applicable Scene: For indoor border cleaning, the robot cleans along the perimeter of fixed objects (such as walls), and returns to the charging station after the border cleaning finished. (Except remote control / APP operations)

Setting Method: Press the button  , on the remote controller to start border cleaning.

Manual Control

Applicable Scene: Suitable for manual control cleaning.

Setting method: Click on the buttons  , on the remote controller to move forward and backward and turn right or left.

Suction Power Control


Applicable Scene: Adjust suction power according to different floor environments.

Setting method: Press the button  /APP control, press once, twice, three times corresponds to the suction power .

Attention: Suction adjustment can only be switched in automatic cleaning mode.

Product use / pause, wake up and shut down

Pause:

During the operation of the host, press the host button "Start" or the pause button  on the remote controller or app to pause the host.

Wake up:

Cleaning robot will go to sleeping mode after 10 minutes suspended and all the indicators will be off. You can use any button on the robot or APP to wake up cleaning robot.

Shut down:

 
After the host stops working, press the host button "start" for a few seconds and all the indicator lights off means that the host has been shut down.

After the host stop working, you can turn off the main switch manually, and all the indicator lights off means that the host has been shut down.


* After the host finish working, please keep the host on and charged for next time work.

Component maintenance / dust bin


A. Press the dust bin button to take out the dust bin

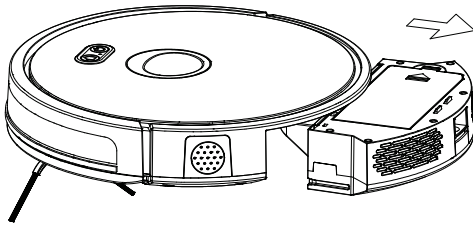

 
B. Open the dust bin side cover

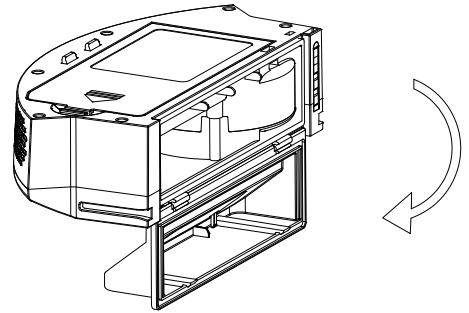

 
C. Dumping the rubbish

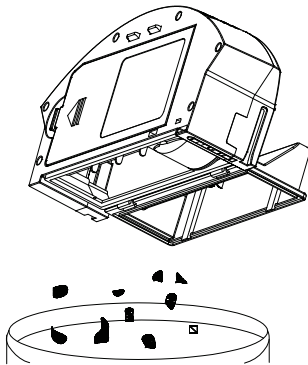

 
D. Open the HEPA Filter cover

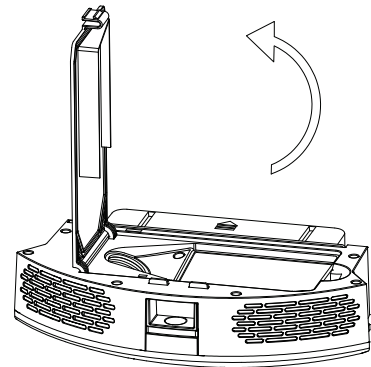

 
E. Open the HEPA filter cover and take out the HEPA filter and the primary filter. It is not recommended to wash the HEPA filter by water. Tap gently to remove the dust;

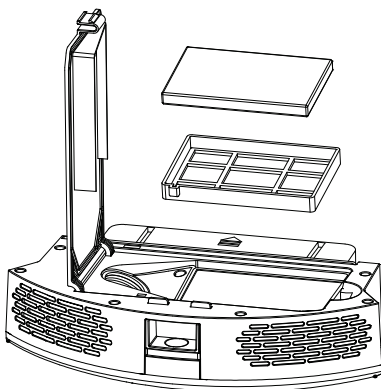

 F. Wash the primary Filter

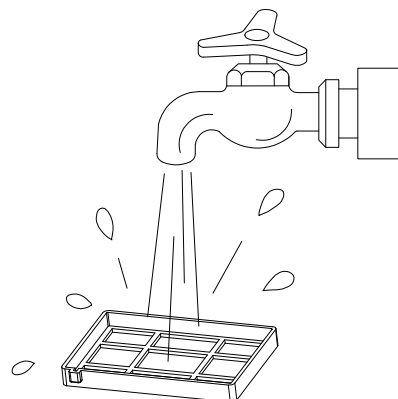


 G. Clean the dust bin by mop or brush,
Pay attention that dust bin can't wash

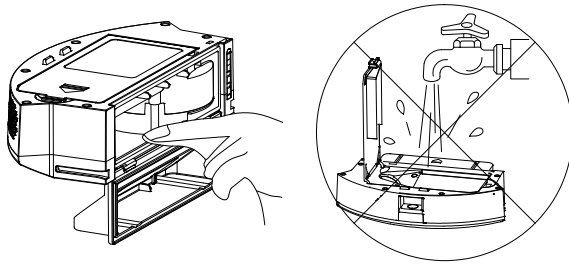

H. Dry the dust bin and filter assembly
and keep it dry to ensure its service life

 Attention: Please wash the pr-imary filter
every 15-30days, HEPA filter lifespan is
about 3month.

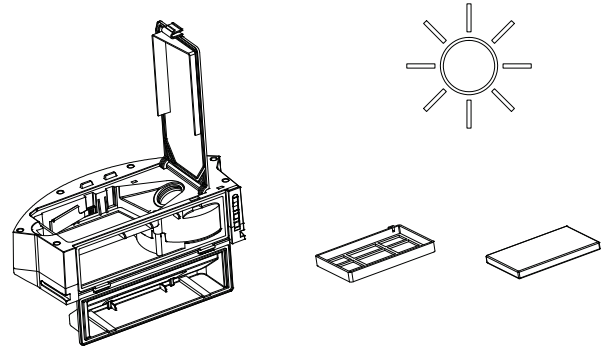

I. Replace the primary filter and the HEPA filter into the dust bin ;

Note: 1. Before installing the filters, please ensure that the HEPA filter and
the primary filter are in dry state.

2. Do not expose the HEPA filter and primary filter to the sun.

 
J. Close the dust bin cover and install the dust bin into the host

Attention : Dust bin can't wash


Component maintenance / roller brush and side brush

Clean the roller brush


1. Open the roller brush cover assembly

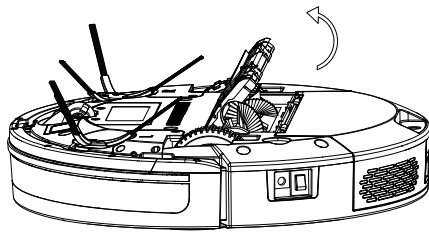

 2. Take out the roller brush

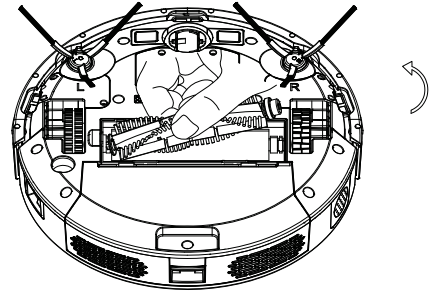


 3. Use the cleaning brush to cut off the hair tangled on the roller brush

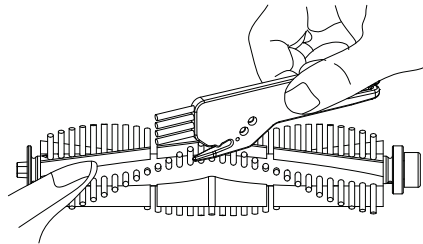

Clean the side brush

 
Take off the side brush, mop to clean.

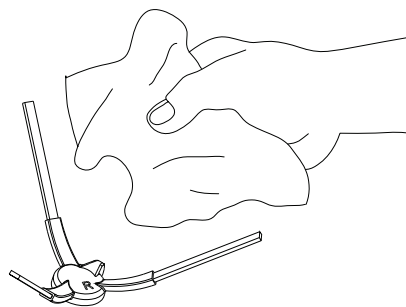


Component maintenance / charging pole pieces, ground sensors, drive wheels and universal wheel

Friendly Reminder:

 
The interior of the charging pole pieces, the ground sensors and the front bumper all contain sensitive electronic components. Please use dry mop to clean the above parts and do not use wet mop to prevent damage caused by water inflow.

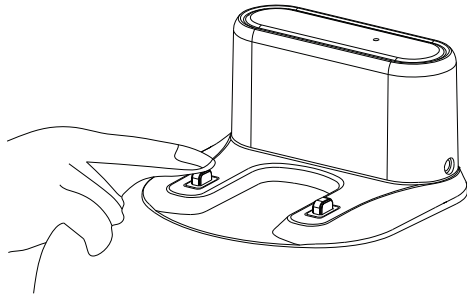


Clean the charging pole pieces

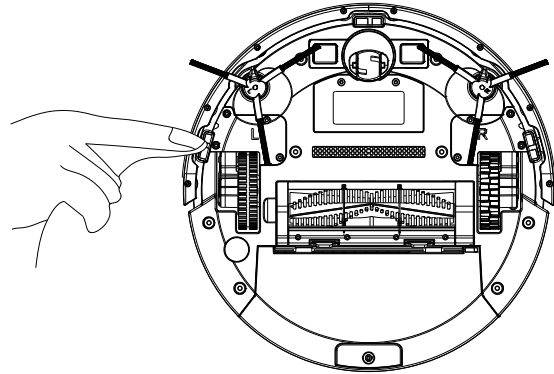 

Clean the ground sensors

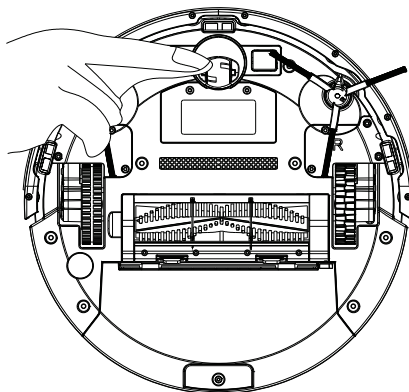 

Clean the universal wheel

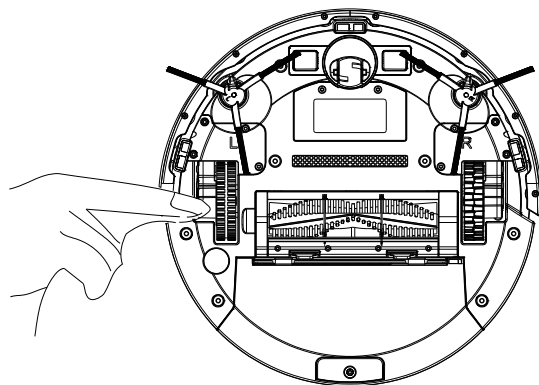 


Clean the drive wheels

*** If you do not use the product for a long time, please fully charge it before storing. Turn off the host and keep charging power to it every 3 months to prevent the battery from over discharge.**

*** If the battery is over discharged or is not used for a long time, the product may not be able to be charged. Please contact our company for after-sales maintenance. Do not disassemble it by yourself.**

*** The picture is for reference only, the actual item is the standard.**

Investigation of Common Problems

Prompt Tone	Cause of Failure	Solution
Lifting Condition	Robot suspended	Please put the robot back to the ground and press the start button again.
The robot is not yet ready	Press button  when ground or collision detection is effective	Please check whether the front bumper can be bounced normally, and the sensors cleaned
Low battery	Low Battery Reminder when robot in no charge base area	Please charge the robot manually
Low battery	Low Battery Reminder when robot in no charge base area	Please charge the robot manually
Battery is too low, will shut down soon	Low Battery Reminder when robot in no charge base area	Low Battery Reminder when robot in no charge base area
Charging problem	Charging station problem	Please check whether the connection between robot and charging pole pieces connected well, or use adaptor to charge directly.
Main brush get tangle, please clean main brush	Roller Brush get tangle	Please check whether the roller brush is twinned and clean up
Right wheel jammed, please clean right wheel	Wheel Jammed	Please check whether the wheel is entangled and clean up
Side brush jammed, please clean side brush	Side brush jammed	Please check whether the side brushes is twinned and clean up
Bumper sensors has been blocked	Bumper problem	Please check whether the front bumper can be bounced normally
Cliff detect sensor has been blocked	Ground sensor problem	Please check whether the cliff sensor get dirtied or be obscured
Vacuum Motor jammed, please clean it	Vacuum motor jammed	Please check whether the dust bin enter is blocked

When error occur during working, a voice prompt will be reported, please refer to following table to solve problems.

Product Parameter

The Host

Description	Parameter
Size	330*76mm
Battery	Lithium
Weight	about 2.7kg
Rated Voltage	14.8v
Rated Power	25W

Charging Station

Description	Parameter
Size	155*150*80mm
Input	19V
Output	19V 0.6A
Rated Power	11.4W
Rated frequency	50/60Hz

Component	Harmful Substances					
	Pb/Pb compound	Hg/Hg compound	Cd/Cd compound	Cr(VI)/ Cr(VI) compound	PBB	PBDE
Plastic	0	0	0	0	0	0
Hardware	×	0	0	0	0	0
Host circuit module	×	0	0	0	0	0
Electronic components	0	0	×	0	0	0
Battery	0	0	0	0	0	0
Plug power cord	×	0	0	0	0	0

Description: This form is prepared in accordance with the provisions of SJ/T 11364

0 Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in the current valid version of GB/T26572.
 × It indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement stipulated in the current effective version of GB/T26572, and there is no mature alternative in the industry, which meets the environmental protection requirements of the EU RoHS Directive.



The number in this logo indicates that the product has an environmental protection period of 10 years under normal use.

Executive standard: GB4706.1-2005 GB4706.7-2014
GB4343.1-2009GB17625.1-2012

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.