

MICRO EARPIECE RT10 USER MANUAL MONO EARBUD AUTO-PAIRING

Bluetooth 5.0

Make the most out of your commute with Driver, the new rechargeable mono earbud that provides safer hands-free calling than ever before. Featuring one-touch controls and automatic Bluetooth pairing, this sleek rechargeable earbud uses a familiar ergonomic design for a secure and comfortable fit. Its compact carrying case also provides extra battery life, so you can charge conveniently no matter where you are.


PACKAGE CONTENTS

- 1 SoundMates 5.0 Bluetooth Earbud (R)
- 1 Protective Charging Case
- 1 24 cm. Micro-USB Charging Cable
- User Manual

PRODUCT FEATURES

- Familiar Ergonomic In-Ear Design (R)
- Automatic Bluetooth Pairing
- Rechargeable Protective Charging Case
- Pocket-Sized, Great for Travel, Driving & Commuters
- Up to 3-Hour Playback of Crisp, Clear Sound

PRODUCT OVERVIEW & FUNCTIONS

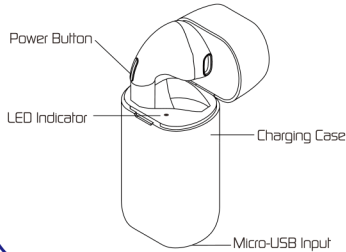

BLUETOOTH PAIRING INSTRUCTIONS

NOTE: Be sure to fully charge your Driver earbud before using for the first time.

- FIRST** - Remove your Driver earbud from the charging case.
- SECOND** - Keep the earbud within 10 meters of your smart device (for Bluetooth pairing only). Enable your device's Bluetooth function from your device's Settings menu. Select "Tzumi Driver" from the Bluetooth device list to pair the earbud to your device.
- THIRD** - You will hear "Device Connected." Your Driver earbud is now ready to use!

Once you have completed a successful device pairing for the first use, your device will automatically recognize and pair to the Driver going forward.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement, in portable exposure condition without restriction.

CHARGING YOUR SOUNDMATES

CHARGING THE CASE - Plug the standard Micro-USB charging cable into the port on the case and connect the USB head to a power source, such as an AC wall adapter or computer. The case's LED Indicator will flash RED while charging. When the LED stops flashing and the LED remains a solid red, the case is fully charged.

CHARGING THE EARBUD - Place the earbud into its slot in the charging case. The earbud LED indicator will turn GREEN. When the earbud is fully charged, the LED will turn off.

USING YOUR DRIVER EARBUD

ACTION	INSTRUCTIONS
POWER ON	Remove the earbud from its charging case. It will turn on and auto-connect to your device. Press and hold the Power button for 3 seconds.
POWER OFF	Press and hold the Power button for 3 seconds. Place the earbud back into its charging case.
PLAY/PAUSE	Click the power button while media is playing.
ANSWER OR END CALL	Click the power button during an incoming call to answer. Press during a call to hang up.
REFUSE CALL	Click the power button twice during an incoming call.
REDIAL	Double-click the power button.
ACTIVATE SIRI OR GOOGLE ASSISTANT	Click the power button three (3) times.

SPECIFICATIONS

Bluetooth Technology, Version 5.0
Working Distance: ≥20M
Composition Material: ABS
Battery (Earbud): 30 mAh, 3.7V
Battery (Charging Case): 140 mAh, 3.7V
Speaker: ø10.320
Frequency: 20 - 20KHz
Playback/Talking Time: Approx. 3 hours at max. volume
Standby Time: Approx. 40 hours
Signal-to-Noise Ratio (SNR): 100+/3 dB
Earbud Dimensions: 38.75 x 18.94 x 15.58 mm (1.5 x 0.7 x 0.6 in.)
Case Dimensions: 50.5 x 26 x 21 mm (2.0 x 1.0 x 0.8 in.)
Earbud Weight: 3.8 g (0.1 oz.)
Net Weight (Earbud + Case): 18 g (0.6 oz.)

SAFETY PRECAUTIONS

- Keep away from flammable objects and excessive heat.
- This is not a toy. Keep out of reach of children.
- Never attempt to disassemble or modify your SoundMates Driver earbud in any way. Doing so violates any warranty in place and may cause permanent damage to the unit.
- Contact the Customer Support team at tzumi.com/Support for assistance.