


说明书(骑马钉)

成品尺寸:156*102

128G双铜, 4C印刷+哑油

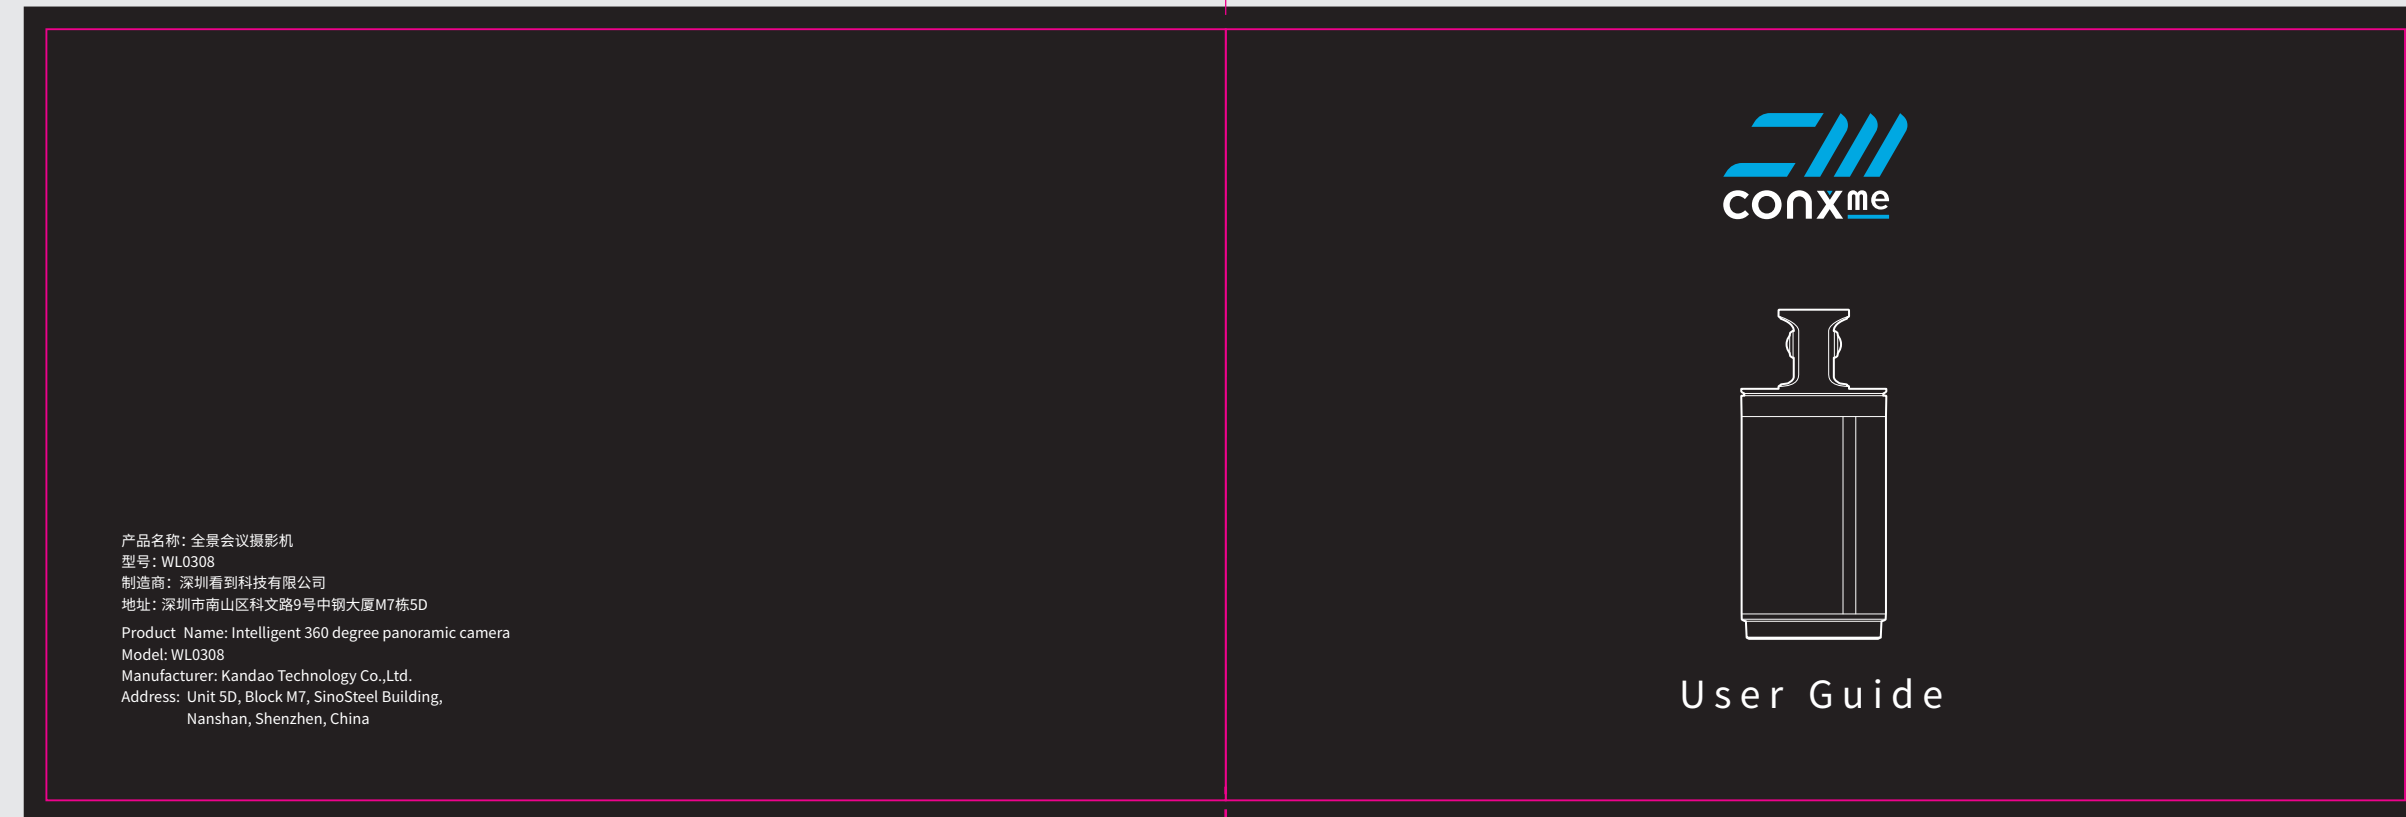

包装清单

● 全景会议摄像机 ● 12V 3.5A适配器 ● USB A公头转TYPE-C线 ● 说明书 ● 保修卡

声明

● 请仔细阅读说明。
● 请遵守所有警告。
● 请遵守所有限制。
● 请勿在电视机、电风扇、炉子或其他产品设备附近进行工作。
● 如果您使用非Kandao原装配件，可能会导致设备损坏。
● 请将所有的工作交给符合资质的人员处理，无论设备受到何种形式的损坏，例如电源线或镜头损坏，液体溅入或物理损坏。设备维修应由Kandao技术人员处理。

摄像机的安全

警告：如果您未能采取下列预防措施，则可能会导致火灾或造成严重财产损失，或者造成您的全景会议摄像机受损，使其摄像机和配件无法正常工作。请仔细阅读说明，确保安全。
● 请勿将本产品置于潮湿或不稳定的表面上，不要将此相机暴露在可能导致产品损坏或损坏的环境中。
● 请勿在摄像机附近使用易燃液体，如酒精、汽油、油漆等。请勿在摄像机附近使用明火。
● 请勿在摄像机附近使用任何可能导致火灾或爆炸的物品，如打火机、香烟、蜡烛等。
● 请勿在摄像机附近使用任何可能导致火灾或爆炸的物品，如打火机、香烟、蜡烛等。
● 请勿在摄像机附近使用任何可能导致火灾或爆炸的物品，如打火机、香烟、蜡烛等。
● 请勿在摄像机附近使用任何可能导致火灾或爆炸的物品，如打火机、香烟、蜡烛等。
● 请勿在摄像机附近使用任何可能导致火灾或爆炸的物品，如打火机、香烟、蜡烛等。

Packing List

● Camera ● 12V 3.5A Adapter ● USB ● User Guide ● Warranty Card

Statement

● Please read these instructions.
● Please pay attention to all warnings.
● Please follow all instructions.
● Never operate the device near heat sources such as radiators, heaters, stoves, or other heat generating equipment.
● Only use accessories and parts specified and provided by the manufacturer for Kandao.
● All maintenance should be conducted by the qualified personnel. Repairs are required in case of any type of damage to the device, for example, power cord or plug damage, liquid or object falling into the device, or repairs to the case or damages, or failure to work or falling.

Camera Security

Warning: If you fail to take the following precautions, you may be seriously injured or killed by the electric shock or fire disaster, or your Intelligent 360 degree panoramic camera may be damaged. Please check before using the camera and accessories to make sure they are intact. For security, only Kandao accessories that are provided with the device or genuine ones purchased can be used. Using any other parts, accessories, or chargers not recommended by Kandao may result in fire, electric shock, or casualties. Damage caused by the use of unauthorised accessories or parts is not covered by the warranty.
● Do not place or fit the product on an unstable surface or follow this precaution may cause the product to loosen or fall off, causing an accident or damage to the camera.
● When using external power supply connection, please observe all safety rules of third party power supply equipment.
● The lens of Intelligent 360 degree panoramic camera is made of glass. If the lens is damaged, be sure to handle carefully to avoid being scratched by the broken glass and keep out of the reach of children.
● The temperature of the camera may rise during operation, which is a normal phenomenon during use. In this case, turn off the camera and leave it to cool before trying to use it.
● This product is not a toy and you are solely responsible for complying with all local laws, regulations and restrictions.
● Please do not use the Intelligent 360 degree panoramic camera for unauthorized monitoring, candid shooting or in any way that violates personal privacy regulations. Normally, the use of cameras for such purposes is strictly prohibited and can result in significant liability and criminal proceedings against the operator.
● Precautions: do not put the camera in extremely cold or hot environment. Extremely cold or hot conditions may cause the camera to temporarily not work properly.
● Warning: there is no protection for the two lenses of the Intelligent 360 degree panoramic camera. If you do not pay attention, it is easy to form scratches. Avoid placing the lens on any surface. Lens scratches are not covered by the warranty.

部件介绍

● 摄像头组件 ● 控制单元 ● 环形灯带 ● 内置两个扬声器 ● 外接线接口处

模式切换 ● 减音量 ● 加音量 ● 麦克风 ● 静音键 ● DC接口 ● USB接口 ● RJ45接口

Parts Description

● Lens module ● Control unit ● Ring lamp ● Built-in speaker ● Extended cable port

Switch mode ● Vol+ ● Vol- ● Microphone ● Mute ● DC port ● USB port ● RJ45 port

连接使用

● 相机连接上12V 3.5A适配器。
● 按下镜头组件，镜头组件自动弹起，机器启动中，红灯常亮，自动完成蓝灯熄灭。
● 用USB线连接电脑和相机。
● 打开会议软件平台(SOCCO、小图灵会议系统、Skype、ZOOM等)，进入视频会议，此时蓝灯常亮。
● 可以通过相机控制音量大小和麦克风静音，以及会议模式切换。
● 会议完毕，按下镜头组件，10秒后相机关机完成。

固件升级

● 开机并连上电脑，长按模式键3秒。
● 相机重启，并进入U盘模式。
● 将固件拷贝到相机U盘。
● 关机重启，进入系统升级，蓝灯快闪，升级完成，蓝灯恢复常亮。

连接使用

● 相机连接上12V 3.5A适配器。
● 按下镜头组件，镜头组件自动弹起，机器启动中，红灯常亮，自动完成蓝灯熄灭。
● 用USB线连接电脑和相机。
● 打开会议软件平台(SOCCO、小图灵会议系统、Skype、ZOOM等)，进入视频会议，此时蓝灯常亮。
● 可以通过相机控制音量大小和麦克风静音，以及会议模式切换。
● 会议完毕，按下镜头组件，10秒后相机关机完成。

固件升级

● 开机并连上电脑，长按模式键3秒。
● 相机重启，并进入U盘模式。
● 将固件拷贝到相机U盘。
● 关机重启，进入系统升级，蓝灯快闪，升级完成，蓝灯恢复常亮。

Connection Information

● Get camera connected with 12V 3.5V adapter.
● Press lens module to start the camera, blue instruction light will blink slowly when camera is ready for work.
● Connect PC with camera via USB.
● Start video-conference platform(SOCCO, Skype, ZOOM, etc.) enter distant conference, instruction light would be steady blue.
● Click camera buttons to turn down/up volume, mute microphone, and switch modes.
● When conference is dismissed, press lens module to turn off camera.

Firmware update

● Turn on the camera and get it connected with PC, long hold mode button for 3 seconds.
● Camera would be restarted and enter USB mode.
● Copy firmwares to camera USB.
● Restart the camera to enter system update, when the update is done, blue light would turn to steady blue.

连接使用

● 相机连接上12V 3.5A适配器。
● 按下镜头组件，镜头组件自动弹起，机器启动中，红灯常亮，自动完成蓝灯熄灭。
● 用USB线连接电脑和相机。
● 打开会议软件平台(SOCCO、小图灵会议系统、Skype、ZOOM等)，进入视频会议，此时蓝灯常亮。
● 可以通过相机控制音量大小和麦克风静音，以及会议模式切换。
● 会议完毕，按下镜头组件，10秒后相机关机完成。

固件升级

● 开机并连上电脑，长按模式键3秒。
● 相机重启，并进入U盘模式。
● 将固件拷贝到相机U盘。
● 关机重启，进入系统升级，蓝灯快闪，升级完成，蓝灯恢复常亮。