 


# User's Guide

## Product Instruction

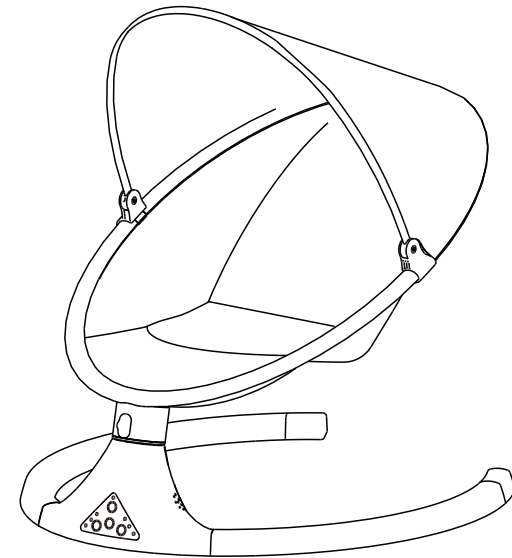

Unique Identifier  
Trade Name: BABY SWING CHAIR  
Model No.: BB005  
Responsible Party – U.S. Contact Information  
US Company Name: United Consulting Technology Services Co., Ltd.  
Address: 17800 CASTLETON ST STE 665 Industry, CA 91748 United States  
Telephone number or internet contact information: TEL: (626) 217-4022 /  
E-mail: David@uc-ts.com

**BB005**

To avoid any damages or accidents, please read this instruction carefully before installing and using.

# PRODUCT CATALOG

- 1.Catalog ..... 1
- 2.Knowing Product ..... 2
  - Product Specification ..... 2
  - Product Feature ..... 2
  - Parts Instruction ..... 3
  - Product Structure ..... 3
- 3.Using Product ..... 4
  - Washing ..... 4
  - Assembling ..... 4
  - Safety Belts ..... 5
  - Adaptor ..... 5
  - Functions ..... 6
  - Remote Control ..... 7
  - Panel ..... 7
- 4.Matters Need Attention..... 8

**Product Specification**

Product Name	Baby swing chair
Model Number	BB005
Input Voltage	100-240V/50/60Hz
Output Voltage	5V --- 1A
Applicable age	0-12 months
Standard	ASTM F2088, ASTM F963
Warning	Do not use the non-matching adaptor

**Product Feature**

This product has been certificated by ASTM F2088, ASTM F963

**Caution**

- 1) Practical in adult supervision.
- 2) No short circuit of power terminals.
- 3) Forbid to use the non-matching adaptor ,the input voltage of adaptor is 100-240V/50/60Hz
- 4) Keep the adaptor away from child while using.
- 5) Check the adaptor, accessory at regular preperiod. If you find any damages of parts please stop using.

 
## Parts Instruction

Please check the quantity of items;  
please contact the shop if there are any missing parts.

No.	Item	Quantity
A	Base frame	1
B	Seat frame	1
C	Canopy	1
Accessories: Manual x1, Adaptor x1, DC line x1, Remote control x1		

## Product Structure

Refer to the actual product.

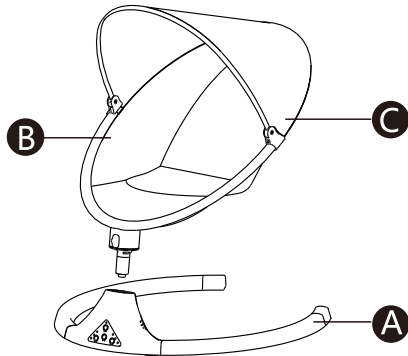

## WARNING

### FALL and STRANGULATION HAZARDS:

Infants have suffered head injuries falling from swings and have strangled in straps.

**FALL HAZARD:** Children have suffered head injuries falling from rockers.

- ALWAYS use restraints. Adjust to fit snugly.
  - STOP using product when infant attempts to climb out (approximately 9 months).
  - Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.
  - NEVER lift or carry baby in rocker.
  - STOP using product when baby starts trying to sit up or has reached [maximum weight not to exceed 20 lbs.], whichever comes first.
  - ALWAYS place rocker on floor. Never use on any elevated surface.
- SUFFOCATION HAZARD:** Babies have suffocated when seats tipped over on soft surfaces.
- NEVER use on a bed, sofa, cushion, or other soft surface.
  - Stay near and watch child during use. This product is not safe for unsupervised use or unattended sleep.



### FCC Compliance Statements

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The base bracket should be installed and operated with minimum distance 20cm between the radiator and your body.

## Remote control

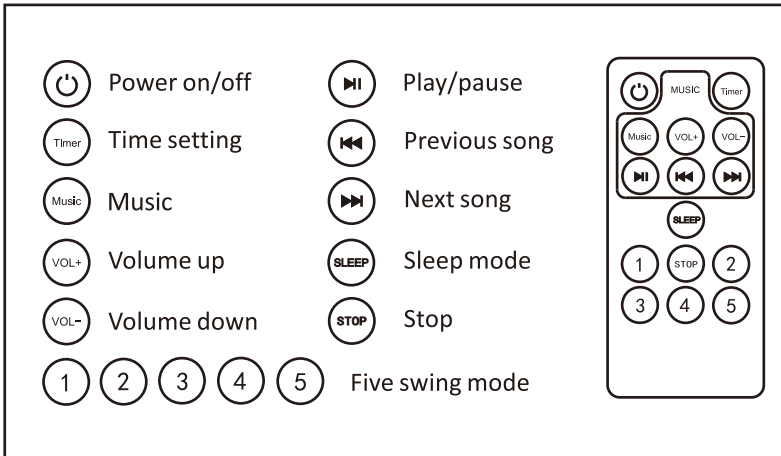

## Panel

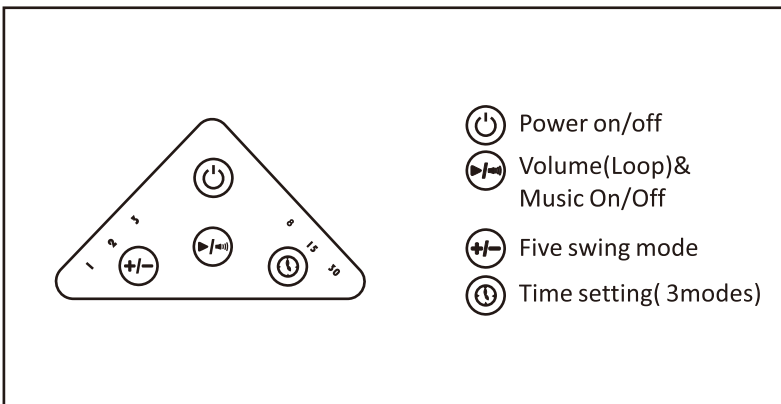 

## Washing

**WARNING!, THIS PRODUCT ONLY WASHED OR DISSEMBLING BY ADULTS!**

Seat Frame: Dismantle the seat and wash it by machine/hand washing in cold water

 
Toys: Hand washing/machine washing are available, soak them in cold water and put some soft detergent, then scrub with a brush.

Fabric: Lint, DO NOT WASH BY MACHINE.


Filling: Fire proof resin cotton. WARNING! DO NOT BLEACH, DEHYDRATION, DRYING.

## Assembling


Put the frame in the base option swing+awning

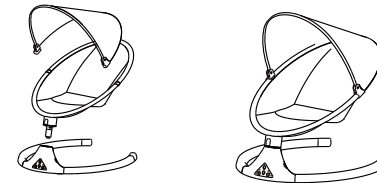

 Pull out the metal plate and pull up the seat when disassembling.

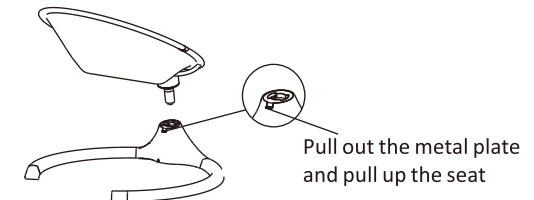


### Safety Belts

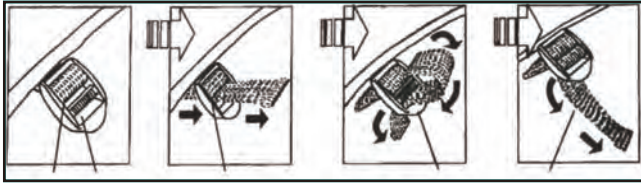 


Top hole Bottom hole Through the tape form the top hole first and then through the bottom hole, harden the tape

 Put the baby into the seat ,buckle up the seat belts

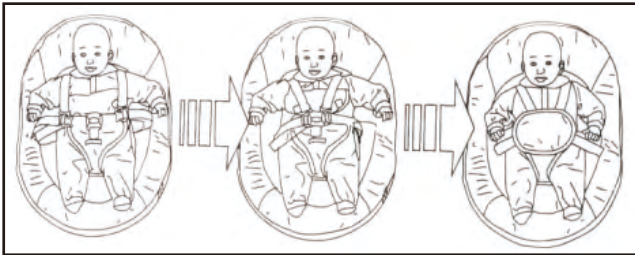

### Adaptor

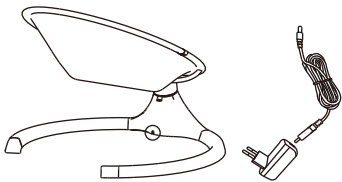 

DC plug into the host machine's DC jack, and USB plug is inserted into the USB jack. At last put the adaptor into 100-240V 50/60Hz AC outlet.

### Functions

- 1, Power switch button: press the button one time and see the indicator light is on ,means power on. Press the button second time and the indicator light is off to shut the power.
- 2, Five swing function mode for choice,and the swing angles are respectively as  $18^{\circ}$  / $21^{\circ}$  / $23^{\circ}$  / $25^{\circ}$  / $31^{\circ}$  ; When you don't press the button of swing program or the button of timer,the indicator light will keep twinkling.
- 3, Timer: press the button of timer for the first time to set 8 mins swing, press the second time to set 15 mins swing and press the third time to set 30 mins swing.
- 4, Music/Volume: Press the button one time and music begins to play. Press the button twice to play next song. Long press to adjust the proper volume. Press and hold the button longer to turn off the music.
- 5, The bluetooth function: open your phone's bluetooth and search the 'BT-baby 'for matching. When you hear the tone mean it connects successfully, and you can play music right now. You can adjust the volume by your phone also.
- 6, This product could be charging by adaptor /power bank .