 


User's Guide

Product Instruction

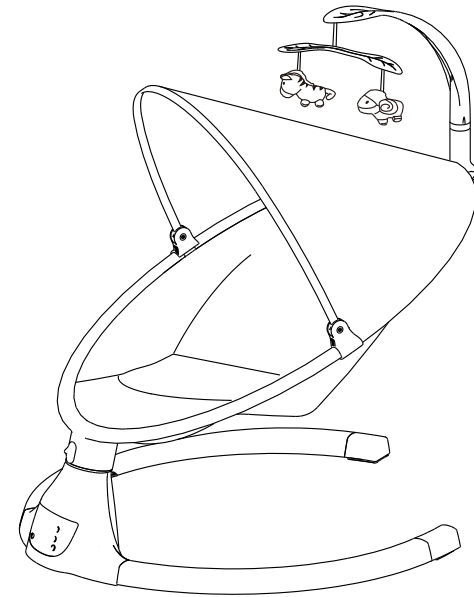

BB007A

Before installing and using, please follow the instruction carefully,
otherwise it may effect the child's safe.


Parts Instruction

Please check the quantity of items;
please contact the shop if there are any missing parts.

No.	Item	Quantity	No.	Item	Quantity
A	Base frame	1	B	Seat frame	1
C	Canopy	optional	D	Toy bar	optional
Accessory optional					

Product Detail

 Refer to the actual product.

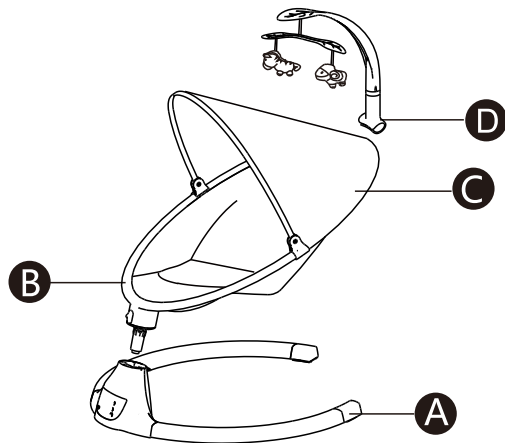

Matters Need Attention

1. Always secure infant in restraint system provided.
2. Never leave infant unattended in swing.
3. Applicable age: 0-6 months old.
4. The maximum weight for this product is 15 KG.
5. DO NOT move or lift the product by handling the toy stick.
6. DO NOT move or lift the product when the child sitting on it.
7. DO NOT hang other items from the toy stick except the matched toys.
8. DO NOT place the product at a high position (table top, stairs or other high position from the ground)in case of fall risk.
9. It' s dangerous to use this product on an elevated surface.
10. DO NOT use the product on a soft matter (sofa, bed) to avoid falling and cause asphyxiating.
11. If the child is able to sit up unassisted, please use this product under adult supervision.
12. This product is not classified as toy.
13. DO NOT open or fold the product until the child left it.
14. This product can be used for a long time.
15. When the music player connected, please make sure setting the volume in a low voice initially.
16. DO NOT use if any parts are missing or broken. Never substitute parts.
17. Keep the product away from fire.
18. Discontinue use of swing when infant attempts to climb out (Approximately 9 months).

PRODUCT CATALOG

1.Catalog	1
2.Knowing Product	2
Product Specification	2
Product Detail	3
Assembling Detail	4
Safety Instructions	5
3.Using Product	6
Control Function	7
Panel Function	7
4.Matters Need Attention	8

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Product Feature

This product has been certificated by EN71-1 EN71-2 EN71-3 .















Product Specification

Product Name	Baby swing chair
Model Number	BB007
Input Voltage	100-240V/50/60HZ 0.3A
Output Voltage	5-6V \leq 1000 mA
Applicable age	0-6 months old
Standard	EN71-1 EN71-2 EN71-3
Warning	Do not use the non-matching adaptor

WARNING

- 1) Do not charge with non-rechargeable lithium batteries.
- 2) Practical in adult supervision.
- 3) When charging with adaptor, please take out the batteries.
- 4) Do not use with mixed batteries
- 5) The battery should be placed in the correct polarity.
- 6) The exhausted battery should be removed from the product.
- 7) No short circuit of power terminals.
- 8) Forbid to use the non-matching adaptor ,the input voltage of adaptor is 100-240V/50/60HZ 0.3A
- 9) Keep the adaptor away from child while using.
- 10) Check the adaptor, accessory at regular preriod. If you find any damages of parts please stop using.

Using Instruction

- 1, Power switch button: Touch the  one time and see the indicator light is on, means power on. Press the button second time and the indicator light is off to shut the power.
- 2,  Five swing speeds for choice, the indicator lights stand for the speed gears. And the swing angles are respectively as 18°/21°/23°/25°/31°.
Notice: The indicator light will show  and the swing stop automatically when the motor is stuck.
- 3, Timer: Touch the button of  for the first time to set 8 mins swing, touch the second time to set 15 mins swing and the third time to set 30 mins swing.
The indicator light will show respectively as  /  / 
- 4, This product can support a U disk inserted to play music.
Insert the U disk and then touch the  function key, when the pattern light then it can play the music from U disk.
- 5, Music: 1. Touch  to play music in-built.
2. Touch & hold  for two seconds to play next song.
3. When the U disk is pulled out, touch  to play music in-built.
- 6, Press  to increase the volume, press  to turn down the volume.
- 7, Bluetooth connecting: Turn on the bluetooth of cell phone and connect with "BT-BABY", when the  pattern lights then the swing can play the music from bluetooth.
- 8, If the swing shakes terribly, please check the safety lock and place the swing to the flat ground.

Cleaning & Maintenance

Seat pad: Dismantle the seat and wash it by machine/ hand in cool water

 
Toy bar & toys: Scrub with a damp cloth and soft soap, then dry them in the air. DO NOT WASH THEM IN WATER

Fabric: Lint


Filling: Fireproof hard resin cotton. WARNING! DO NOT BLEACH, DEHYDRATION, DRYING!

Assembling Detail


Put the frame in the base, option ① swing+toy bar, ② swing+canopy

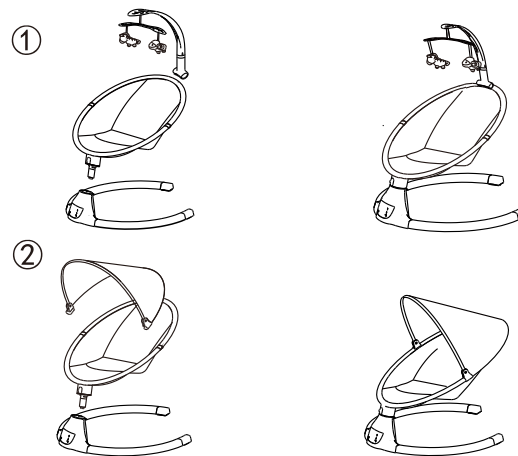

 Pull out the metal plate and pull up the seat when disassembling.

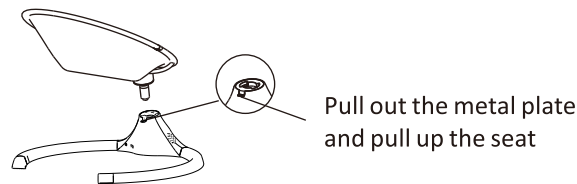

Safety Instruction

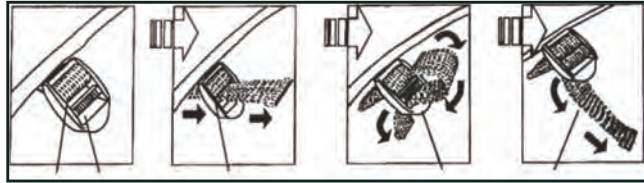 


Top hole Bottom hole Through the tape form the top hole first and then through the bottom hole, harden the tape

Put the baby into the seat ,buckle up the seat belts



 Adaptor

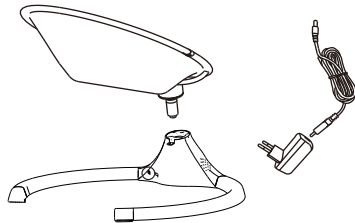

DC plug into the host machine's DC jack, and USB plug is inserted into the USB jack. At last put the adaptor into 100-240V 50/60HZ 0.3A AC outlet.

DO NOT USE OTHER ADAPTOR

Remote control

- Power on/off
- Time setting
- Built-in music /Blue tooth music
- Volume up
- Volume down
- 1 2 3 4 5 Five swing mode
- Play/pause
- Previous song
- Next song
- Sleep mode
- Stop



Panel

- Power On/Off
- Blue tooth Mode
- Swing Gear
- USB Mode
- Time Setting(8/15/30)
- Volume +/-
- Music In-Built
- Music Switch
- Over Input Voltage Warning

Remote Control Receiver Module

Batteries install

