


1B2230200011

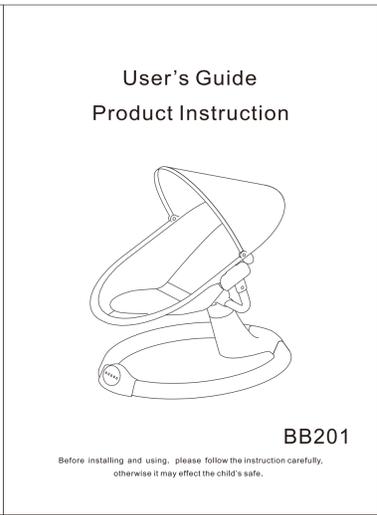

PRODUCT CATALOGUE

1. Catalogue..... 1

2. Specification..... 2

3. Matters Need Attention..... 3

4. Knowing Product..... 4

Product Detail..... 4

Assembling Detail..... 5~6

Safety Instructions..... 7

5. Using Product..... 8

Remote Control Instruction..... 8

Panel Introduction..... 8

Functions..... 9

Basic maintenance..... 10

Using Product

Basic Maintenance:

No.	Possible problems	Solutions
1	The music and shaking stop all of a sudden.	Maybe the power plug is loose
2	It doesn't work at startup	Check if the power supply is plugged in properly
3	If won't use for a long time	Please unplug the power supply
4	Serious shaking	Please check whether the rocking chair is flat and the positioning switch is locked

statement:
changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Using Product

Function:

(1) When the power is turned on, the indicator lamp will take the form of a running lamp.
(2) Switch swing: there are 5 kinds of swing range increase from stop: 1, 2, 3, 4, 5. Corresponding swing range: 0° 18° 21° 23° 25° 31° . It will stop when the swing is stuck.
(3) Press to play the built-in music and then press to music pause.
(4) Power on/off: 1. When the power is turned on, the indicator lights on. 2. Press the button, the light goes out and power off.
(5) Volume/Next: 1. Press lightly to increase the volume. Volume is added or subtracted in cycles. 2. Switch to next song by a long press.
(6) Play with USB/bluetooth:
1. Insert U disk, the system automatically switches to music on the U disk.
2. Turn on the bluetooth and connects with mobile phone "BT_BABY", play the songs when the connection is successful.
Priority Play with: bluetooth > USB-build-in music
(7) Timer setting: The indicator lamp will take the form of a running lamp.
1. press first time, first light on and swing of 8 mins,
2. press second time, second light on and swing of 15 mins,
3. press third time, third light on and swing of 30 mins.
(8) If the rocking chair shakes seriously, please check whether the rocking chair is flat and whether the positioning switch is locked.

Positioning switch
1. Press down to lock the swing;
2. Push up to swing left and right.

Specification

Product Specification:

Product name	Baby Swing Chair
Model Number	BB201
Input Voltage	100-240V~50/60Hz 0.3A
Output Voltage	DC5V, 1A
Applicable Age	0-9 months
Standard	ASTM F963-17 ASTM F2088-15
Warning	Do not use the non-matching adaptor

WARNING

1) Pratical in adult supervision.
2) No short circuit of power terminals.
3) Forbid to use the non-matching adaptor, the input voltage of adaptor is 100-240V/50/60Hz 0.3A
4) Keep the adaptor away from child while using.
5) Check the adaptor, accessory at regular preperiod. If you find any damage of parts, please stop using.
6) Old and new batteries should not be mixed.
7) Alkaline, standard carbon-zinc, and rechargeable nickel-cadmium batteries should not be mixed.
8) Remove batteries before putting swing into storage for a prolonged period of time

WARNING

- Always use the seat belt provided.
- Never leave infant unattended in swing.
- DO NOT move or lift the product by handling the toy stick.
- DO NOT move or lift the product when the child sitting on it.
- DO NOT hang other items from the toy stick except the matched toys.
- DO NOT place the product at a high position (table top, stairs or other high position from the ground) in case of fall risk.
- It's dangerous to use this product on an elevated surface.
- DO NOT use the product on a soft matter (sofa, bed) to avoid falling and cause asphyxiating.
- This product is not classified as toy.
- DO NOT open or fold the product until the child left it.
- This product can be used for a long time.
- When the music player connected, please make sure setting the volume in a low voice initially.
- DO NOT use if any parts are missing or broken. Never substitute parts.
- Keep the product away from fire.
- Discontinue use of swing when child attempts to climb out. (approximately 9 months).
- Discontinue use of cradle swing when infant can roll over or push up on hands and knees.

Using Product

Remote Control Instruction:

	Power on/off		Play/pause
	Time setting		Previous
	Switch music		Next
	Volume up		Sleep mode
	Volume down		Stop
	different swing ranges		

Panel:

	Switch swing range
	Play/Pause
	Power on/off
	Volume/Next
	Timer setting (8/15/30mins)

Batteries Installation

- Loosen the screws and remove the battery cover.
- Remove the battery module. Insert 4 PCS AA batteries in right pole as direct identification.
- Put the battery module in swing, the IP symbol must towards upward side.
- Replace the battery cover and tighten the screws

Knowing Product

Safety Instruction:

The belt goes through the top hole and then the bottom hole, fasten the belt.

Baby sits into the swing chair, buckle up the seat belts.

Power Supply:

- The DC plug can be plugged into an AC power supply of 100-240V~50-60Hz, 0.3A.
- The DC plug can be connected to the charging treasure to supply power;
- Adapter output parameters: voltage is 5V, current is 1A. It is forbidden to use mismatched adapter.

Knowing Product

Parts Instruction:

Please check the quantity of all items; Please contact us if there is any missing part.

No.	Item	Quantity
A	Base Frame	1
B	Seat Frame	1
C	Awning	1

Accessories: Manual *1, Adaptor *1, DC *1, Remote control *1, toy*2

Product Details:
(Please refer to the actual product)

Knowing Product

Wash And Clean:

Cushion: Remove the cushion, wash by hand in cold water.
Frame and toy: Wipe and clean using a mild cleaning solution and a damp cloth. Do not immerse this product.

Fabric: flannelette
Filler: Fireproof/hard cotton
WARNING: Do not bleach, dehydrate or drying over a fire.

Assembling Detail:

- Swing and awning: turn back the button, insert seat frame into the base.
- Press forcefully to the left and right sides until the base is fully open. Insert the awning into seat frame. Match the hole and bulge.
- Install the toys: fix to the magic sticks on awning.
- Pull out the metal sheet and take off the seat frame from back.

Knowing Product

Solutions For Installation Failure:

Turn gently in these two directions, find the right position and press hard to install in place.

The bearing direction may be opposite when leaving factory and need to be corrected with pliers to install in place.

借 (通)用件登记

描 图

校 描

旧底图总号

签 字

日 期

佛山市熊宝宝科技有限公司										产品机型	BB201
										名称	通用英文说明书
标记	处数	更改文件号	签 字	日期	阶段标记		版本	重量	比例	材料	80g双胶纸
设计					S	A	B	A1	1:1	图号	1B2230200011
校对					共 张			第 张			
审核					标准		批准				
工艺					日期						