 


Remove the earbuds

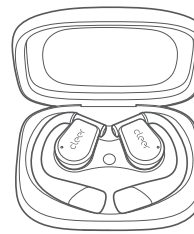

Remove the earbuds



 
Correct fitting position

Fitting

Rotate the earhook hinge and slide the earhook behind your ear until it rests gently over the top of your ear.



Function introduction

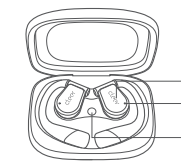

- Touch panel of earbud
- LED indicator of earbud
- Multi Function Button (MFB) button of charging case



Cleer+ App

The Cleer+ app gives you a more customized control to your ARC 3. Download the Cleer+ app from the App Store (for iOS devices) or Google Play (for Android devices). With Cleer+ app, you can do,

- Motion control settings.
- Customized operation settings.
- Sedentary reminder.
- Earbud loss reminder.
- Firmware upgrade.

* These settings are saved to your ARC 3, so you can enjoy with any playback device connected to your ARC 3.



 
Power on/off



1. ARC 3 will auto-power on when you open the charging case.



2. ARC 3 will auto-power off when you replace the earbuds in the case and close the lid.

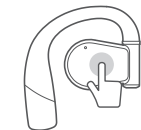

3. Without the charging case:
- Tap either left or right earbud 3 times and hold on the 3rd tap for 2 seconds, both earbuds will power off at the same time, and you will also hear the voice prompt "Power off".
 - Tap either left or right earbud 3 times and hold on the 3rd tap for 2 seconds, the earbud will power on and you will hear the voice prompt "Power on". The earbuds can only be powered on one by one.

4. ARC 3 will automatically turn off when there is no use for 15 minutes. To change this time, go into Settings on the Cleer + App.

Bluetooth pairing



1. When both earbuds are in the charging case, long press the MFB button on the case until the LEDs of the earbuds start flashing alternately between red and white.

2. If the earbuds are out of the charging case, just tap either left or right earbud 5 times to put the earbuds into the pairing mode.



3. Select "Cleer ARC 3" in the pairing list on your mobile device.

- * When you open the charging case for the first time, ARC 3 will be in pairing mode automatically.
- ** When you place the earbuds back to the charging case, they will disconnect automatically.
- *** The earbuds will connect to the last connected device when opening the charging case.
- **** The earbuds can go into the pairing mode by tapping 5 times, and they can connect to a new device. The earbuds are now connecting with 2 devices at the same time.
- ***** When the earbuds are beyond Bluetooth pairing distance, they will be disconnected. If they are back within 5 minutes, they will automatically restore the connection, otherwise you need to connect manually.

Earbuds control (Playback and call)

 
* You can customize the touch on Cleer+ App by yourself.



- Single tap x1** ● Music: Play/Pause
- Double tap x2** ●● Music: Next track
Call: Pick up/hang up call
- Triple tap x3** ●●● Music: Previous track
- Tap and hold** — Trigger default voice assistant
Call: Reject call


Head motion control (Music/Call)

* This function is deactivated by default. Activate it in Cleer+ App.

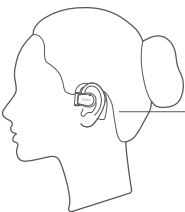

- Nod x2** ● Call: Pick up
- Shake head x2** ●● Call: Hang up/Reject
- Turn left**
(Turn head to the left and then turn back) ●● Music: Previous track
- Turn right**
(Turn head to the right and then turn back) ●● Music: Next track

 Earbuds control (Volume)

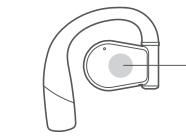

- Right earbud**
- Double tap x2**
hold on 2nd tap ●● Volume up continuously
- Left earbud**
- Double tap x2**
hold on 2nd tap ●● Volume down continuously

LED behavior



- Not connected to any device
- ○ ○ Connected to a device
- Pairing mode
- Battery below 10%
- Charging
- LED OFF Battery fully charged

OWN THE MOMENT

Find this user manual on www.cleeraudio.com

Follow us on social media



@CleerSound



@CleerAudio

