 



⏻ Product maintenance

Cleaning of rolling brush

1. Turn the machine and press the buckle on the rolling brush cover from both ends to remove the rolling brush.

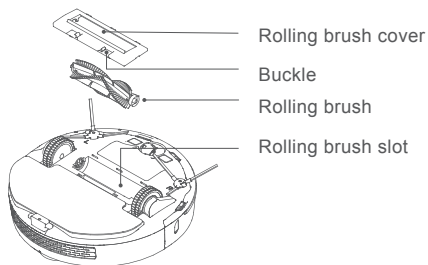

 
2. Clean the windings on the rolling brush with the matching cleaning brush. After cleaning, install the rolling brush and fasten the cover.

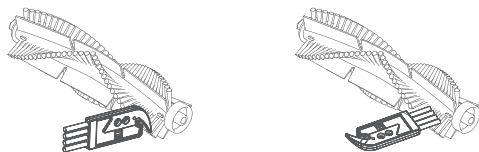

* It is recommended to clean the rolling brush regularly and replace it timely as the wear situation.

Cleaning of side brush

 1. Turn the machine, lift the left and right brushes up and pull them out.
2. Clean the windings on the left and right brushes and their bearings.
3. Align the side brush with its bearing on the machine and press firmly to install the left and right brushes.

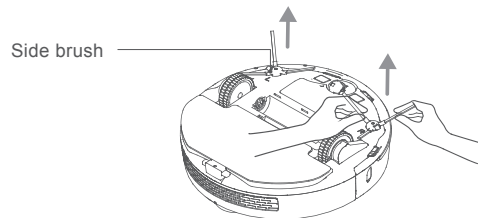

*It is recommended to clean the side brush regularly;

*If the side brush is damaged, please pull out the damaged side brush directly, and align the new side brush with its bearing and press firmly.