

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the audio cable (not included) to connect from the device's "Line Out" to the "Aux In" of this device to enjoy playing music.

Under any playing mode, When you use the audio cable to connect the device, it will auto switch to the AUX mode.

Under AUX mode, all functions can be controlled by external device.

Battery Charging:

1. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other adapter with 5V output, the red charging indicator keep lighting.

2. Charge time should be 3-5 hours. When charging full, the indicator light will switch off.

3. In order to prolong the life of battery, please do not charge more than 8 hours.

Note:

1. The playtime depends on how hard the unit is working. Heavy, loud, bass music will use more energy.

2. The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in the fire.

3. When cleaning the product, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Recording function:

1. Make sure the unit is switched on, and there is a USB memory stick or TF card inserted in the slot.

2. Plug and test the microphone upon plugging. The device is ready to record once your voice is audible from the speaker.

3. Press the button 'REC' on the remote controller to start/stop recording, you are freely to rec what you want.

Playing music from USB disk and Micro SD card:

1. Turn the Power button to "ON".

2. Insert USB flash disk or Micro SD card into slot, the music stored will be played automatically.

3. Under playing mode, short press Previous or Next button to select songs you like.

Or press the VOL-/VOL+ button to adjust volume down and up. PLAY/PAUSE to play or pause.

4. Please turn the Power button to "OFF" while without use.

Remark: Under Bluetooth playing mode, insert USB disk or Micro SD card will disconnect the Bluetooth and switch to play the USB disk or Micro SD card. You can press the MODE button to switch to Bluetooth mode again.

How to Use FM Radio:

1. Turn the power button to "ON", press the "MODE" button to FM radio mode.

2. Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.

 
3. Press Previous or Next button to change the stored FM channel.

Under FM radio state, to get a better FM signal, please insert a audio cable (not included) as antenna.

EDISON PROFESSIONAL

SPEAKER

AL-500

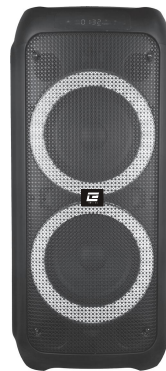

INSTRUCTION MANUAL

For correctly operating, please read this manual carefully before using. We are not responsible for consequence caused by fault or oversight of this manual.

FEATURES :

- Outdoor HIFI Bluetooth Radio
- Output very clear sound and dynamic sound effect
- With A2DP/AVRCP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
- Secure simple pairing for user-friendly operating
- 10 meters operating range
- With USB and Micro TF supporting
- With Line-in function, suitable for PC/MIDTV and other audio device

ACCESSORIES:

 
- Power adapter *1pc
- User manual *1pc
- Remote controller *1pc

SPECIFICATION:

Bluetooth range up to 10 meters
 Speaker: Woofer Size: 8inch*2
 Output: 2500W
 Connections: USB disk, Memory card, Microphone input jack
 Aux-in 3.5mm jack connection


Play time: 5hrs with 80% volume/6hrs with 50% volume
 Recharge power: DC 9V 2A
 Product size: 320(L) * 320(W) * 710(H) mm
 Charge time: 4-5 hours(9V/2A)

INSTRUCTION FOR APPEARANCE AND KEY :

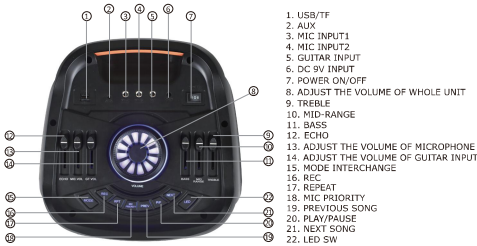

REMOTE FUNCTION DECLARATION:

 1. MUTE: Press this button to mute the unit.
2. Press this button to toggle between the various inputs (AUX, USB, SD, FM, BLUETOOTH).
3. Long press this button to turn on/turn off the voice prompt.
4. Press this button to start recording.
5. Press this button to increase the master volume for the unit.
6. Press this button to pause or play the unit when it is on the mode of USB.
7. When it is on the mode of FM, press this button to auto scan all channels.
8. Long press to change language to Chinese/English for the voice prompt.
9. Press this button to select the previous song/channel.
10. Press this button to reduce the master volume for the unit.
11. Press this button to repeat one/repeat all.
12. Press this button to play the recording.
13. Press this button to select the next song/channel.
14. Press this button to the EQ mode of Normal, Jazz, Rock, Pop, Classical.
15. 0-9, Key number for selecting the certain songs in the USB/SD/TF Card.

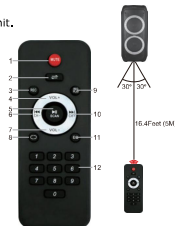

Bluetooth connection:

1. Turn the power button to "ON". In the front panel, press the mode button to launch the Bluetooth application. The system voice of the device will say "Bluetooth mode".
2. Activate Bluetooth of mobile phone and search for device name "PSL500B" then connect it. The system voice says "Bluetooth connected" once connected successfully.
3. Play the music from your mobile phone and enjoy.
4. Press Previous or Next button on the device or on Mobile phone to select songs you like.
5. Press Play/pause button on the device or on Mobile phone to play/pause the music.
6. Use the Bluetooth device to adjust volume up and down. Or press the VOL-/VOL+ button to adjust volume down and up

Limited Warranty

This Limited Product Warranty is provided by BriteLite Enterprises. BriteLite warrants to Customer that the product is free from defects in materials and workmanship under normal use during the Warranty Period of 90 days for parts and 1-year labor. If the product fails to conform to the warranty then BriteLite or its authorized service will either repair or replace any nonconforming product, provided that Customer gives notice of noncompliance within the Warranty Period to BriteLite by emailing or calling 310-363-7110 (Mexico customers can call 015546240251). Please retain the original dated receipt as evidence of proof of purchase.

11661 San Vicente Blvd
 Suite 303 Tel (310)363-7120
 Los Angeles, CA 90049 Fax(310)388-5800

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.