size:280*210mm 105G双铜单色双面印刷+对折

For other compatible music devices or your MP3/MP4 players, use the audio cable (not included) to connect from the device's "Line Out" to the "Aux In" of this device to enjoy playing music.

Under any playing mode, When you use the audio cable to connect the device, it will auto switch to the AUX mode.

Under AUX mode, all functions can be controlled by external device.

Battery Charging:

- 1. Power off the unit, put the provided adapter into the charge slot of unit, the red charging indicator keep lighting.
- 2. Charge time should be $8-10\,\mathrm{hours}$. When charging full, the indicator light will switch off, 3. In order to prolong the life of battery, please do not charge more than 8 hours.

- 1. The playtime depends on how hard the unit is working. Heavy, loud, bass music will use more energy.
- The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in the fire.
- 3. When cleaning the product, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Recording function:

- 1. Make sure the unit is swithed on, and there is a USB memory stick or TF card inserted
- 2. Plug and test the microphone upon plugging. The device is ready to record once your voice is audible from the speaker.
- 3. Press the button 'REC' on the remote controller to start/stop recording, you are freely

Playing music from USB disk and Micro SD card:

- 1.Turn the Power button to "ON".
- 2. Insert USB flash disk or Micro SD card into slot, the music stored will be played automatically.
- 3. Under playing mode, short press Previous or Next button to select songs you like,
- Or press the VOL-/ VOL+ button to adjust volume down and up. PLAY/PAUSE to play or pause. 4. Please turn the Power button to "OFF" while without use.

Remark: Under Bluetooth playing mode, insert USB disk or Micro SD card will disconnect the Bluetooth and switch to play the USB disk or Micro SD card. You can press the MODE button to switch to Bluetooth mode again.

How to Use FM Radio:

- 1. Turn the power button to "ON", press the "MODE" button to FM radio mode.
- 2. Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.
- 3. Press Previous or Next button to change the stored FM channel

Under FM radio state, to get a better FM signal, please insert a audio cable (not included) as antenna.



Bluetooth Speaker STREET SHOCK PRO



INSTRUCTION **MANUAL**

7. PREVIOUS SONG 8. PAUSE/PLAY 9. NEXT SONG

13.POWER ON/OFF

10. MODE(FM/AUX/BLUETOOTH/USB /TF/TWS MODE) 11. DC 20V INPUT 12. EXT DC 12V INPUT

For correctly operating, please read this manual carefully before using. We are not responsible for consequence caused by fault or oversight of this manual.

- Outdoor HIFI Bluetooth Radio
- Output very clear sound and dynamic sound effect
 With A2DP/AVRCP Bluetooth, wireless stream music from any
- Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
- Secure simple pairing for user-friendly operating
- 10 meters operating rangeWith USB and Micro TF supporting
- With Line-in function, suitable for PC'MID'TV and other audio device
 Built-in lithium rechargeable battery 12V 7.5AH

ACCESSORIES:

- Wireless microphone *2pc • Power adapter *1pc
- User manual *1pc • Remote controller *1pc

SPECIFICATION: Bluetooth range

up to 10 meters Woofer Size:10inch*2 Speaker:


Output: 5000W

USB disk, Micro SD card reader, Microphone input jack Connections: Aux-in 3.5mm jack connection, Guitar input jack Built-in rechargeable lithium battery 12V 7.5AH Power supply:

Play time: 5hrs with 50% volume

Recharge power: 340(L) *320(W) * 862(H) mm Product size:

8-10 hours (20V/4A) Charge time:

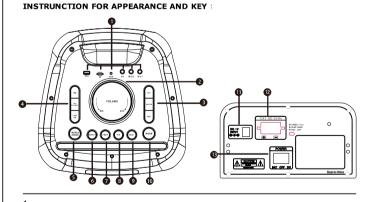

- USB / TF/AUX INPUT GUITAR/MICROPHONE1/MICROPHONE2 INPUT JACK
 MAIN VOLUME/GUITAR VOLUME/ MICROPHONE VOLUME/ ECHO VOLUME

 MIC: short press then adjust volume to control mic volume
- short press again and adjust volume to control mic echo GUITAR: press then adjust volume to control guitar volume
- 4. EQ/MIC PRIORITY/LIGHT SW 5. TREBLE/BASS

REMOTE FUNCTION DECLARATION:

- 1. MUTE/MODE(LINE IN/USB/TF/AUX/BLUETOOTH/FM)
- 3. ECHO+/ECHO-/ EO/ GUITAR VOLUME+/GUITAR VOLUME-4.TREBLE+/TREBLE-5.VOLUME+/VOLUME-/MIC VOLUME+/ MIC VOLUME-/LIGHT SW
- 6.BASS+/BASS-7.PREVIOUS SONG/CHANNEL
- PAUSE/PLAY NEXT SONG/CHANNEL
- 8. MIC PRIORITY/REPEAT/REC/FOLDER

- 1, Turn the power button to "ON". In the front panel, press the mode button to launch the Bluetooth application. The system voice of the device will say "Bluetooth mode".
- $\hbox{2. Activate Blue tooth of mobile phone and search for device name "AL800" then connect } \\$
- it. The system voice says "Bluetooth connected" once connected successfully.
- 3. Play the music from your mobile phone and enjoy.
- $\hbox{4. Press Previous or Next button on the device or on Mobile phone to select songs you like.} \\$
- 5. Press Play/pause button on the device or on Mobile phone to play/pause the music 6. Use the Bluetooth device to adjust volume up and down. Or press the VOL-/ VOL+
- button to adjust volume down and up

TWS FUNCTION:

 $1.\mbox{Turn}$ on two identical speakers you want to pair,please noted they must be the same BT paring anme, both under BT mode. Only need to set one of the two units: 2. Long press "NEXT" button until you hear the system voice bluetooth connected, then

3. Make Bluetooth connection with your mobile phone, play music and enjoy true wireless stereo sound effect.

This Limited Product Warranty is provided by BriteLite Enterprises. BriteLite warrants to Customer that the product is free from defects in materials and workmanship under normal use during the Warranty Period of 90 days for parts and 1-year labor. If the product fails to conform to the warranty then BriteLite or its authorized service will either repair or replace any nonconforming product, provided that Customer gives notice of noncompliance within the Warranty Period to Brite Lite by emailing or calling 310-363-7110 (Mexico customers can call of 155 46240231). Please retain the original dated receipt as evidence of proof of purchase.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement
To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.